 


abode

Electric Clothes Airer Instruction Manual

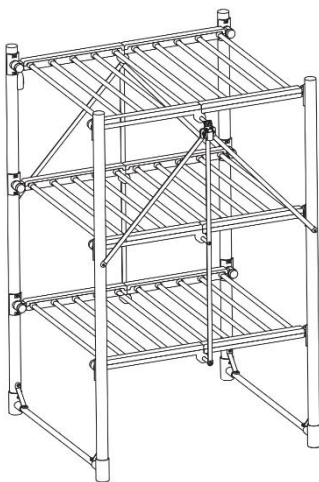

Model number(s):
AECRD2003

IMPORTANT:
RETAIN FOR FUTURE REFERENCE

Contents

Safety Instructions		3-4
Product Overview		5
Usage		6-7
Cleaning & Maintenance		8
Trouble shooting		8
Guarantee		9
Technical specification		10
Connections to the Mains		11

Safety Instructions

Important note:

Please read this booklet before installing and switching on this appliance. The manufacturer assumes no responsibility for incorrect installation and usage as described in this booklet.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- Children should be supervised to ensure that they do not play with the appliance.
- If the supply lead is damaged it must be replaced by a qualified person using the correct lead, available from **0345 209 7461**.
- Packaging material is dangerous to children. Never allow children to play with packaging material.
- Check the appliance for damage after unpacking it. Do not connect the appliance if it has been damaged in transport.
- The appliance can only be used safely if it is correctly installed according to the safety instructions. The installer is responsible for ensuring that the appliance works correctly after installation.
- A defective appliance may cause electric shock. Never switch on a defective appliance. Unplug the appliance from the mains or switch off the circuit breaker in the fuse box. Contact the customer services.
- The appliance is not intended to be operated by means of an external timer or separate remote control system.
- This appliance is intended for domestic use and the household environment only. The appliance is not intended for use outside.

 
abode

Safety Instructions

- Do not tamper with the appliance. If necessary, call our customer helpline.
- Do not switch on the appliance if it is damaged in any way. Contact our customer helpline.
- Do not leave the appliance unattended during operation. The manufacturer is not liable for damage which is caused by improper use or incorrect operation.
- The accessible parts become very hot when in operation. Never touch hot parts. Keep children at a safe distance.
- In the event of a malfunction, turn off the appliance's electricity supply. For repairs, call customer services.
- Ensure that your mains voltage corresponds to that stated on the appliance.
- The appliance should be connected to an earthed main socket.
- Before cleaning, always unplug the appliance from the power supply.
- Repairs can only be undertaken by a competent qualified electrician.
- This appliance is intended only for drying textiles washed in water.

abode

Product Overview

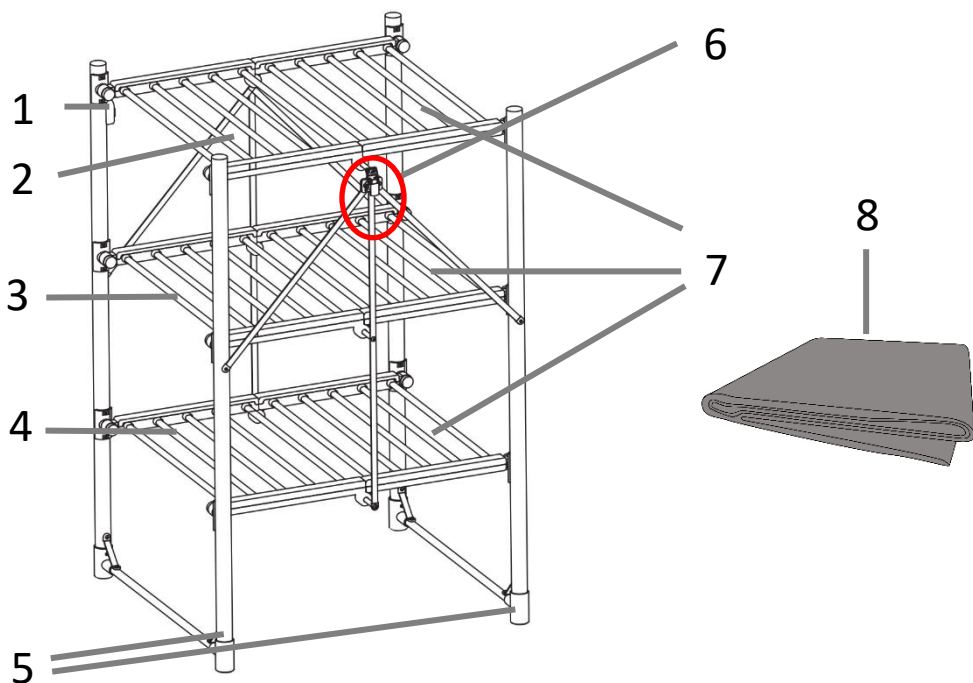

- | | | | |
|----|--------------|----|---------------------|
| 1. | Power switch | 5. | Legs |
| 2. | Upper shelf | 6. | Arm & locking clips |
| 3. | Middle shelf | 7. | Drying poles |
| 4. | Lower shelf | 8. | Cover |

Unit & Spare Parts

If any of the above parts are missing please contact the customer service team on **0345 209 7461**.

 
abode

Usage


Note: When opening/unfolding and closing/folding the clothes airer then please be careful to not trap your fingers or hands.

To use the clothes airer please follow the below steps:

1. Unfold the clothes airer so it is slightly open (approximately 30°), ensuring the legs are stable, the clothes airer is fully upright and placed on a stable floor.

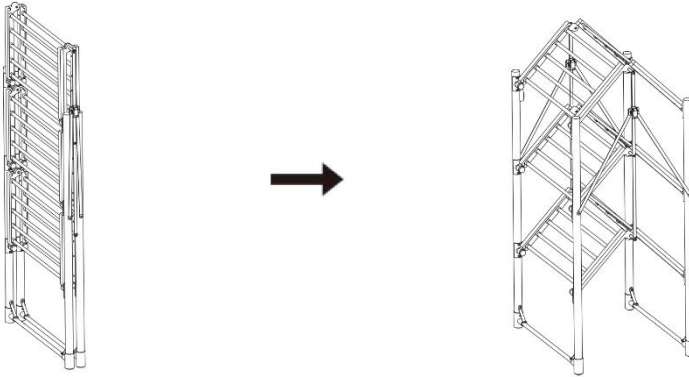

 2. Fully unfold the airer and ensure it is fully open/horizontal and the arms are fully extended and all the clips are locked. Be careful to not trap your fingers or hands.

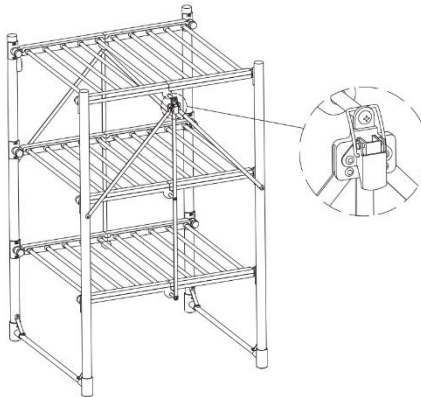


abode

Usage

Note: When opening/unfolding and closing/folding the clothes airer then please be careful to not trap your fingers or hands.

3. Plug the appliance into an earthed mains socket. Locate the power switch which is on the side of the unit and press the switch to the ON position, the light will illuminate. After a short period of time (approximately 5-10 mins) the electric clothes rack will reach its operation temperature. Put the laundry on the airer as required and if required place the cover over the airer and the clothes (by using the cover the laundry should dry faster).

Max load (kg)	Total – 30kg Single layer – 10kg
---------------	-------------------------------------

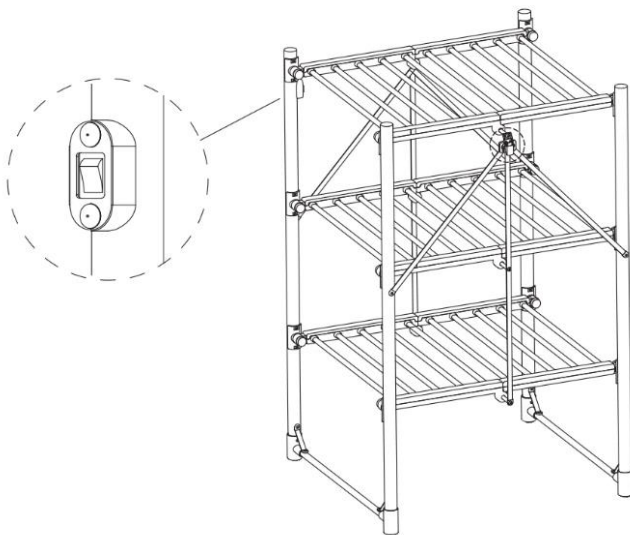 

4. Switch off after use. Allow to cool down before closing/unfolding. Be careful to not trap your fingers or hands.

abode

Cleaning and Maintenance:

How to clean:

- Clean the surface of each pole with a warm damp cloth and allow to dry.

Trouble Shooting:

Problem	Solution
The appliance doesn't work	Check that the appliance is switched on.
	Check that there has not been a power cut.
	Check that the plug is not faulty.
	Check that the fuse has not blown.
	Check that the voltage is correct for the appliance.

abode

Guarantee

This product is guaranteed for **12 months** from the date of the original purchase. If any defect arises due to faulty materials or workmanship, the faulty product must be returned to the place of purchase. Refund or replacement is at the discretion of the retailer.

The following conditions apply:

- The product must be returned to the retailer with the original proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide and any other instructions for use which are supplied.
- It must be used for domestic purposes only and for its intended use.
- This warranty does not cover wear and tear, damage, misuse or consumable parts.

This does not affect your statutory rights.

Customer Service

Region	Contact	Website
UK & Northern Ireland	0345 209 7461	www.thisabode.co.uk
Ireland	1 800 938982	
Rest of Europe	europe@productcaregroup.com	



Technical Specification

Model number	AECD2003
Rated Voltage	220V – 240V ~ 50Hz
Wattage	325W
IP rating	IP21
Temperature range	45 - 55°C
Max load (kg)	Total – 30kg Single layer – 10kg
Unfolded Dimensions (H x W x D) (CMS)	110cm x 66cm x 68cm
Folded Dimensions (H x W x D) (CMS)	144cm x 64cm x 8.5cm

ENERGY CONSUMPTION

Product information for power consumption and maximum time to reach applicable low power mode

Off mode	Power Consumption (Off Mode)	0.0W
	Setting and the maximum time need to reach the applicable low power condition	At once after the switch was turned off
Standby mode	Power Consumption (Standby)	Not applicable
	Setting and the maximum time needed to reach the applicable low power condition	The appliance does not incorporate a standby mode

abode

Connections to the mains

 
This appliance is designed to operate from a mains supply of 220-240V~50Hz.

Check that the voltage marked on the product corresponds with your supply voltage.

How to change the fuse

1. Slot the end of a screwdriver into the recess in the fuse holder of the plug.
2. Pull the fuse holder upwards until free of the plug and slide the fuse out.
3. Replace the fuse and replace fuse holder, pushing down until locked into place.


Important: Only ever use a 5 amp fuse.

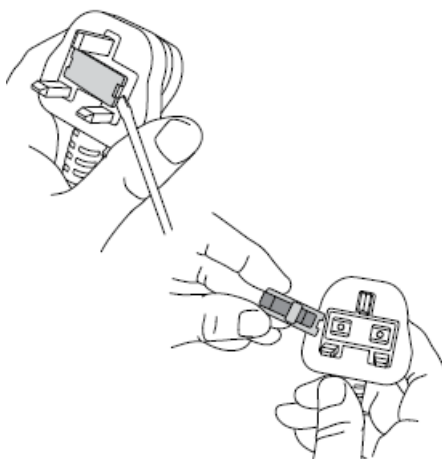

abode

abode

 Product Care Trading Ltd, Unit 1, Green Bank Business Park, Swan Lane,
Hindley Green, Wigan, WN2 4AY, United Kingdom / Product Care (Ireland)
Ltd, Unit 3D North Point House, North Point Business Park, New Mallow
Road, Cork, T23 AT2P, Ireland.

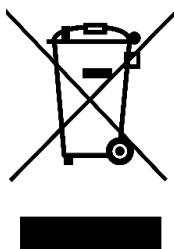

The 'wheellie bin' symbol is known as the 'Crossed-out wheellie bin Symbol'.

When this symbol is marked on a product/batteries, it means that the product/batteries should not be disposed of with your general household waste. Only discard electrical/electronic/battery items in separate collection schemes, which cater for the recovery and recycling of materials contained within. Your co-operation is vital to ensure the success of these schemes and for the protection of the environment. For your nearest disposal facility, visit www.recycle-more.co.uk or ask in store for details.

SEDEX – Connecting businesses and their global suppliers to share ethical data and enabling improvement in ethical performance. Visit www.sedex.org.uk for further information.

We reserve the right, due to possible changes to design, to alter the instruction manual without prior notice.