




Russell Hobbs

Operating Manual

10 Speed Bladeless Fan

 RHBLDL12

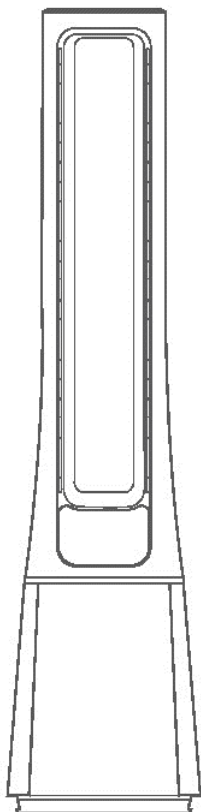

**REGISTER TODAY
FOR YOUR FREE
ADDITIONAL YEAR
GUARANTEE**

GUARANTEE

At Russell Hobbs, we take all our customer feedback seriously.

Feel free to contact our Product Care Team, on **0345 209 7461** who will be more than happy to assist you.

This product is guaranteed for 12 months from the date of the original purchase. If any defect arises due to faulty materials or workmanship, the faulty product must be returned to the place of purchase.

Refund or replacement is at the discretion of the retailer.

The following conditions apply:

- The product must be returned to the retailer with the original proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide and any other instructions for use which are supplied.
- It must be used for domestic purposes only and for its intended use.
- This guarantee does not cover wear and tear, damage, misuse, or consumable parts.
- This does not affect your statutory rights.

RUSSELL HOBBS CONTACT DETAILS

Website: mda.russellhobbs.com

Telephone: 0345 209 7461

Address: Product Care, Green Bank Business Park,
Hindley Green, Wigan, WN2 4AY

Note your serial number below for future reference.



*Image for
illustration
purposes only*

REGISTER ONLINE

Visit our website to register your full parts and labour guarantee online.

mda.russellhobbs.com

REGISTER BY PHONE

Call our friendly Product Care team on the number below.

0345 209 7461

IMPORTANT SAFETY INSTRUCTIONS

- It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to electrical parts.
- Do not use with a damaged cord or plug. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- This product is intended for household use only.
- Do not use outdoors.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should not play with the appliance. Cleaning and user maintenance should not be made by children without supervision.
- Do not operate this appliance for anything other than its intended use.
- Do not immerse whole unit in water or other liquids for cleaning.
- Unplug from outlet when not in use. Do not leave unattended while plugged in.
- Do not use if it has been dropped, damaged, left outdoors or dropped into water.

IMPORTANT SAFETY INSTRUCTIONS

- Keep the appliance away from water; do not allow it to get wet. If unit is wet, do not plug unit into wall socket or turn unit on.
- Do not handle the appliance with wet hands.
- Do not pull or carry by cord, use cord as a handle, close door on cord, pull cord around sharp corners or edges, or expose cord to heated surfaces. Do not unplug by pulling on cord.
- To protect against electrical shock do not immerse cord, plug, or appliance in water or other liquid.
- Unplug from the mains outlet when not in use, before putting on and taking off parts, and before cleaning.
- Only use the unit when fully assembled.
- Never place your fingers or other objects into any part of the appliance. Be aware that loose clothing or hair may become trapped in the appliance if improperly used.
- Before use, ensure that all the air vents of the appliance are clear and there is no restriction of air flow.
- Caution: Appliance may disturb ashes in an open fire. Always avoid directing the appliance toward naked flames.
- Do not remove the rotor guard once assembled.
- **WARNING: Only the power adaptor supplied with the unit can be used with the appliance.**

BATTERY WARNINGS

This appliance comes with two alkaline battery fitted into the remote.

- Incorrect use of batteries may result in fire, explosion, leakage of dangerous substances, or other hazards.
- Do not throw batteries into the fire and do not expose them to high temperatures.
- Do not open, deform or short-circuit the batteries, or the contained chemicals can leak out of them.
- Do not try to recharge batteries. Recharging is only allowed for batteries which are marked as “rechargeable”. There is a danger of explosion!
- Regularly check the batteries as leaking chemicals can cause heavy damage to the device. When dealing with damaged or leaking batteries, exercise a particular caution.
- Risk of chemical burns! Wear protective gloves.
- Chemicals escaping from a battery can cause skin irritation.
- In case of contact with skin, rinse with plenty of water.
- In case of contact with eyes, do not rub your eyes, but rinse with water and immediately visit a doctor.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- Different types of batteries or accumulators as well as new and old batteries must not be used together.

BATTERY WARNINGS

- When inserting the battery, pay special attention to the correct polarity. Wrong polarity can cause risk of bursting.
- Remove the batteries from the unit if you are not going to use it for a long time or if you want to store it.
- Insert the batteries according to the polarity.
- Do not allow children to replace batteries without supervision by an adult.
- Always choose the right size and the right battery type for the intended use.
- Clean the battery contacts and the contacts of the equipment before installing the batteries.
- Remove used up batteries immediately.
- Do not dismantle the batteries.
- If the battery compartment does not close securely, do not use the remote control anymore and keep it away from children.
- Please avoid extreme conditions and temperatures which can adversely affect the batteries, e.g. placing them on radiators/direct solar.
- The connection terminals must not be short-circuited.
- Please dispose of or recycle the remote-control batteries according to local government guidelines.



CAUTION: Batteries are a chemical burn and choking hazard. Keep batteries away from children.

REPLACING THE BATTERY

 
This appliance comes with 2 AAA (1.5V) batteries which are to be fitted into the remote control.



**CAUTION: Batteries are a chemical burn and choking hazard.
Keep batteries away from children.**


- Ensure that the battery compartment is always completely secure. If the battery compartment does not close securely, stop using the remote, remove the batteries, and keep it away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention. Dispose of cells properly and keep away from children. Even used cells may cause injury.
- Please dispose of or recycle the remote control batteries according to municipal or provincial laws.
- Do not throw batteries into the fire and do not expose them to high temperatures.
- Do not try to recharge the batteries.
- When inserting the battery, pay special attention to the correct polarity.
- Remove the batteries from the unit if you are not going to use it for a long time or if you want to store it.

To insert the batteries into the remote control or replace the batteries, follow the instructions below:

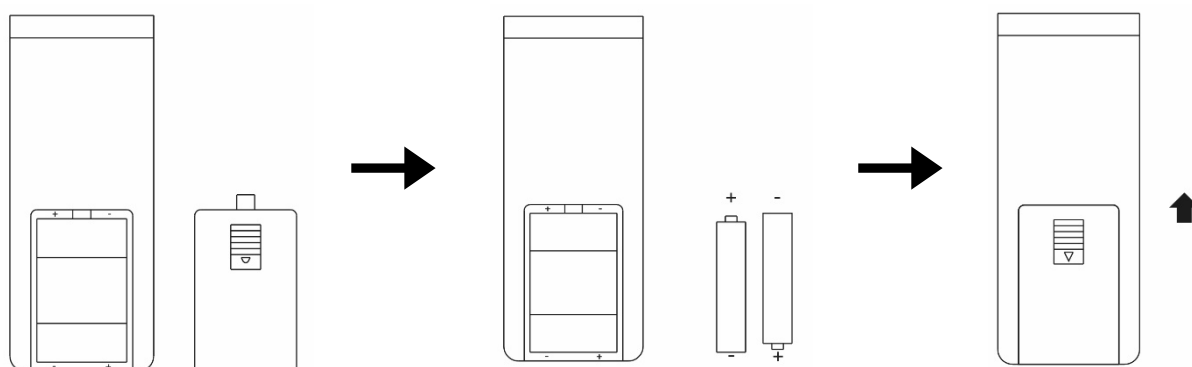


1. Remove the cover from the back of the remote.
2. Insert 2 AAA (1.5V) batteries as shown above.
3. Replace the cover onto the back of the remote.

 PARTS

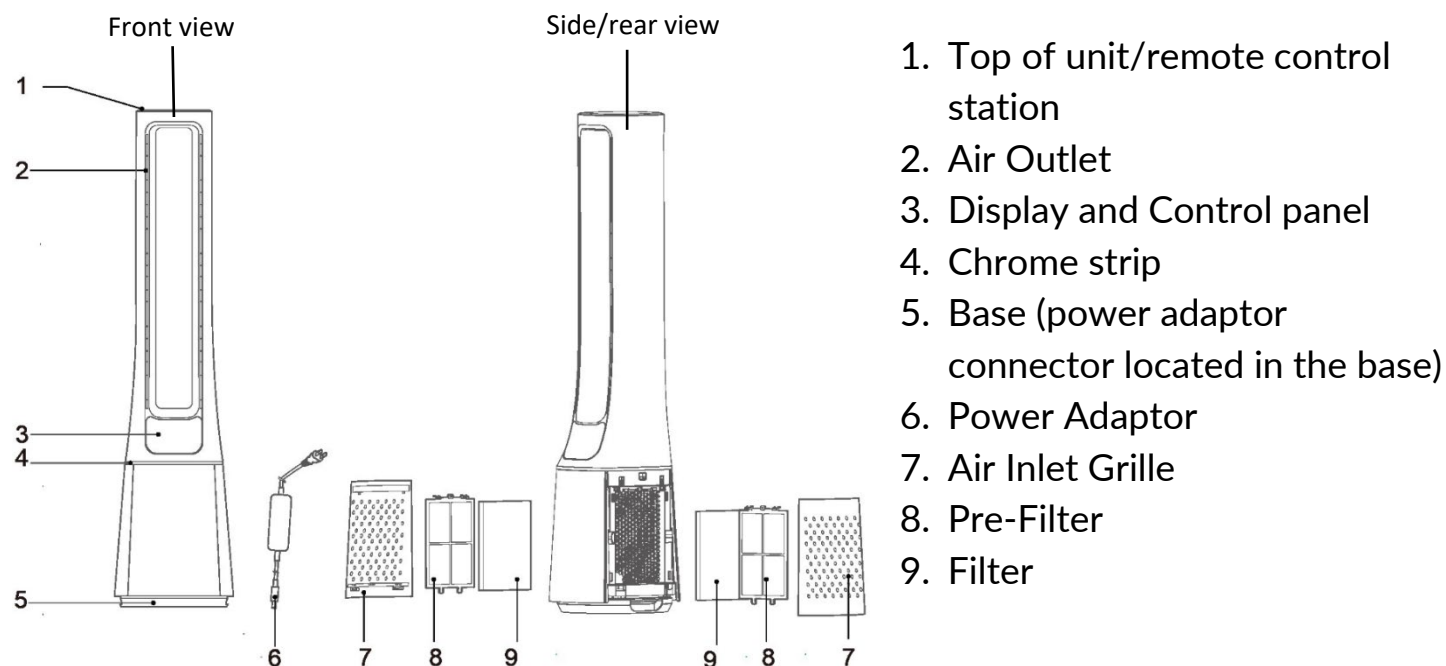


PRODUCT SETUP

 
1. Remove the air inlet grille by carefully pulling the grille at the bottom.

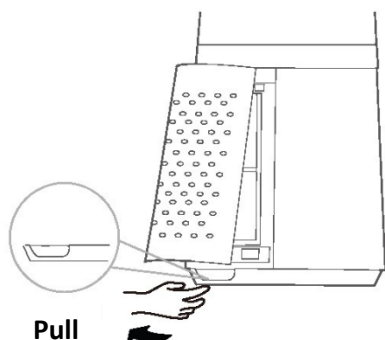

 
2. Remove the pre-filter by pressing the raised parts on each side and pulling outward.

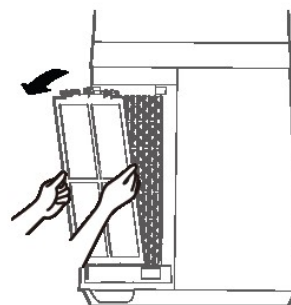

 3. Remove the filter from its location and remove the protective film from the filter.

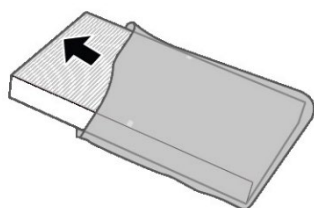


 4. Reinstall the filter.

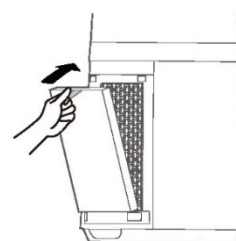


PRODUCT SETUP

 
5. Reinsert the pre-filter by inserting the slots at the bottom of the pre-filter into the slots in the opening and push the pre-filter into the slots at the top of the opening.

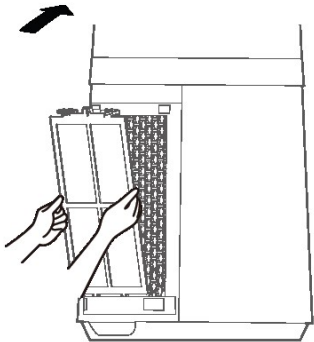

 6. Install the air inlet grille by aligning the two upper buckles with the whole in the opening and press tightly. Then press the lower part of air inlet grille at either side to insert the two lower buckles.

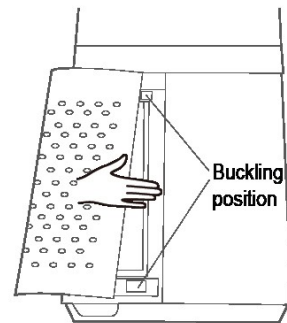

 7. Install the power adaptor to the unit

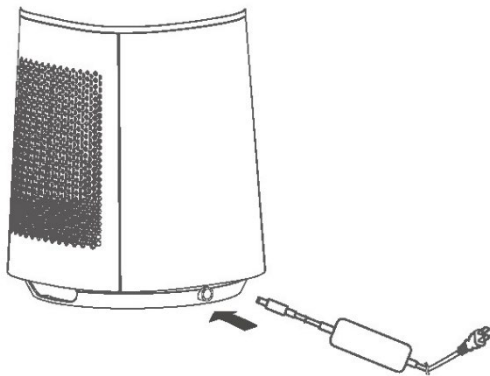

NOTE

It is recommended to clean the filter once every two weeks and replace it once every six months. This can be adjusted dependent on environment and usage.

CONTROL AND DISPLAY



	Power Button	Press to turn the machine on and off.
	Mode	Press to circulate between Normal, Ionised Air, Sleep and Smart.
	Oscillation	Press to start and stop oscillation.
	Fan Speed	Press to circulate between the fan speeds of 1 to 10.
	Timer	When the power is on, you can schedule to shut off the fan, or when in standby mode you can schedule to turn on the fan. To set press the timer button and the display will show 0h, press it again and it will show 1h, continue to press the timer button until the required time is displayed. Time range is 1 to 12 hours, 0 indicates cancellation.
	Filter Reminder	When this icon is on and remains on, replace the filter.
	Smart mode	When this icon is lit, the fan is in Smart mode, and will automatically adjust in line with changes to the room temperature. The temperature of the room will be shown.
	Sleep mode	When this icon is lit, the fan is in Sleep mode. There are 3 levels in sleep mode, 1, 2 and 3, and these can be adjusted by using the fan speed button.
	Number Display	This will display the fan speed or the timer setting. In Smart mode it will display the temperature.
	Ionised Air	Ionised Air mode.

ADDITIONAL FEATURES

Forced Shutdown

- After 15 hours of continuous operation and without any intervention, the fan will shut down automatically.

 
 
Intelligent Memory

- When turning on the fan, it will resume in the last selected mode prior to shutdown (the timing function will not be resumed).

Auto Screen Sleep Mode

- The screen will turn off after 30 seconds of inactivity. In sleep mode, the power button will turn off the fan. Any other button will restore the screen.

REMOTE CONTROL

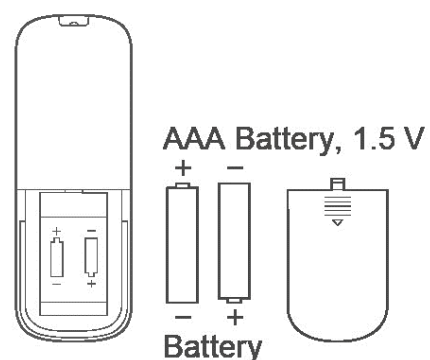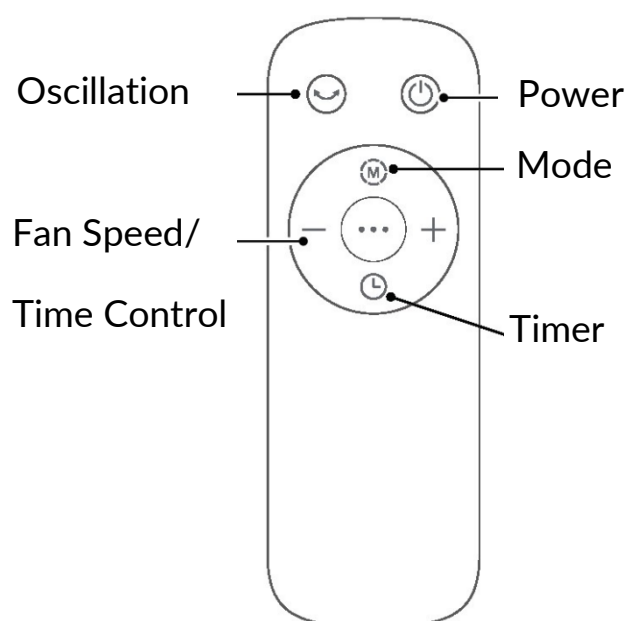

NOTE The remote should be used within 5m of the front face of the fan.

CLEANING AND MAINTENANCE

 
Replacing the Filter

Filters can be purchased from mda.russellhobbs.com

The below indicator will prompt you to replace the filter. It will remain on at each start up until it is replaced.

Replace the new filter following the instructions for installation in this booklet.

Hold down the mode button for 3 seconds to turn off the filter prompt.

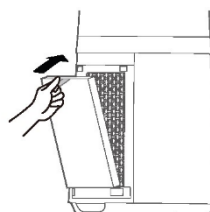




Pre-Filter Cleaning

NOTE Unplug the unit before cleaning.

1. Take out the filter.

2. Remove the dust with a vacuum.

   3. Reinsert the pre-filter.

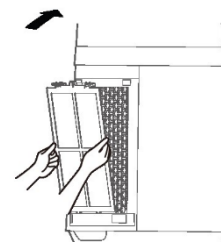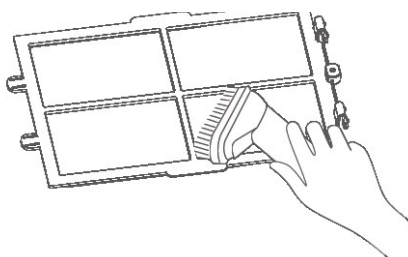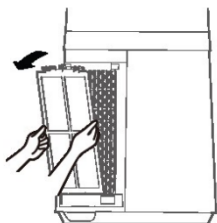

The fan requires little maintenance. Do not try to fix it by yourself. Refer to qualified service personnel if a service is needed.

- Ensure the unit is unplugged before assembly, and before cleaning.
- To ensure adequate air circulation to the motor, keep vents at the rear of the motor free of dust. Do not disassemble the fan to remove dust.
- Please wipe the exterior parts with a soft cloth soaked in a mild detergent.
- Do not use any abrasive detergent or solvents to avoid scratching the surface.
- Do not allow water or any other liquid into the motor housing or interior parts.
- Plastic parts should be cleaned with a soft cloth and mild soap. Thoroughly remove soap film with dry cloth.

PROBLEM SOLVING

The fan doesn't switch on	• Check the fan is plugged in. • Check the socket is switched on. • Check another appliance in the socket. • Unplug and check for any obvious signs of damage to cord or plug. • If recently used, allow to cool for 1 hour then try again.
The fan is rattling	• Check there is nothing in contact with the fan. • Check the fan is on a level surface.
The remote will not work	• The batteries may need replacing. • The remote is being used more than 5m away from the product.
Fan is making a grinding sound	• Immediately switch off and contact Customer Services.
The air is dusty	• Ensure fan is unplugged and set to OFF. • Using a vacuum and crevice brush, gently vacuum the front grille.

If you are still experiencing difficulties with the appliance, please contact us **BEFORE** returning the appliance to the retailer it was purchased from:

Website: mda.russellhobbs.com

Telephone: 0345 209 7461

Address: Product Care, Green Bank Business Park,
Hindley Green, Wigan, WN2 4AY

IMPORTANT!

3 MONTHS

KEEP GRILLE CLEAN

Vacuum the grille at least once every 3 months.

The fan may require more frequent vacuuming if in a dusty environment.

Ensure that the fan is unplugged before cleaning.



This product is guaranteed for 12 months from the date of the original purchase. If any defect arises due to faulty materials or workmanship, the faulty product must be returned to the place of purchase.

By registering your product, you will get an additional year guarantee free of charge. Additional cover can be purchased through the website.

REGISTER ONLINE

Visit our website to register your full parts and labour guarantee online.

mda.russellhobbs.com

REGISTER BY PHONE

Call our friendly Product Care team on the number below.

0345 209 7461

NOTES



Russell Hobbs

Russell Hobbs is a registered trademark used under license from Spectrum Brands (UK) Ltd. Made under license by Product Care Trading Limited, Wigan, WN2 4AY/ PCT (NI) Ltd, Belfast, BT5 5AD

Russell Hobbs Support: call 0345 209 7461 or visit mda.russellhobbs.com

UK
CA



The 'wheelie bin' symbol is known as the 'Crossed-out wheelie bin Symbol'. When this symbol is marked on a product/batteries, it means that the product/batteries should not be disposed of with your general household waste. Only discard electrical/electronic/battery items in separate collection schemes, which cater for the recovery and recycling of materials contained within. Your co-operation is vital to ensure the success of these schemes and for the protection of the environment. For your nearest disposal facility, visit www.recycle-more.co.uk or ask in store for details.

SEDEX – Connecting businesses and their global suppliers to share ethical data and enabling improvement in ethical performance. Visit www.sedex.org.uk for further information.

We reserve the right, due to possible changes to design, to alter the instruction manual without prior notice.