 


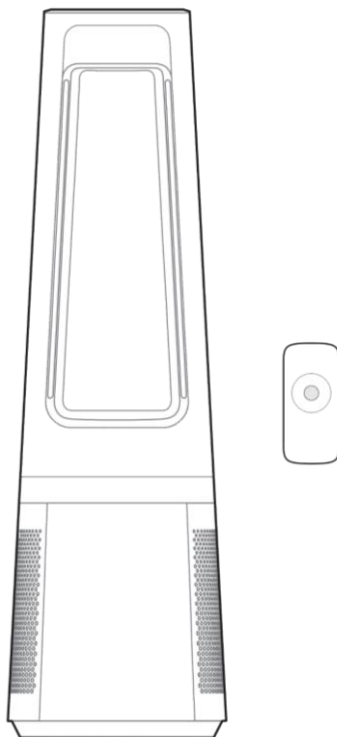

Russell Hobbs

Operating Manual

12 Speed Bladeless
Fan and Heater
RHBLDL25 (B/W)



This product is only suitable for well-insulated spaces or occasional use.

**REGISTER TODAY FOR
YOUR FREE ADDITIONAL
YEAR GUARANTEE**

GUARANTEE

At Russell Hobbs, we take all our customer feedback seriously.
Feel free to contact our Customer Services Team who will be more than happy to assist you.

This product is guaranteed for 12 months from the date of the original purchase. If any defect arises due to faulty materials or workmanship, the faulty product must be returned to the place of purchase.

Refund or replacement is at the discretion of the retailer.

- The following conditions apply:
- The product must be returned to the retailer with the original proof of purchase.
 - The product must be installed and used in accordance with the instructions contained in this instruction guide and any other instructions for use which are supplied.
 - It must be used for domestic purposes only and for its intended use.
 - This guarantee does not cover wear and tear, damage, misuse or consumable parts.
 - This does not affect your statutory rights.

Region	Contact	Website
UK & Northern Ireland	0345 209 7461	mda.russellhobbs.com
Ireland	1 800 938982	ie.mda.russellhobbs.com
Rest of Europe	europe@productcaregroup.com	de.mda.russellhobbs.com fr.mda.russellhobbs.com es.mda.russellhobbs.com it.mda.russellhobbs.com nl.mda.russellhobbs.com

Note your serial number below for future reference

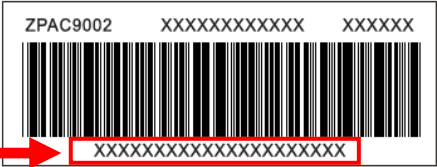 


Image for illustration purposes only

IMPORTANT SAFETY INSTRUCTIONS

- It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to electrical parts.
- Do not use with a damaged cord or plug. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- This product is intended for household use only.
- Do not use outdoors.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should not play with the appliance. Cleaning and user maintenance should not be made by children without supervision.
- Do not operate this appliance for anything other than its intended use.
- Do not immerse whole unit in water or other liquids for cleaning.
- Unplug from outlet when not in use. Do not leave unattended while plugged in.
- Do not use if it has been dropped, damaged, left outdoors or submerged in water.

IMPORTANT SAFETY INSTRUCTIONS

- Keep the appliance away from water and do not allow it to get wet. If unit is wet, do not plug unit into wall socket or turn unit on.
- Do not handle the appliance with wet hands.
- Do not pull or carry by the cord, use the cord as a handle, close doors on the cord, pull the cord around sharp corners or edges, or expose the cord to heated surfaces. Do not unplug by pulling on the cord.
- To protect against electrical shock do not immerse the cord, plug, or appliance in water or other liquid.
- Unplug from the mains outlet when not in use, before putting on and taking off parts, and before cleaning.
- Only use the unit when fully assembled.
- Never place your fingers or other objects into any part of the appliance. Be aware that loose clothing or hair may become trapped in the appliance if improperly used.
- Before use, ensure that all the air vents of the appliance are clear and there is no restriction of air flow.
- Caution: Appliance may disturb ashes in an open fire. Always avoid directing the appliance toward naked flames.
- Do not remove the rotor guard once assembled.
- The appliance must not be left unattended while it is connected to the mains supply.
- Do not touch hot surfaces. Use the handle or the controls.

IMPORTANT SAFETY INSTRUCTIONS

- Do not let the cord hang over the edge of a worktop, table etc. or touch hot surfaces.
- The use of accessory attachments not recommended by the appliance manufacturer may cause fire, electric shock or injury.
- Never remove parts from the appliance, such as the feet and screws etc.
- Never use the appliance near a bath, shower or a swimming pool.
- Never place flammable objects or clothing on top of the appliance.
- Allow a 100cm safe area around the appliance on the top and sides and a 150cm safe area at the front.
- Never use the appliance in a room with explosive gases such as petrol, or while using any kinds of flammable glues, sprays or solvents.
- Prevent overheating of the appliance by keeping the air inlets and outlets clean and free of anything that may cause blockages. Check all inlets and outlets regularly for accumulated dust.
- DO NOT COVER.
- Do not place any part of your body near the air inlet, outlet, or on the fins to avoid personal injury, electric shock or fire.
- If overheating should occur, the built-in overheating safety device will shut the appliance off.

IMPORTANT SAFETY INSTRUCTIONS

- Caution: Some parts of this product can become very hot and cause burns. Particular attention must be given when children or vulnerable people are present.
- Do not insert any foreign objects into the grill.
- Keep all grills clear of any draped fabric or curtains.
- The appliance must not be located immediately below a mains socket. Do not use the appliance with a programmer, timer or any other device that switches the appliance on automatically. A fire risk exists if the appliance is covered or positioned incorrectly.
- Use this heater on a horizontal and stable surface.
- This heater is not equipped with a device to control the room temperature. Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
- **WARNING:** To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1m from the air outlet.



WARNING: To avoid overheating, do not cover the appliance.

IMPORTANT SAFETY INSTRUCTIONS

Electrical Safety

- Before switching on the unit, make sure that the voltage of your electricity supply is the same as that indicated on the rating plate. This product is designed to operate on 220–240V~, 50/60Hz. Connection to any other power source may damage the unit.
- This product may be fitted with a non re-wireable plug. If it is necessary to change the fuse in the plug, the fuse cover must be refitted. If the fuse cover becomes lost or damaged, the plug must not be used until a suitable replacement is obtained.
- If the plug has to be changed because it is not suitable for your socket, or becomes damaged in any way, it should be cut off and an appropriate plug fitted. This should be carried out by a qualified electrician. The plug removed must be disposed of safely, as insertion into a socket is likely to cause an electrical hazard.
- Caution: Some parts of this product can become very hot and cause burns. Particular attention must be given when children or vulnerable people are present.

This appliance comes with an alkaline battery fitted into the remote.

Please remove the insulation sheet before use.

- Incorrect use of batteries may result in fire, explosion, leakage of dangerous substances, or other hazards.
- Do not throw batteries into the fire and do not expose them to high temperatures.
- Do not open, deform or short-circuit the batteries, or the contained chemicals can leak out of them.
- Do not try to recharge batteries. Recharging is only allowed for batteries which are marked as “rechargeable”. There is a danger of explosion!
- Always remove rechargeable batteries from the device to charge them.
- Regularly check the batteries as leaking chemicals can cause heavy damage to the device. When dealing with damaged or leaking batteries, exercise a particular caution.
- Risk of chemical burns! Wear protective gloves.
- Chemicals escaping from a battery can cause skin irritation.
- In case of contact with skin, rinse with plenty of water.
- In case of contact with eyes, do not rub your eyes, but rinse with water and immediately visit a doctor.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- Different types of batteries or accumulators as well as new and old batteries must not be used together.

Battery Warnings

- When inserting the battery, pay especial attention to the correct polarity. Wrong polarity can cause risk of bursting.
- Remove the batteries from the unit if you are not going to use it for a long time or if you want to store it.
- Insert the batteries according to the polarity.
- Do not allow children to replace batteries without supervision by an adult.
- Always choose the right size and the right battery type for the intended use.
- Clean the battery contacts remote-control the contacts of the equipment before installing the batteries.
- Remove used up batteries immediately.
- Do not dismantle the batteries.
- If the battery compartment does not close securely, do not use the remote control anymore and keep it away from children.
- Please avoid extreme conditions and temperatures which can adversely affect the batteries/rechargeable batteries, e.g. placing them on radiators/direct solar.
- The connection terminals must not be short-circuited.
- Please dispose of or recycle the remote-control batteries according to local government guidelines



CAUTION: Batteries are a chemical burn and choking hazard. Keep batteries away from children.

What's in the Box



1x Bladeless
Heat and
Cool



1x Remote
Control

 
 


1x
Instruction
Manual



2x Filters


Parts

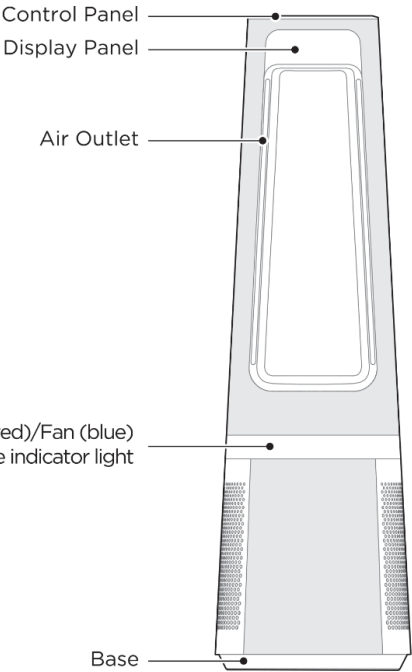

Air Inlet Grille



 
Pre-filter




Filter

Set Up

 1. Remove the air inlet grille

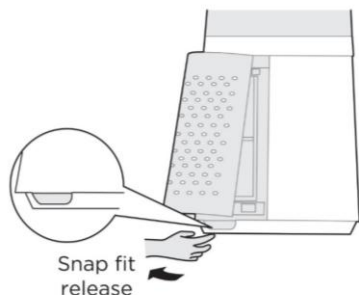

 3. Remove the protective film from the filter

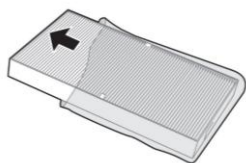


5. Reinsert the pre-filter by aligning the slots at the bottom and then close the upper U-shaped buckle.



2. Take out the pre-filter by pressing the raised parts at each side and pulling outwards



 
4. Install the filter

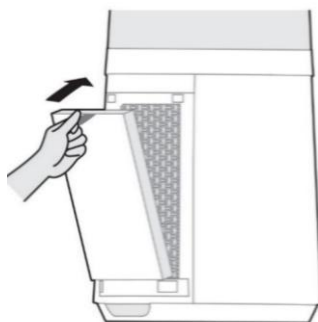

NOTE: It is recommended to clean the filter once every two weeks and replace it once every six months. This can be adjusted dependent on environment and usage.

Set Up

 6. Install the air inlet grille by aligning the two upper buckles and pressing them tightly, then press the two sides at the lower part and gently buckle.

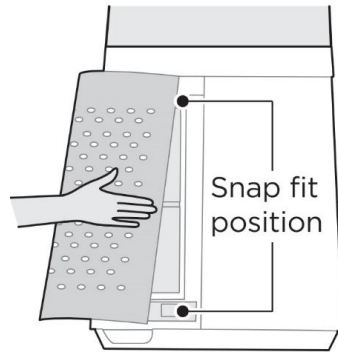

7. Plug into the wall socket and you're ready to go.

Control Panel



 
Display Panel

When the display panel shows “0”, the unit is standby mode.



Power Button

Press to enter start up/standby or stop.



Plus /Minus

Press to circulate between the wind speeds of 1 to 12, and to set the timer.



Oscillation

Press to begin oscillating at 30, 60 or 90 degrees



Timer

When the power is on, you can schedule to shut down the fan. When in standby mode, you can schedule to power on. The timer circulates between 1 and 12 hours. The number 0 indicates no timer set or a cancellation.

Display

Wind Mode



Press to activate Cool /Mode and to circulate between Normal, Sleep, Smart and Baby modes.

ION Wind



Press to activate/deactivate ION Serialisation to kill bacteria in the air surrounding the fan.

Normal Mode



When this icon is lit, the fan is in Normal Wind Mode. There are 12 levels in Normal Mode, and these can be adjusted by using the plus and minus buttons.

Sleep Mode



When this icon is lit, the fan is in Sleep Mode. There are 3 levels in Sleep Mode, and these can be adjusted by using the plus and minus buttons.

Smart Wind



When this icon is lit, the fan is in Smart Wind Mode and will automatically adjust in line with changes to the room temperature.

Baby Mode



When this icon is lit, the fan is in Baby Mode. There are 2 levels in Baby mode, and these can be adjusted by using the plus and minus buttons.

Display

Heater Mode



Touch to active heating mode, touch the wind speed buttons to set target temperature. '--°C' indicates that a target temperature is not set. If the appliance does not reach the set temperature, it will continue to heat until the actual temperature exceeds the target temperature. When this happens, the appliance will stop automatically, and the temperature icon on the display will flash for 15 seconds before remaining steadily lit. The digital display automatically turns off after 30 seconds if no buttons are pressed.

Filter Indicator



When this icon remains on, it is time to replace the filter.

Standby Mode



This light will come on when the unit is in standby mode and plugged in. The light will dim after 30 seconds if no buttons are pressed.

Additional Features

Forced Shutdown

After 15 hours of continuous operation and without any intervention, the fan will shut down automatically.

 
Intelligent Memory

When turning on the fan, it will run in the last selected mode prior to shutdown (the timing function will not be resumed).

Ambient Light Timeout

The ambient light automatically turns off after 30 seconds if no buttons are pressed.

Remote Control

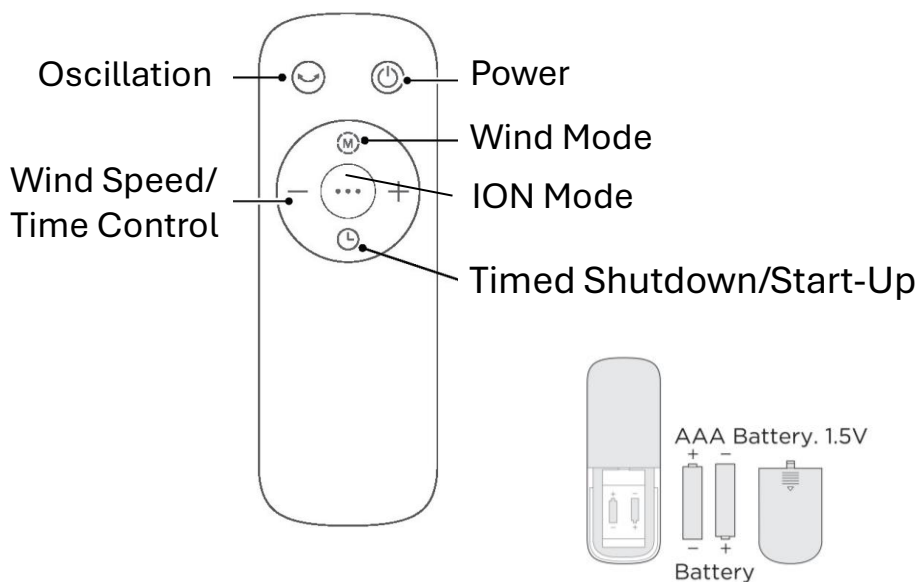

Note: The remote control must be operated within 5m from the front of the fan.

Cleaning and Maintenance

Replacing the Filter

Filter model:

RHHPFLTBLDL12



The below light will prompt you to replace the filter. It will remain on at each start up until it is replaced.



Replace the new filter following the instructions for installation in this booklet.



Hold down the OSC button for 3 seconds to turn off the prompt



 
Pre-Filter Cleaning

NOTE Unplug the unit before cleaning.

1. Take out the filter.



2. Remove the dust with a vacuum.

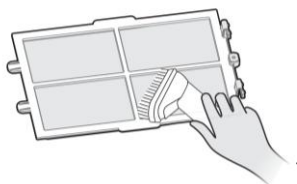

3. Reinsert the pre-filter.



The fan requires little maintenance. Do not try to fix it by yourself. Refer to qualified service personnel if a service is needed.

- Ensure the unit is unplugged before assembly, and before cleaning.
- To ensure adequate air circulation to the motor, keep vents at the rear of the motor free of dust. Do not disassemble the fan to remove dust.
- Please wipe the exterior parts with a soft cloth soaked in a mild detergent.
- Do not use any abrasive detergent or solvents to avoid scratching the surface.
- Do not allow water or any other liquid into the motor housing or interior parts.
- Plastic parts should be cleaned with a soft cloth moistened with mild soap. Thoroughly remove soap film with dry cloth.

CONNECTION TO THE MAINS

SUPPLY

This appliance is designed to operate from a mains supply of 220-240V AC 50/60Hz.

 
Check that the voltage marked on the product corresponds with your supply voltage.

How to change the fuse

1. Slot the end of a screwdriver into the recess in the fuse holder of the plug.
2. Pull the fuse holder upwards until free of the plug and slide the fuse out.
3. Replace the fuse and replace fuse holder, pushing down until locked into place.



Note: Use only a 13-amp fuse. Using any other type may cause damage or risk of fire.

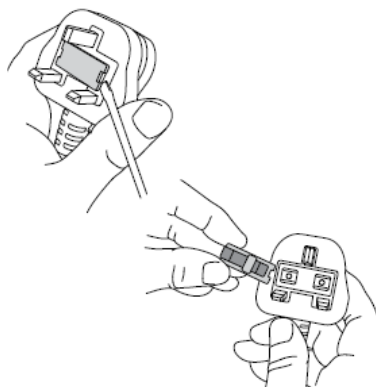

DANGER
Electric
Shock Risk

Product Parameters & Information Requirements for Electric Local Space Heaters

Model	Working Voltage	Total Power	Fan Power	Frequency	Noise
RHBLDL25	220-240V~	2000W	40W	50/60Hz	<64dB

Item	Symbol	Value	Unit	Item	Value
Heat output				Type of heat output/room temperature control (select one)	
Nominal heat output	P _{nom}	2.000	kW	Single stage heat output and no room temperature control	No
Minimum heat output (indicative)	P _{min}	N/A	kW	Two or more manual stages, no room temperature control	No
Maximum continuous heat output	P _{max,c}	2.000	kW	With mechanic thermostat room temperature control	No
Power consumption				With electronic room temperature control	Yes
In off mode	P _o	0.00	W	Electronic room temperature control plus day timer	No
In standby mode	P _{sm}	0.74	W	Electronic room temperature control plus week timer	No
In idle mode	P _{idle}	0.69	W	Other control options (multiple selections possible)	
In network standby	P _{nsm}	0.00	W	Room temperature control, with presence detection	No
Standby mode with display of information or status			Yes	Room temperature control, with open window detection	No
Seasonal space heating energy efficiency in active mode	$\eta_{s,on}$	91.5	%	Distance control option	No
				Adaptive start control	No
				Working time limitation	Yes
				Black bulb sensor	No
				Self learning functionality	No
				Control accuracy	No
Contact details	Product Care Trading Ltd, Unit 1 Green Bank Business Park, Swan Lane, Hindley Green, Wigan, WN2 4AY, United Kingdom				
	Product Care (Ireland) Ltd, Unit 3D North Point House, North Point Business Park, New Mallow Road, Cork, T23 AT2P, Ireland				

PROBLEM SOLVING

The fan doesn't switch on	Check the fan is plugged in. Check the socket is switched on. Check another appliance in the socket. Unplug and check for any obvious signs of damage to cord or plug. If recently used, allow to cool for 1 hour then try again.
The fan is rattling	Check there is nothing in contact with the fan. Check the fan is on a level surface.
The remote will not work	The batteries may need replacing. Ensure that the remote is not being used more than 5m away from the product.
Fan is making a grinding sound	Immediately switch off and contact Customer Services.
The air is dusty	Ensure fan is unplugged and set to OFF. Using a vacuum and crevice brush, gently vacuum the front grille.

Notes

 
Notes



Russell Hobbs

Made by Product Care Trading Limited under license from Spectrum Brands (UK) Limited. Product Care Trading Ltd, Unit 1, Green Bank Business Park, Swan Lane, Hindley Green, Wigan, WN2 4AY, United Kingdom

Product Care (Ireland) Ltd, Unit 3D North Point House, North Point Business Park, New Mallow Road, Cork, T23 AT2P, Ireland. Russell Hobbs is the registered trademark of Spectrum Brands (UK) Ltd.

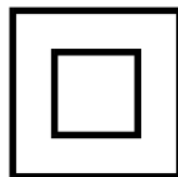

The 'wheellie bin' symbol is known as the 'Crossed-out wheellie bin Symbol'. When this symbol is marked on a product/batteries, it means that the product/batteries should not be disposed of with your general household waste. Only discard electrical/electronic/battery items in separate collection schemes, which cater for the recovery and recycling of materials contained within. Your co-operation is vital to ensure the success of these schemes and for the protection of the environment. For your nearest disposal facility, visit www.recycle-more.co.uk or ask in store for details.

SEDEX – Connecting businesses and their global suppliers to share ethical data and enabling improvement in ethical performance. Visit www.sedex.org.uk for further information.

We reserve the right, due to possible changes to design, to alter the instruction manual without prior notice.

Revision 1.16