

 


Russell Hobbs

Bladeless USB Desk Fan

Operating Manual

RHBLDLUSB25 (B)

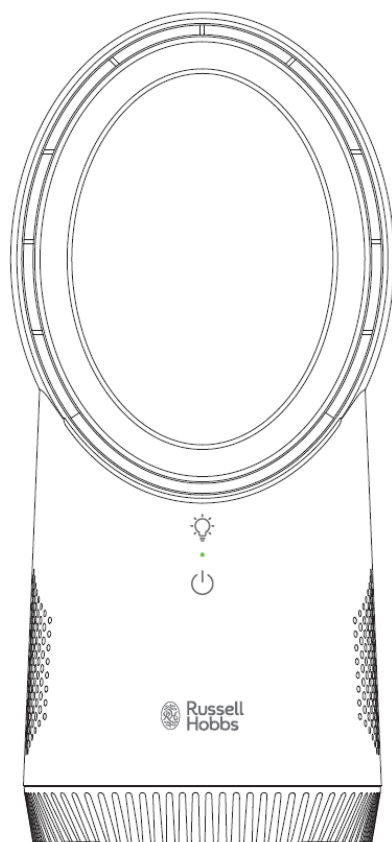

**REGISTER TODAY
FOR YOUR FREE
ADDITIONAL YEAR
GUARANTEE**

CONTENTS

Safety Instructions	3
Product Overview	5
Product Setup	6
Battery Removal	9
Cleaning and Maintenance	10
Problem Solving	11
Guarantee	12
Notes	13



Read this guide carefully before installing or operating your new fan and keep it somewhere safe for future reference.

SAFETY INSTRUCTIONS

- It is hazardous for anyone other than a qualified electrician to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to electrical parts.
- Do not use with a damaged cord or plug. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified technicians to avoid a hazard.
- This product is intended for household use only.
- Do not use outdoors.
- Children aged 8 and older may only use the appliance or carry out cleaning and maintenance duties under supervision and after being instructed on safe use.
- Do not allow children to play with the appliance.
- This appliance can be used by people with reduced physical, sensory or cognitive abilities, or by individuals with limited experience and knowledge, provided they have received proper supervision or instruction on how to use the appliance safely and understand the associated risks.
- Do not operate this appliance for anything other than its intended use.
- Do not immerse whole unit in water or other liquids for cleaning.
- Unplug from outlet when not in use. Do not leave unattended while plugged in.
- Do not use if it has been dropped, damaged, left outdoors or submerged in water.
- Keep the appliance away from water. Do not allow it to get wet. If the unit gets wet, do not plug the unit into a wall socket or turn the unit on.
- Do not handle the appliance with wet hands.
- Do not pull or carry by the cord, use the cord as a handle, close doors on the cord, pull the cord around sharp corners or edges or expose the cord to heated surfaces. Do not unplug by pulling on the cord.
- To protect against electrical shock, do not immerse the cord, plug or appliance in water or other liquids.

 
SAFETY INSTRUCTIONS

- Unplug from the mains outlet when not in use, before putting on and taking off parts, and before cleaning.
- Only use the unit when fully assembled.
- Never place your fingers or other objects into any part of the appliance. Be aware that loose clothing or hair may become trapped in the appliance if improperly used.
- Before use, ensure that all the air vents of the appliance are clear and there is no restriction of air flow.
- Caution: Appliance may disturb ashes in an open fire. Always avoid directing the appliance toward naked flames.
- This appliance contains batteries that are only replaceable by a qualified engineer. Battery must be removed before scrapping appliance. Battery must be disposed of safely.
- Do not expose the appliance or battery to excessive temperatures.
- Be aware of the risk of terminals of the battery-operated appliance or battery being short-circuited by metal objects.
- This appliance contains batteries that are non-replaceable. When the battery is at end of life, the appliance shall be properly disposed of.



WARNING: For the purposes of recharging the battery, only use the detachable supply unit provided with this appliance.

PRODUCT OVERVIEW

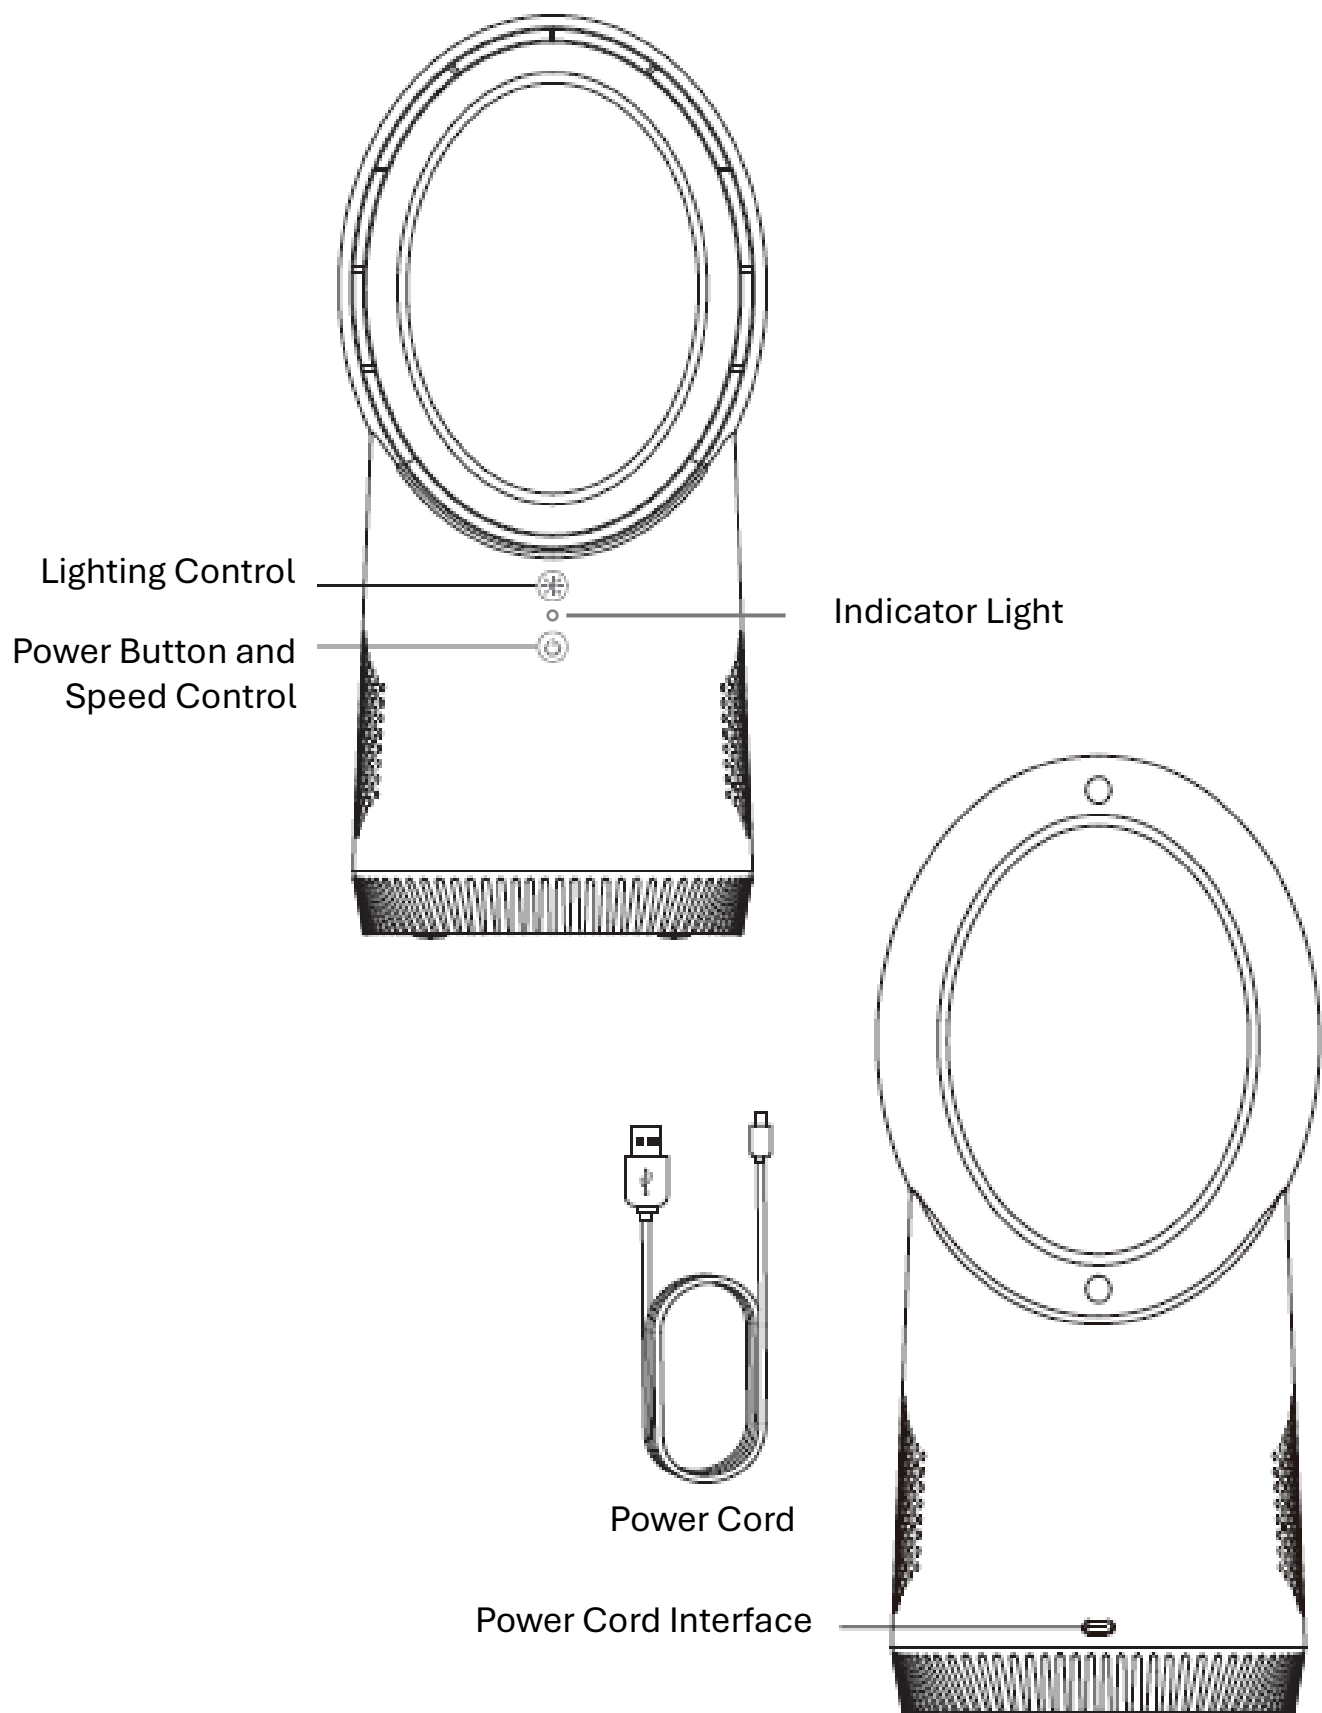


PRODUCT SETUP

Remove packaging material and all transport bracing from the device.

For safe and trouble-free running of the device, choose the installation location which meets the following requirements:

 - The surface should be firm, flat and horizontal.
- Do not place the device in a hot, wet or very humid environment.
- The socket should be easily accessible so that the mains connection cable can be easily disconnected, if necessary.
- Temperature range: from 0 to + 40 °C .
- Humidity (no condensation): 5 - 75%.

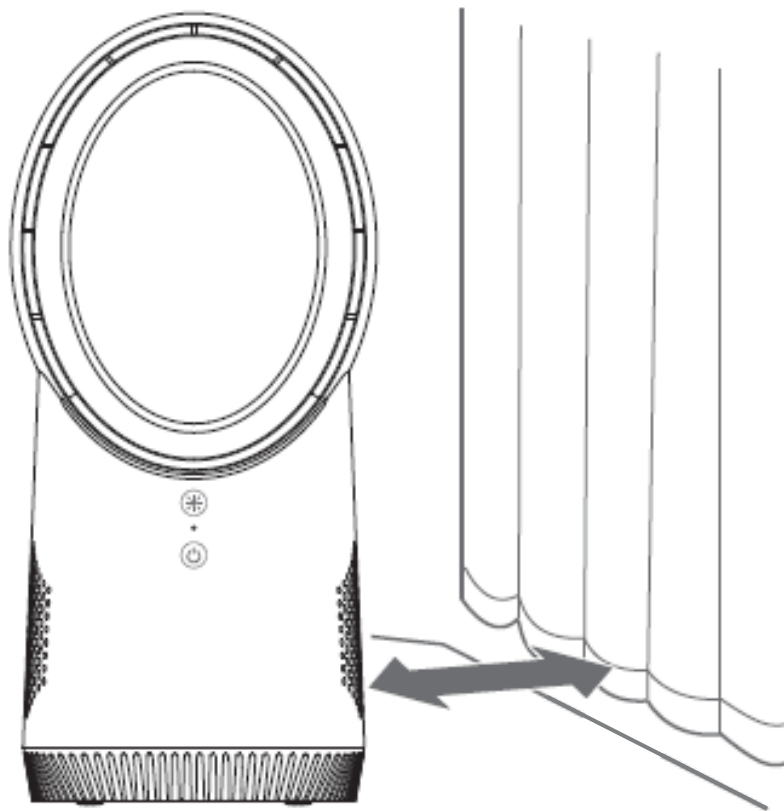


Note: Do not place fan near curtains

PRODUCT SETUP


Connect the cable to the fan through an external power source to use continuously. To operate wirelessly, disconnect the cable after the unit is fully charged

Approximate charge time: 3 hours

 Approximate discharge time: 2 hours

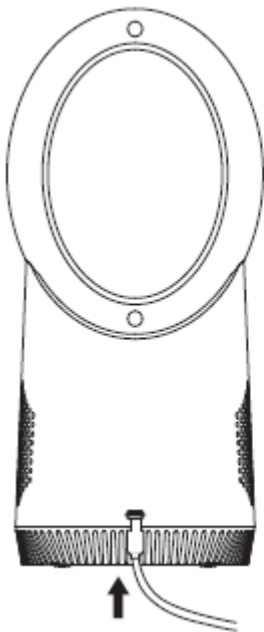

 
Insert the output end of the USB charging cable into the fan interface.

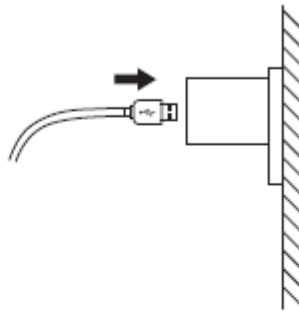

Insert the USB charging cable into the national standard output 5V 2A. Ensure the maximum output power does not exceed the 15W adapter.

Indicator Light

 When the battery is low, the red indicator blinks three times and the unit shuts down. During charging, the green indicator blinks and turns off when fully charged.

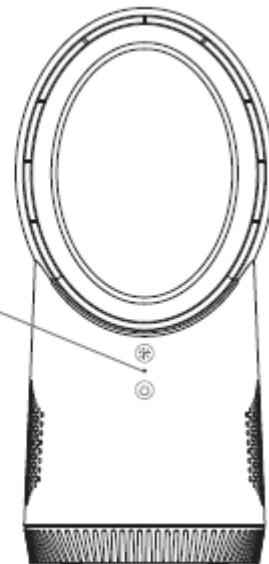

PRODUCT SETUP

Power Button and Speed Control

Press the power button on the fan and the power indicator will light up white. This is speed 1.

To change the fan speed, wait 3 seconds before pressing again.

Press it a second time for speed 2. The power indicator will light up blue.

Press it a third time for speed 3. The power indicator will light up green.

Press it a fourth time to switch the fan off.

Press 1 = Speed 1

 
Press 2 = Speed 2

Press 3 = Speed 3

Press 4 = Switch off



Note: The buttons have a beep feedback when pressed and work best with a light swipe over them.

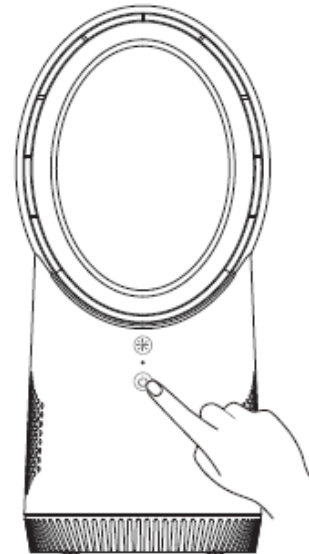

Lighting Control button

Press the lighting control button to start the atmospheric lighting.

Keep pressing the button to cycle through the colours (white, blue, green, red, purple, gradient colour).

To end the atmospheric light function, press the ambience button again after the colour changes to gradient colour. The indicator light will then turn off. You can also press and hold the button to switch the light off.

Colour Cycle

White – Blue – Green – Red – Purple – Gradient – Switch Off

BATTERY REMOVAL



Note: The fan's battery may contain environmentally harmful substances. Do not dispose of the battery with regular household waste. Always follow local regulations when disposing of the battery.

 
Before removing the battery, power off to ensure that the battery is free. If there is surplus power, let the fan run until the power is exhausted.

Do not short circuit the battery contact strip.


To remove the battery, follow these instructions:

1. Take out the 6 silicone and screws at the bottom and back of the product (Figure 1).
2. Take out the plastic shell of the chassis and remove 2 screws (Figure 2).
3. Take out the rear shell, remove the battery terminal and remove the battery (Figure 3).


Do not reconnect the fan to the power supply after removing the battery.

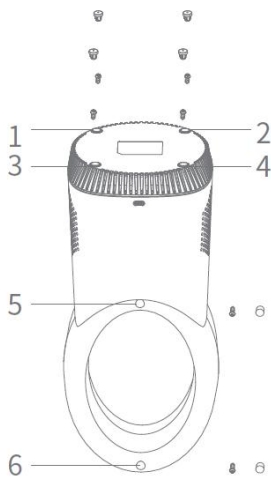

(Figure 1)

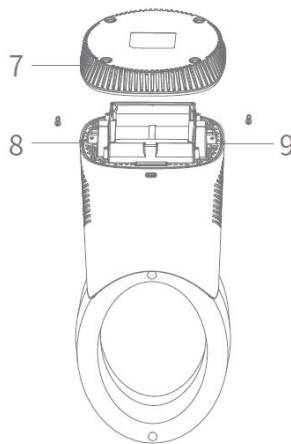 

(Figure 2)

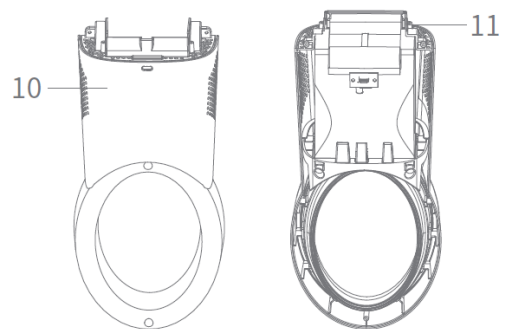 

(Figure 3)

CLEANING AND MAINTENANCE



Note: This model should only require minimal maintenance. Do not try to fix it yourself. If service is needed, contact a qualified technician.

- Ensure the unit is unplugged before assembly and before cleaning.
- During maintenance, do not soak or splash water on the fan. Getting the unit wet will damage it.
- Do not use gasoline, alcohol, bleach or metal objects to wipe the fan surface. This can cause the fan surface to discolour and deteriorate.
- To ensure adequate air circulation to the motor, keep vents at the rear free of dust. Do not disassemble the fan to remove dust.
- Do not use any abrasive detergent or solvents to avoid scratching the surface.
- Do not allow water or any other liquid into the motor housing or interior parts.

Unit Surface

- Gently wipe the fan surface with a soft dry cloth.
- If the surface of the fan is dirty, the debris can be diluted with neutral detergent and then wiped with a soft cloth.

Air Inlet and Outlet

- Use a soft brush or vacuum cleaner to remove dust at the air inlet and outlet.
- Too much dust can reduce effectiveness. To maintain the fan, clean it when only a minimal amount of dust has accumulated.

Storage

- Avoid places with vibration and electrical appliances with cooling/heating function.
- Avoid placing it in direct sunlight, high temperatures and humidity.
- Keep out of the reach of children.

PROBLEM SOLVING

Fan doesn't switch on	• Check the fan is plugged in. • Check the socket is switched on. • Check another appliance in the socket. • Unplug and check for any obvious signs of damage to cord or plug. • If recently used, allow to cool for 1 hour then try again.
Fan makes a rattling sound	• Check there is nothing in contact with the fan. • Check the fan is on a level surface.
Remote control doesn't work	• The batteries may need replacing. • The remote is being used more than 4m away from the product.
Fan makes a grinding sound	• Immediately switch off and contact Customer Services.
Air coming out is dusty	• Ensure fan is unplugged and set to OFF. • Using a vacuum and crevice brush, gently vacuum the front grille.

IMPORTANT!

KEEP THE GRILLE CLEAN

Vacuum the grille at least once every 3 months.
The fan may require more frequent vacuuming if in a dusty environment.
Ensure that the fan is unplugged before cleaning.

3

MONTHS

GUARANTEE

At Russell Hobbs, we take all our customer feedback seriously.

Feel free to contact our Customer Services Team who will be more than happy to assist you.

This product is guaranteed for 12 months from the date of the original purchase. If any defect arises due to faulty materials or workmanship, the faulty product must be returned to the place of purchase.

Refund or replacement is at the discretion of the retailer.

The following conditions apply:

- The product must be returned to the retailer with the original proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide and any other instructions for use which are supplied.
- It must be used for domestic purposes only and for its intended use.
- This guarantee does not cover wear and tear, damage, misuse or consumable parts.
- This does not affect your statutory rights.

Region	Contact	Website
UK & Northern Ireland	0345 209 7461	mda.russellhobbs.com
Ireland	1 800 938982	ie.mda.russellhobbs.com
Rest of Europe	europe@productcaregroup.com	de.mda.russellhobbs.com fr.mda.russellhobbs.com es.mda.russellhobbs.com it.mda.russellhobbs.com nl.mda.russellhobbs.com

Note your serial number below for future reference

Image for illustration purposes only



NOTES

NOTES

NOTES



Russell Hobbs

Made by Product Care Trading Limited under license from Spectrum Brands (UK) Limited. Product Care Trading Ltd, Unit 1, Green Bank Business Park, Swan Lane, Hindley Green, Wigan, WN2 4AY, United Kingdom

Product Care (Ireland) Ltd, Unit 3D North Point House, North Point Business Park, New Mallow Road, Cork, T23 AT2P, Ireland. Russell Hobbs is the registered trademark of Spectrum Brands (UK) Ltd.

UK
CA



The 'wheellie bin' symbol is known as the 'Crossed-out wheellie bin Symbol'. When this symbol is marked on a product/batteries, it means that the product/batteries should not be disposed of with your general household waste. Only discard electrical/electronic/battery items in separate collection schemes, which cater for the recovery and recycling of materials contained within. Your co-operation is vital to ensure the success of these schemes and for the protection of the environment. For your nearest disposal facility, visit www.recycle-more.co.uk or ask in store for details.

SEDEX – Connecting businesses and their global suppliers to share ethical data and enabling improvement in ethical performance. Visit www.sedex.org.uk for further information.

We reserve the right, due to possible changes to design, to alter the instruction manual without prior notice.