 




Russell Hobbs

Smart Glass Panel Heater

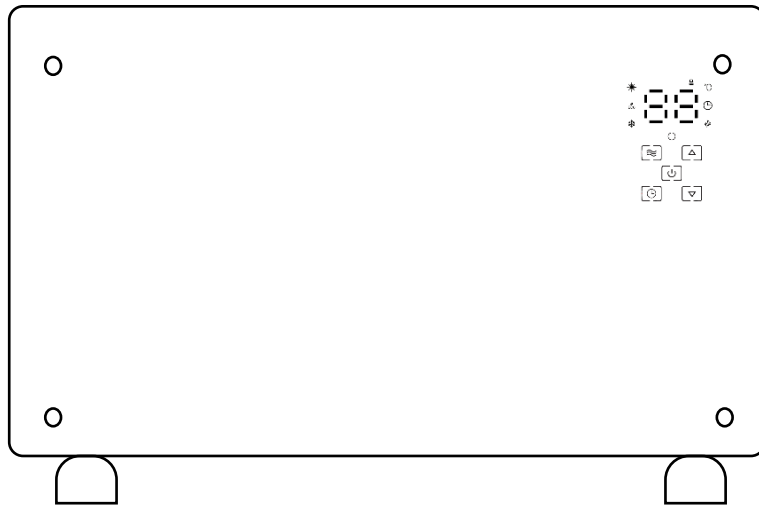

Model Number:

RHPANH2006W (B)

230V AC 50Hz/60Hz 2000W

This product is only suitable for well insulated spaces or occasional use

PLEASE RETAIN
FOR FUTURE REFERENCE

CONTENTS

	Page(s)
Safety Instructions and Electrical Safety	3 - 6
Battery Warnings	7 - 8
Battery Replacement Information	9
Feature Diagram	10
Base Assembly	11
Wall Mounting Installation	12 - 13
Control Panel and Remote	14
Operations and Functions	15 - 19
Setting Up Smart Controls	20 - 21
Using the Smart Controls	22 - 26
Connecting to Alexa and Google	27 - 28
Using the Voice Commands	29 - 30
Cleaning and Care	31
Problem Solving	32
Guarantee and Customer Services	33
Spare Parts	34
Connection to the Mains Supply	35
Specification	36 - 37
Notes	38 - 39
Disposal Information	40

SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be observed, including the following:

- Read all instructions.
- Check that the mains voltage corresponds with the rating on the appliance.
- This appliance must be positioned upright on the floor away from curtains, furniture or wall coverings and other flammable items.
- The appliance must not be left unattended while it is connected to the mains supply.
- Do not touch hot surfaces. Use the handle or the controls.
- To protect against electrical shock do not immerse cord, plug, or appliance in water or other liquid. Do not operate with wet hands.
- Do not let the cord hang over the edge of a worktop, table etc. or touch hot surfaces.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.
- The use of accessory attachments is not recommended by the appliance manufacturer as it may cause fire, electric shock or injury.
- This appliance must not be immersed in any liquid
- To disconnect, remove the plug from the mains outlet. Do not pull the plug out by the cord.
- Do not operate this appliance for anything other than its intended use.
- **This product is intended for household use only.** Do not use outdoors.

SAFETY INSTRUCTIONS

- Never remove parts from the appliance, such as the feet, screws and so on.
- Never use the appliance near a bath, shower or a swimming pool.
- Never place flammable objects or clothing on top of the appliance.
- Allow a 100cm safe area around the appliance on all sides.
- Never use the appliance in a room with explosive gas such as petrol, or while using any kinds of flammable glues, sprays or solvents.
- Do not place any part of your body near the air inlet, outlet or on the fins, to avoid personal injury, electric shock or fire.
- If overheating should occur, the built-in overheating safety device will shut the appliance off.
- Prevent overheating of the appliance by keeping the air inlets and outlets clean and free of anything that may cause a blockage. Check all inlets and outlets regularly for accumulated dust.
- **DO NOT COVER.**
- Caution: Some parts of this product can become very hot and cause burns. Particular attention must be given when children and vulnerable people are present.
- Do not insert any foreign objects into the grill.
- Keep all grills clear of any draped fabric or curtains.
- The appliance must not be located immediately below a mains socket. Do not use the appliance with a programmer, timer or any other device that switches the appliance on automatically. A fire risk exists if the appliance is covered or positioned incorrectly.
- **WARNING:** The heater must not be used if the glass panels are damaged.
- Use this heater on a horizontal and stable surface, or fix it to the wall, as applicable.
- **WARNING:** In order to avoid overheating, do not cover the heater.
- This appliance is not intended for commercial use

SAFETY INSTRUCTIONS

- **WARNING:** Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
- **WARNING:** To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1 m from the air outlet.
- This product is only intended for heating.
- **WARNING:** It is hazardous for anyone other than a competent person to carry out any service or repair operation which involves the removal of the cover that gives protection against exposure to electrical parts.
- **WARNING:** Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years should only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position, and they have been given supervision or instruction concerning use of the appliance in a safe way, and understand the hazards involved.
- Children aged from 3 years and less than 8 years should not plug in, regulate and clean the appliance, or perform user maintenance.
- **WARNING:** This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should not play with the appliance. Cleaning and user maintenance should not be made by children without supervision.

SAFETY INSTRUCTIONS

Electrical Safety

THIS APPLIANCE MUST BE PLUGGED INTO AN EARTHED SOCKET

- Before switching on, make sure that the voltage of your electricity supply is the same as that indicated on the rating plate. This product is designed to operate on 230V AC 50Hz/60Hz. Connection to any other power source may damage the unit.
- This product may be fitted with a non-rewireable plug. If it is necessary to change the fuse in the plug, the fuse cover must be refitted. If the fuse cover becomes lost or damaged, the plug must not be used until a suitable replacement is obtained.
- If the plug needs to be changed because it is not suitable for your socket or becomes damaged in any way, it should be cut off and an appropriate plug fitted. This should be carried out by a qualified electrician. The plug removed must be disposed of safely, as insertion into a 13 Amp socket is likely to cause an electrical hazard.



WARNING:

In order to avoid overheating, do not cover the appliance.

BATTERY WARNINGS

WARNING:

This product may contain a coin or button cell battery. Keep product and batteries away from children. Battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin or button battery has been swallowed or placed inside any part of the body.

- **INGESTION HAZARD:** This product contains a button cell or coin battery
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **INTERNAL CHEMICAL BURNS** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH OF CHILDREN**.
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



- This appliance comes with a CR2025 battery which is fitted into the remote. Remove the insulation sheet before use.
- There is risk of chemical burns. Always wear protective gloves when handling.
- Chemicals escaping from a battery can cause skin irritation.
- In case of contact with skin, rinse thoroughly with water. In case of contact with eyes, do not rub your eye, but rinse it with water and immediately consult a doctor.
- Do not try to recharge batteries. Recharging is only allowed for batteries which are marked as “rechargeable”. There is a danger of explosion.

BATTERY WARNINGS

- Regularly check the batteries. Leaking chemicals can cause heavy damage to the device. Dealing with damaged or leaking batteries, exercise a particular caution.
- Different types of batteries or accumulators, as well as new and old batteries, must not be used together.
- When inserting the battery, pay special attention to the correct polarity. Wrong polarity can cause risk of bursting.
- Remove the batteries from the unit if you are not going to use it for a long time or if you want to store it.
- Do not allow children to replace batteries without supervision by an adult.
- Always choose the right size and the right battery type for the intended use.
- Clean the battery contacts and equipment contacts before installing the batteries.
- Remove used-up batteries immediately.
- Do not dismantle the batteries.
- If the battery compartment does not close securely, do not use the remote control anymore and keep it away from children.
- Please avoid extreme conditions and temperatures which can adversely affect the batteries/rechargeable batteries(e.g., placing them on radiators/direct solar radiation).
- The connection terminals must not be short-circuited.

BATTERY REPLACEMENT

INFORMATION

 
This appliance comes with 1 CR2025 (3V) battery which is to be fitted into the remote.



CAUTION: Batteries are a chemical burn and choking hazard. Keep batteries away from children.


- Ensure that the battery compartment is always completely secure. If the battery compartment does not close securely, stop using the remote, remove the battery, and keep it away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention. Dispose of cells properly and keep away from children. Even used cells may cause injury.
- Please dispose of or recycle the remote control batteries according to municipal or provincial laws.

To place the batteries into the remote/replace the batteries please follow the instructions below:

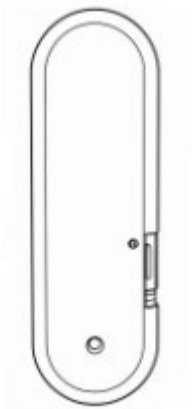

1. Unscrew the screw on the back of the remote control.
2. Press and hold the release tab to open the battery compartment.
3. Insert the battery with the correct side facing up.
4. Slide the battery slot back into the remote until it clicks into place, then tighten the screw.

 FEATURE DIAGRAM

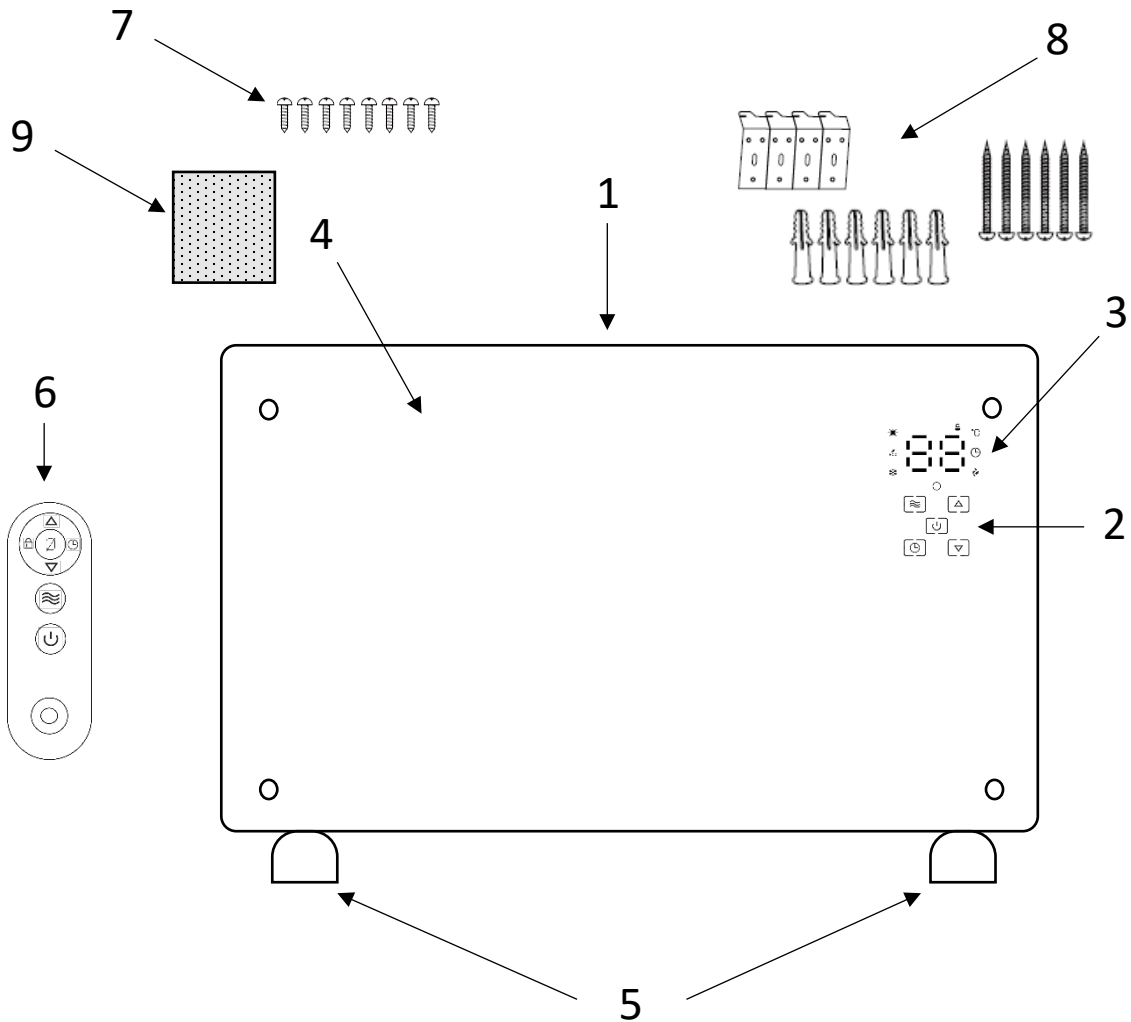


1. Air outlet
2. Control panel
3. LED display
4. Front glass panel

5. Feet
6. Remote control
7. Feet screws (x8)
8. Wall mounting kit
9. Feet protection stickers

BASE ASSEMBLY

If you are not mounting the heater onto a wall, then the feet must be fitted to the unit before using the appliance.

 The feet are to be attached to the base of the heater using the 8 short screws provided. Carefully lie the heater upside down on a soft surface. Align the holes in the feet with the holes on the base of the heater, and secure by inserting the screws and tightening them with a screwdriver. Take care to ensure that the screws are located correctly in both the feet and the heater.

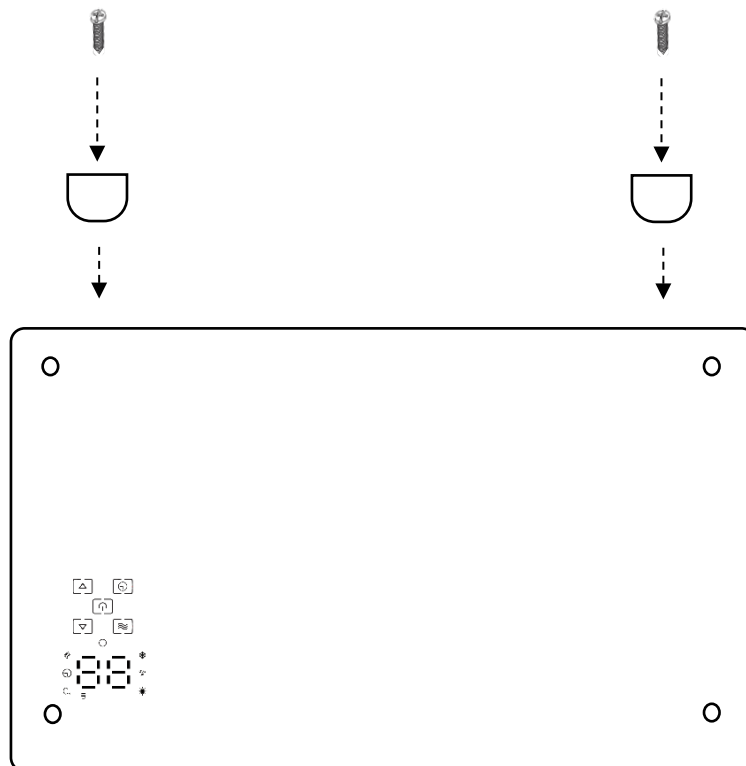

Once installed, peel the feet protection stickers off of the sheet, and attach them to each of the feet. This is to protect the surface beneath the appliance from scratches.

WALL MOUNTING INSTALLATION

 
Tools required: Drill, Philips screw driver

Safety Instructions


- Prior to the drilling, make sure there are no cables or other pipelines in/on the wall in order to avoid damage.
- The screws on the wall must be fixed and firm to ensure the safe installation of the electric heater onto the wall.
- You must ensure the installation is compatible with the wall type it is being installed on: plaster board, brick, etc.
- During installation, the heater must maintain a sufficiently safe distance from combustible materials and gas, and away from water.
- During wall-hanging installation, the installation height from the ground must be greater than 15 cm, and should be no less than 50 cm away from the ceiling.

Installation

1. Take out the wall mounting kit from the box and ensure that you have 4 brackets, 6 expansion pipes and 6 screws.
2. Fix 2 brackets onto the wall according to the distances between holes of the bracket, as depicted in the picture below.

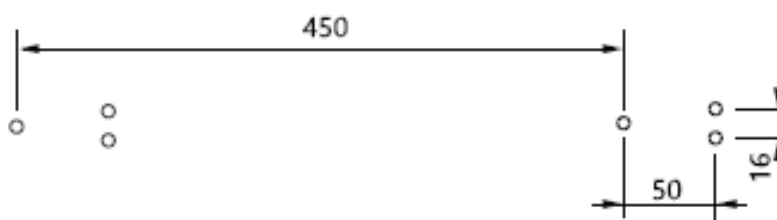

Mounting holes

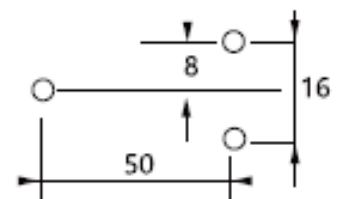 


Big picture




WALL MOUNTING INSTALLATION

 3. Fix 2 brackets onto the bottom of appliance, as shown in the image below:


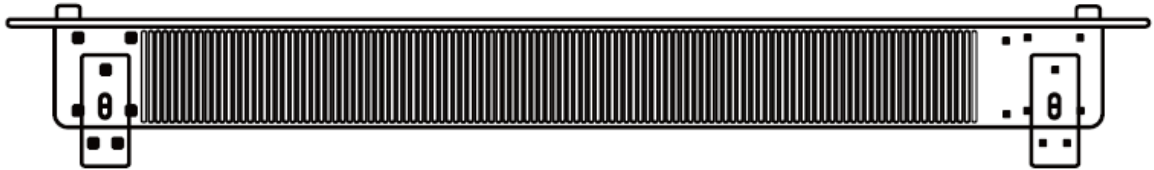


 4. Holding the sides of the heater, check the position of the wall holes on the rear of the heater, and align those with brackets on the wall. Slide the heater to the top of the slot, as shown in the diagram below:

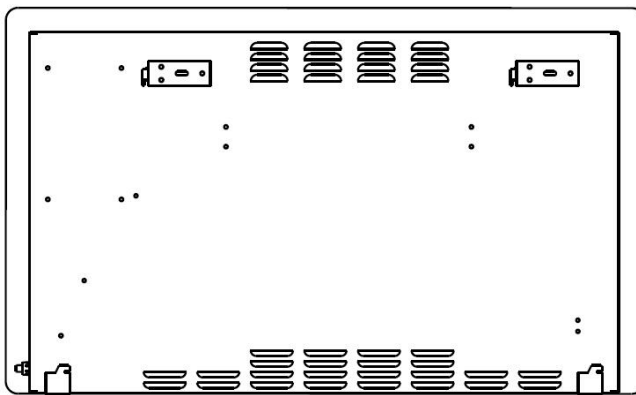

5. Your heater is now installed on your wall.

  CONTROL PANEL & REMOTE

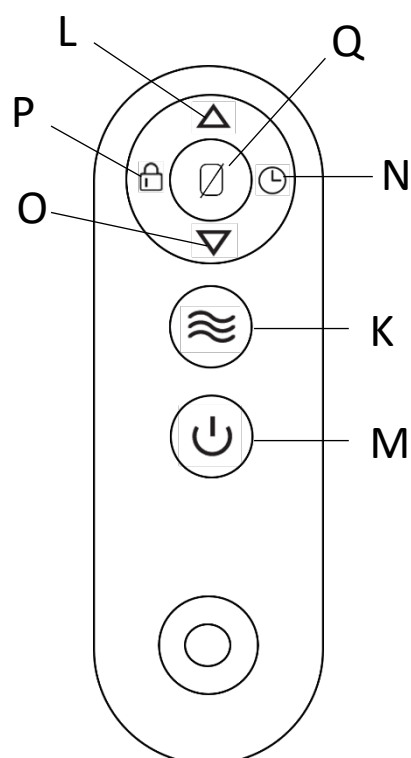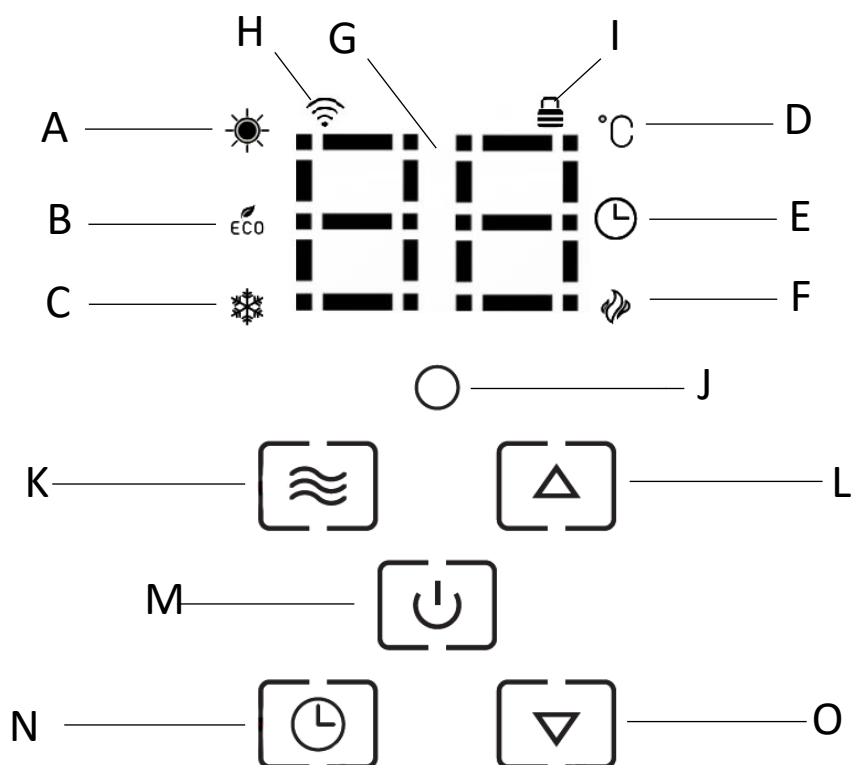

- A. Comfort mode icon
- B. Eco mode icon
- C. Anti-frost mode icon
- D. Temperature unit icon
- E. Timer icon
- F. Heating icon
- G. Temperature/timer display
- H. Wi-Fi icon
- I. Lock mode icon
- J. Remote control receiver
- K. Mode selection button
- L. Temperature increase button
- M. Power on/off button
- N. Timer button
- O. Temperature decrease button
- P. Lock button
- Q. Display ON/OFF button

OPERATIONS AND FUNCTIONS

Before connecting your appliance to the mains socket, ensure it is either securely wall mounted, or positioned upright on the floor, at least 100cm away from the wall, curtains, furniture or wall coverings.

Insert the mains plug into a suitable wall mains socket, and turn it on. The unit will then enter standby mode as shown by the buzzer emitting a sound. The digital display will show the current ambient temperature and will be lowly lit. Your heater is now ready for use.



Power On/Off Button

- Press the “**Power On/Off**” button on the appliance/remote control once to turn the heater on.
- Press the “**Power On/Off**” button again to put the heater into standby mode.
- **NOTE:** The appliance will only start heating if the ambient temperature of the room is below the set temperature; once the appliance is turned on, if the room temperature is above the set temperature, then the appliance will not heat up until the temperature setting is changed and is set above the ambient temperature of the room.



Mode Button

- When the unit is on, repeatedly press the “**Mode**” button on the appliance/remote control to cycle through the modes: Comfort (☀️) (2000W) -> Eco (ECO) (1000W) -> Anti-frost (❄️) (2000W).
- Once the mode has been set, the corresponding “**Mode**” icon on the digital display will be illuminated.

OPERATIONS AND FUNCTIONS

- The temperature can be set and adjusted in all modes except for Anti-Frost mode.
- In Anti-Frost mode, when the temperature is below 5 degrees, it will enter the frost prevention mode by default with full power heating. When the temperature reaches higher than 7 degrees, the product will stop heating.
- When the set temperature is reached, the heater will stop working and the heating icon (🔥) will no longer be displayed. When the ambient temperature is lower than the set temperature, the heater will start working again, and the heating icon (🔥) will be displayed.



Adjustment Buttons



- When the unit is on, press the “△” or “▽” buttons on the appliance/remote control to adjust the temperature. The temperature display and temperature icon will flash. If you rapidly press the “△” or “▽” buttons, the temperature will change rapidly.
- The temperature that can be set varies by function:
 - **Comfort mode** (☀️): from 5°C to 50°C in 1°C increments.
 - **Eco mode** (🌿): from 5°C to 50°C in 1°C increments.
 - **Anti-frost mode** (❄️): automatically set at 5°C
- After 5 seconds of inactivity the temperature will be set.
- **NOTE:** Anti-frost mode starts the heater on full power when the ambient temperature is lower than 5°C. When the ambient temperature is higher than 7°C, the appliance will stop heating.

OPERATIONS AND FUNCTIONS



Timer Button

- When the power is on, you can schedule a timer to shut off the heater. When the appliance is in standby mode, you can schedule a timer to turn on the heater.
- To set this press the “⌚” button on the appliance/remote control; The timer display and timer icon will flash.
- Use the timer button on the appliance/remote control to adjust the hours on the timer. The timer will cycle through 00, 01, 02... up to 24 hours. If you rapidly press the timer button, the time will change quickly.
- After 5 seconds of inactivity the timer will be set; alternatively, once you have selected your required time press the “⌚” button again to confirm. The timer icon will now remain illuminated until the timer is up.
- If “00” hours is selected then no timer will be selected and the timing indicator will remain un-lit, as before.
- The display will show the selected timer length for 5 seconds after confirmation. The display will then change back to the temperature.
- If you would like to see the remaining time after the timer has been set, press the “⌚” button again. The timer button on the appliance/remote control can now be used to adjust the timer again if required.
- When the time is up, the appliance will automatically stop running and go into standby mode.
- **NOTE:** The heater must remain plugged in for this function to work.

OPERATIONS AND FUNCTIONS

Other Functions

Child-lock Function - Press and hold the “△” button on the appliance for at least 3 seconds, or press the “🔒” button on the remote to switch on the child lock function. Press the 'temperature decrease' button on the appliance or press the 'lock' button on the remote to turn the function off. When turned on, the lock icon (🔒) will appear on the digital display. When this function is activated, all control buttons are disabled except for the ON/OFF button on the remote control and the TIMER button on the appliance (press and hold). When the child-lock is disabled, all button functions are restored, and “🔒” is no longer displayed.

Low-Lit Display Function - 30 seconds after any settings have been confirmed, the LED display will dim. Press the timer button on the appliance for at least 3 seconds or 'Display on/off’ button on the remote to turn off all the display lights. Touch any button and the display will light up the same as before.

Mute Function – The appliance will beep when the buttons are being used. To mute the appliance press and hold the Mode button (≈) on the appliance. The appliance will beep one time, and then the beep sound will be turned off. To turn the volume back on, press and hold the mode button again.

Memory Function - If the heater is turned off then on again using the “Power On/Off” button on the appliance/remote control, it will resume operation in the mode it was in before it was turned off. If the heater is unplugged then plugged back in again, it will resume operation in the mode it was in before it was unplugged.

OPERATIONS AND FUNCTIONS

Other Functions

Tip-Over Protection - If the heater is tipped over, the heater will automatically shut off. Place the heater on a flat, level, and stable surface and turn the heater on again.

Overheat Protection - The power to the heating elements will automatically cut off if the temperature of the heating elements exceeds a certain limit, and the heater will stop operating. Once the appliance has completely cooled, the appliance will then resume operating as normal.

SETTING UP SMART CONTROLS

This appliance is also able to connect to Wi-Fi. Please follow the instructions below to set up your appliance and start using Smart controls:

1. Download the “Smart Life” app onto your smart phone or tablet. You can find the app by scanning the QR code below or searching “Smart Life” in the Google Play or Apple App Store.



Smart Life - Smart Living
Yu xiang
#199 in Lifestyle
★★★★★ 4.9K Ratings
Free

2. Once downloaded, open the app and if you do not already have a Smart Life account, sign up by tapping “Register”. **NOTE:** The device will automatically determine your country/region, however you can change this if required. You are required to enter your phone number or email address and create a password in order to sign up.
3. To add your appliance to the app, your smart phone or tablet will need to be connected to your Wi-Fi network. You then need to put the appliance into Wi-Fi connection mode. To do this, press the “**Power On/Off**” to turn on the unit and then hold down the “**⏻**” button for three seconds. The Wi-Fi icon (📶) on the display will start flashing. The appliance will now be discoverable on the app.

1 device(s) found



Russell Hobbs
2KW Smart Gla...

Add

 
4. Alternatively, if the device does not appear on the app automatically whilst in pairing mode, go onto the app, select “Home”, then press the “+” icon in the top right-hand corner and select “Add Device”. The appliance should now be visible and can be selected.

SETTING UP SMART CONTROLS



NOTE: Your Wi-Fi must be 2.4 GHz to connect, otherwise you will receive a "Failed to Add the Device" error message. For advice on changing your router settings press "Common router setting method".

5. The app will now display its connecting screen, as shown below on the left. The app will confirm that the appliance has been added by showing the screen below on the right. Press "**Done**" to proceed to the control panel. You can now rename the device, share it with family members, or proceed to programming your appliance.

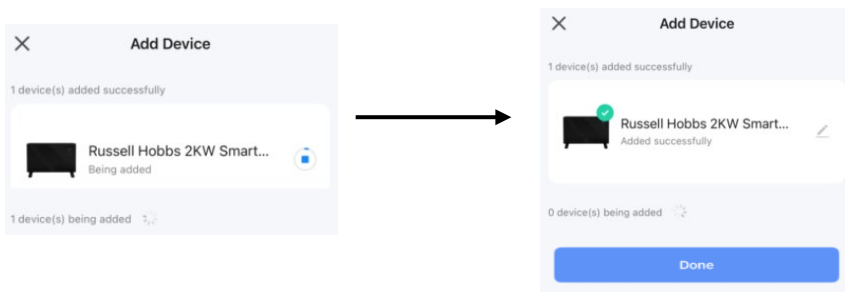

NOTE: If the heater fails to connect, press and hold the "⏏" button for a further three seconds. The appliance will then switch to its secondary connection mode. The heater has two connection modes: one where the "📶" icon flashes slowly (once per second) and one where the "📶" icon flashes rapidly (three times per second). Most devices connect using the fast-flashing mode.

When the heater is connected, it will beep and display a solid "📶" icon. The app will confirm that the heater has been added.

NOTE: The appliance must be plugged in and switched on at the wall socket before smart setup can be completed.

 
 
USING THE SMART CONTROLS

Once set up on the app, your appliance can be operated from your smart phone or tablet from anywhere, as long as the appliance remains plugged in and switched on at the wall.

On the home page, select your appliance to access to controls.

Please see all the controls available on the app below:



1. To turn the appliance on, press the “Switch” button circled below.
2. You can now adjust the temperature using the “+” and “-” buttons circled below.

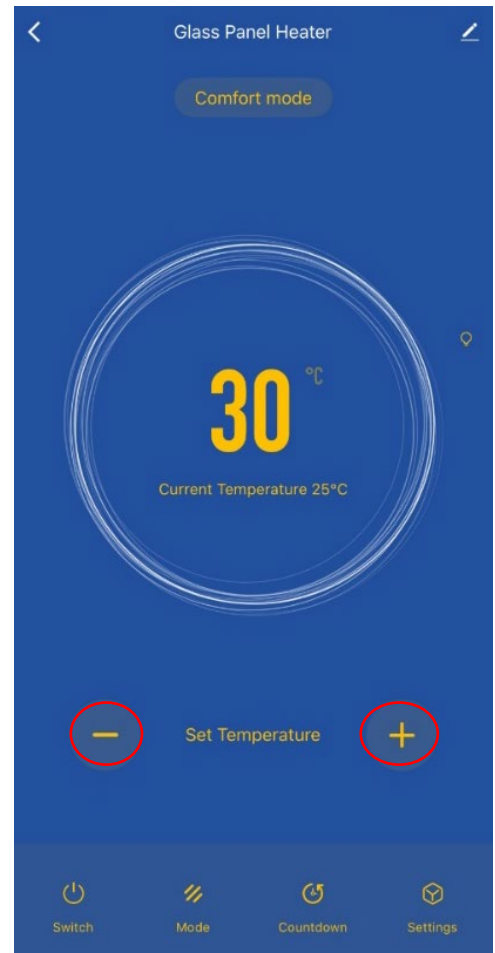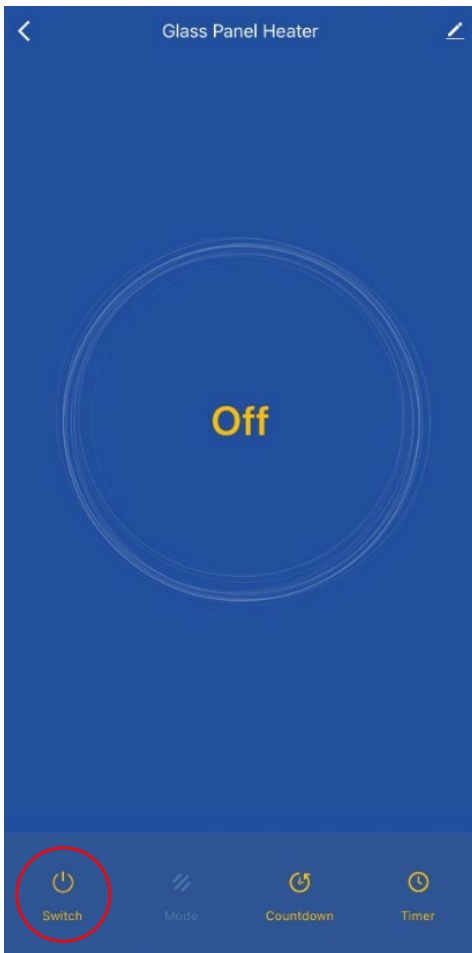



3. The temperature you are setting is displayed in the centre of the screen, and the current temperature of the room is shown below it.

USING THE SMART CONTROLS

  4. To adjust the mode of the appliance, press the “Mode” button circled below, and then select your desired mode.

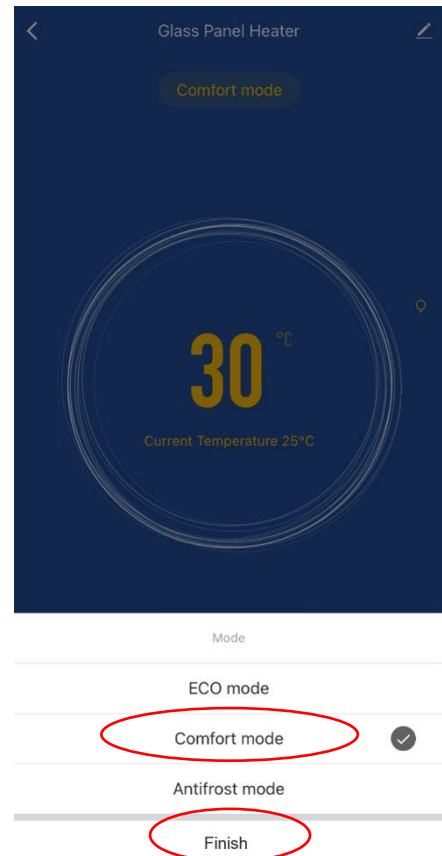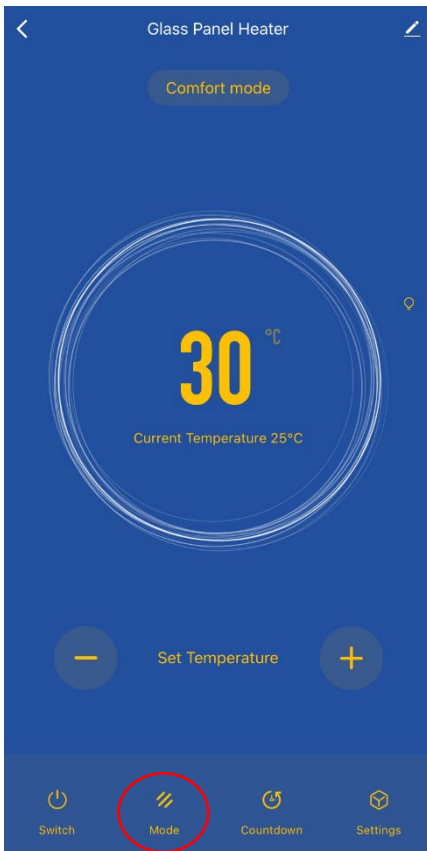


  5. By pressing the “Countdown” button circled below on the control bar, you’re able to set a countdown timer for your appliance. Select the number of hours. Once set, after that period of time, the appliance will turn off and go into standby mode.

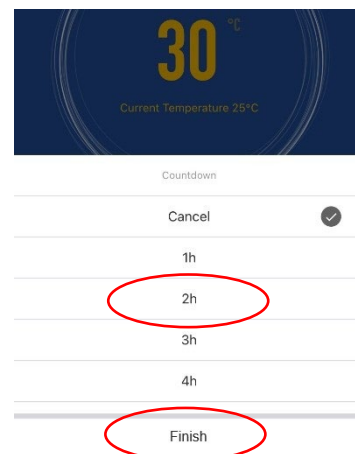


USING THE SMART CONTROLS

 6. Pressing the settings button will take you to the screen shown below on the right. By pressing the toggles, you are able to turn the child lock on and off, turn the lights on the display of the appliance on and off, and also turn the sound on and off.

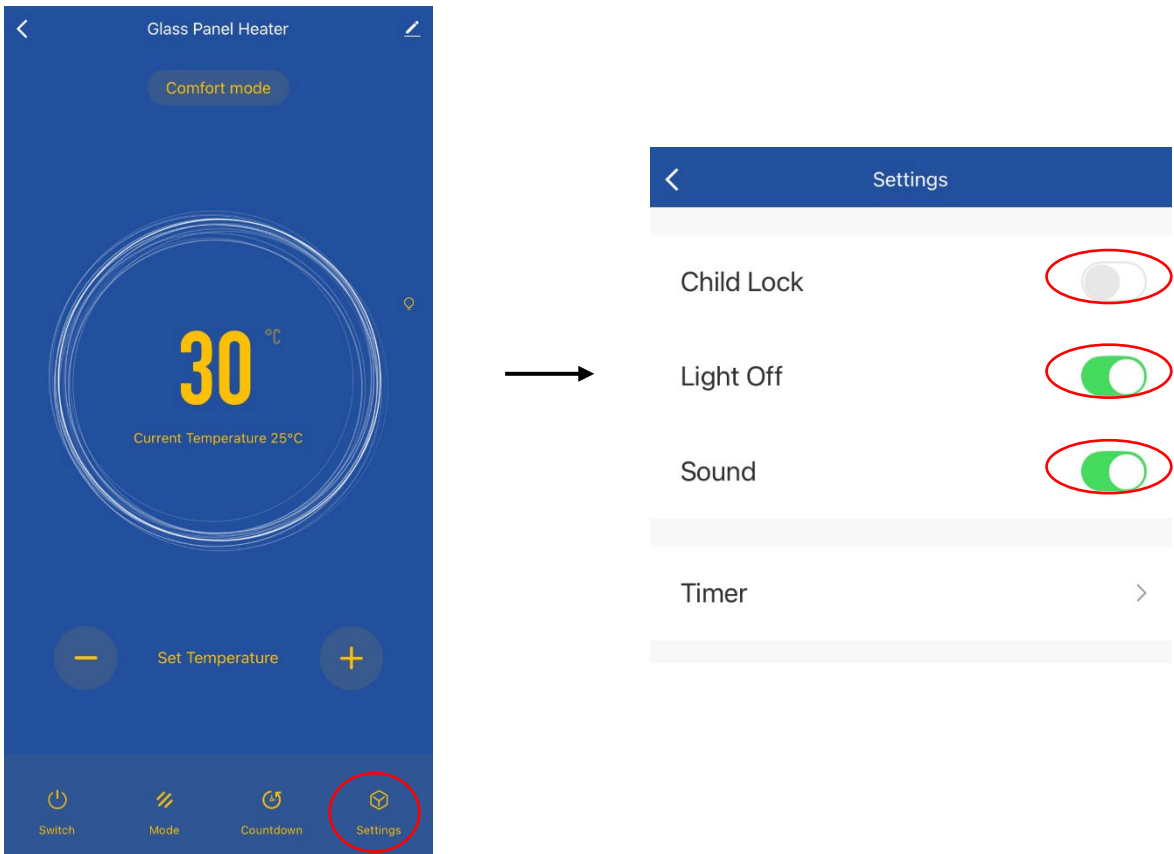


 7. On the Smart Life App, you're also able to set the 24 hour programmable timer. To access this, press the "Timer" button shown below on the settings screen.

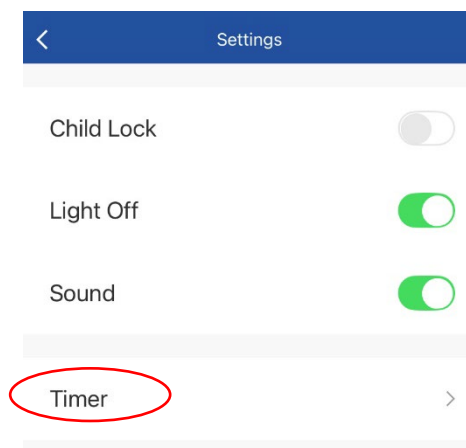


USING THE SMART CONTROLS

 8. This will take you to the “Schedule” screen. Press the “Add Schedule” button at the bottom of the screen, which will take you to the screen on the right. Using this, select the time (this is a 24 hour clock), and select if you would like the appliance to switch “ON” or “OFF” at that time. If you would like to be notified of this, switch this on here.

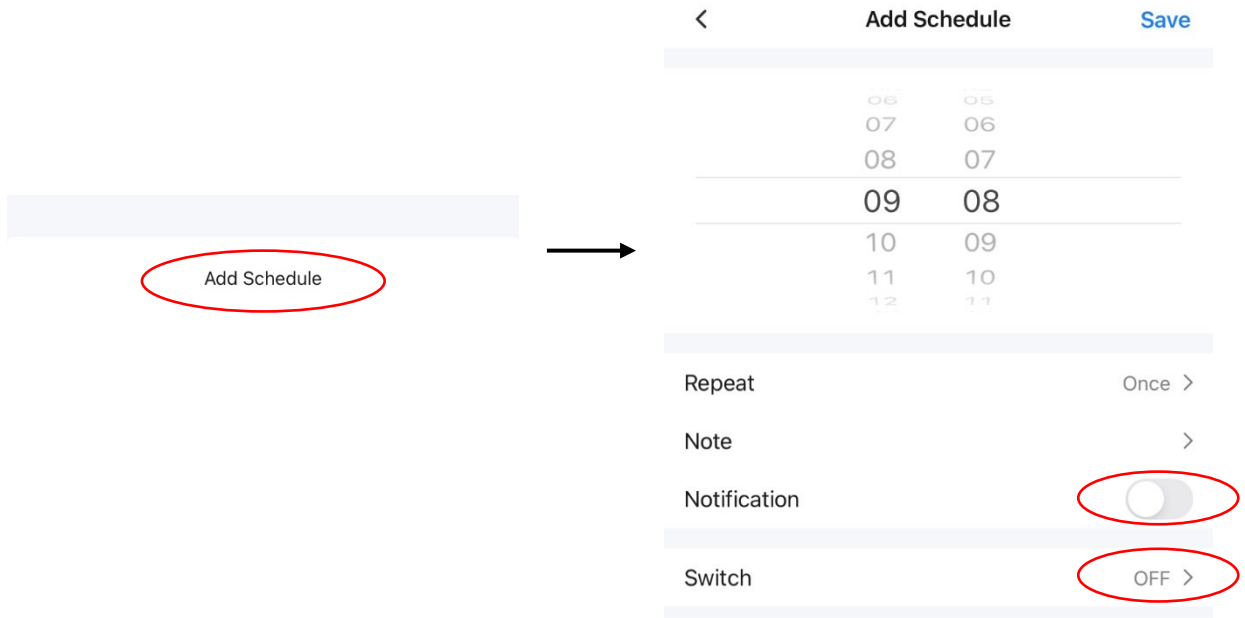


 9. You can also set the above controls to repeat on various days of the week. Select “Repeat”, and then select all of the days you would like this to repeat.

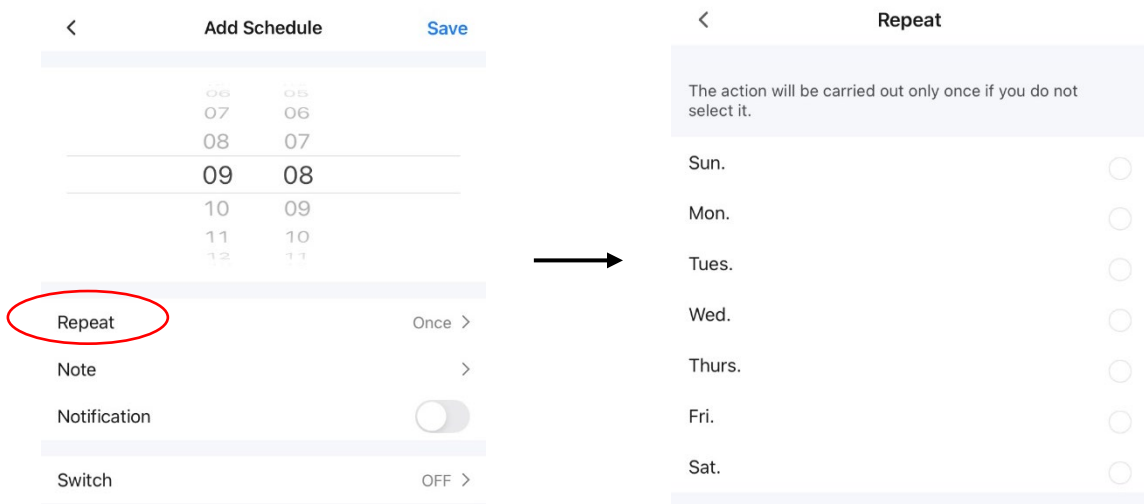


USING THE SMART CONTROLS

 10. Then press “Save” in the top right-hand corner. You can add multiple schedules, as shown in the image below on the right.

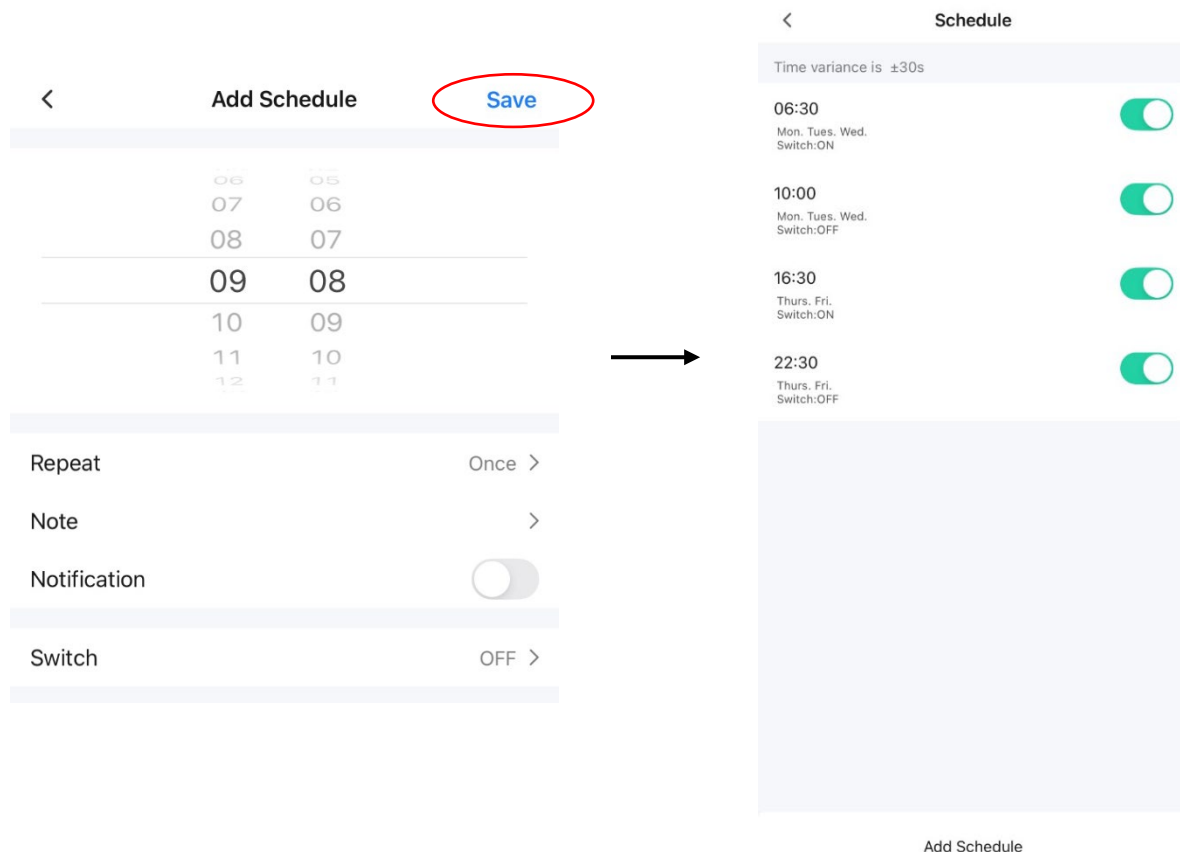

 11. If you want to delete the schedule you have set, depending on the operating system of your phone/tablet, you will need to either swipe left and press “Delete”, as shown below, or long press the schedule and then press “Confirm”, also shown below.

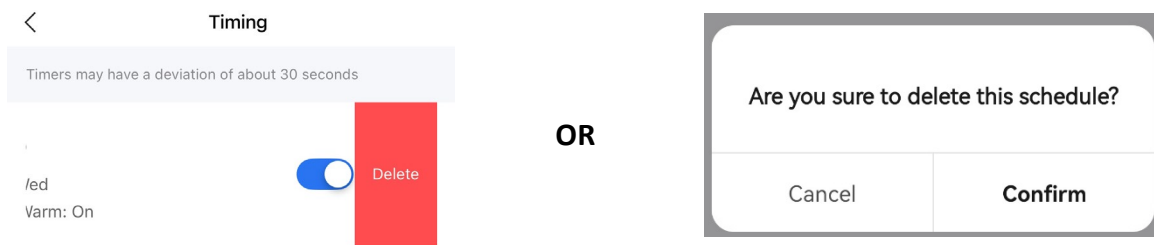


Once set up in the Smart Life App, this appliance can also be used with Google Assistant and Amazon Alexa. For suggestions of some commands to try, please see the tables on the following pages.

CONNECTING TO ALEXA & GOOGLE


Once set up in the Smart Life App, this appliance can also be used with Google Assistant and Amazon Alexa. Please note that to link either of these, you must have the respective applications downloaded onto your device and an account set up with them first.

Follow the instructions below to link the Smart Life App to Google Assistant and Amazon Alexa:

 1. Open the control panel for your appliance on the Smart Life App. In the top right hand corner of the screen is the edit icon seen below. Pressing this will take you to the information screen seen below on the right. Press the “Third-party Control” button, as circled.

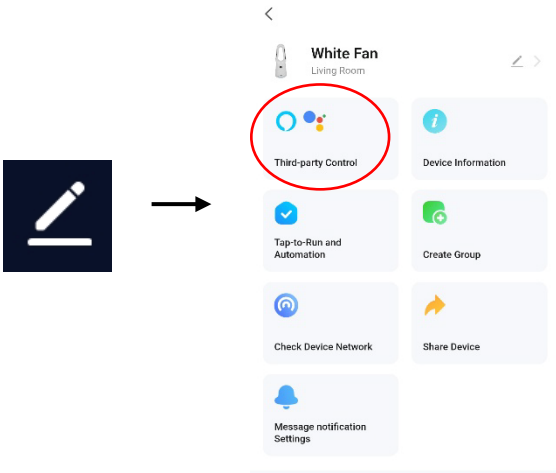


 2. The “Third-party Control” screen will now be displayed. Select the service you would like to connect to from the displayed list. This will take you to the following screen, where you can link to the service.

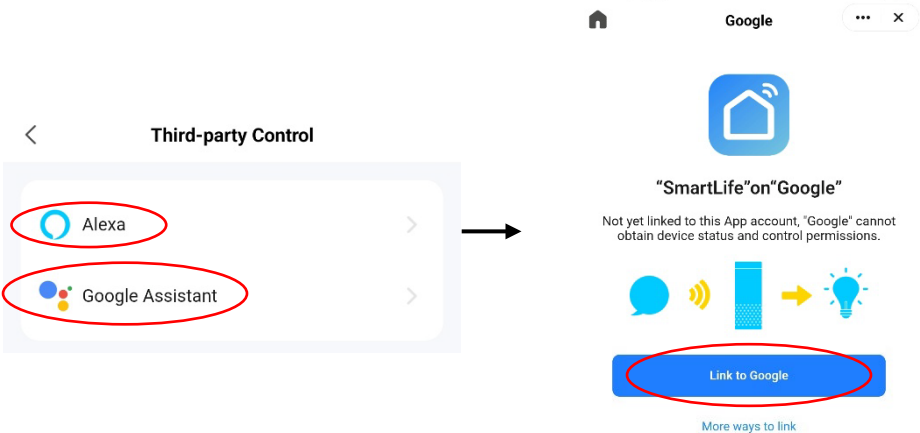

CONNECTING TO ALEXA & GOOGLE

 3. The corresponding application will be launched. To complete the connection press “Link”. You will then be taken back to the Smart Life App, where you will see the below screen.

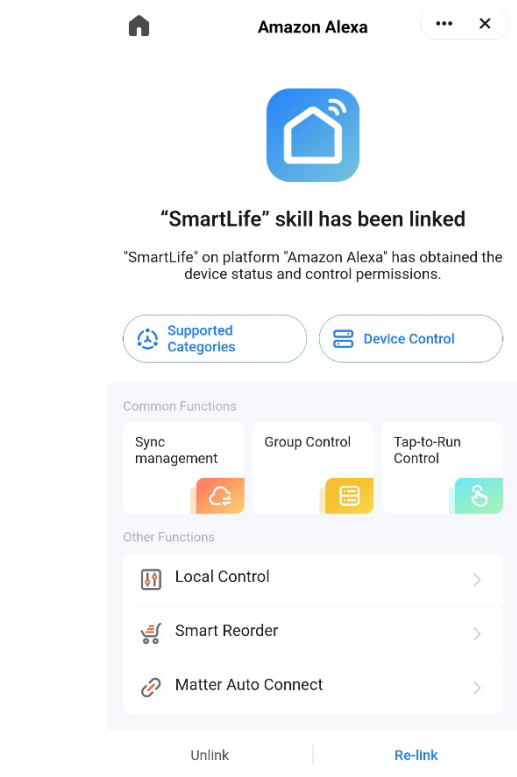

NOTE: The instructions above are the same for linking both Google Assistant and Amazon Alexa.

NOTE: Once linked, any new devices added to the Smart Life App should automatically link across to Google Assistant and Amazon Alexa also.

Connection to these services allows voice commands to be used to control your appliance.

For examples of commands, please see the following page/s.

USING THE VOICE COMMANDS

Voice Command Suggestions

Below are some example voice commands to try.

These commands may be updated or expanded in the future.

Amazon Alexa

Feature	Command Examples	Supported Languages
Ask about the temperature	"what is the temperature of the glass panel heater"	Spanish(MX), English(IN), Hindi(IN), Arabic(SA), Spanish(ES), French(CA), English(AU), Portuguese(BR), Italian(IT), German(GE), English(CA), English(US), Japanese(JP), French(FR), Spanish(US), English(UK)
Set the Mode	"set glass panel heater to heat mode" "set glass panel heater to Cool mode"	Spanish(MX), English(IN), Hindi(IN), Arabic(SA), Spanish(ES), French(CA), English(AU), Portuguese(BR), Italian(IT), German(GE), English(CA), English(US), Japanese(JP), French(FR), Spanish(US), English(UK)
Set the temperature	"set the glass panel heater to twenty five degrees"	Spanish(MX), English(IN), Hindi(IN), Arabic(SA), Spanish(ES), French(CA), English(AU), Portuguese(BR), Italian(IT), German(GE), English(CA), English(US), Japanese(JP), French(FR), Spanish(US), English(UK)
	"Alexa, what is the target temperature of the glass panel heater?"	
Power switch	"turn on the glass panel heater"	Spanish(MX), English(IN), Hindi(IN), Arabic(SA), Spanish(ES), French(CA), English(AU), Portuguese(BR), Italian(IT), German(GE), English(CA), English(US), Japanese(JP), French(FR), Spanish(US), English(UK)
	"turn off the glass panel heater"	
	"turn on the glass panel heater after 30 seconds"	
	"turn on the glass panel heater at 10 o'clock"	

It may be possible to set the mode using voice commands, however the titles of the modes vary between the device and Amazon Alexa. Please see below:

Device Mode Title	Amazon Alexa Mode Title
Comfort Mode	Heat Mode
Eco Mode	ECO Mode
Anti-Frost Mode	Auto Mode

USING THE VOICE COMMANDS

Google Assistant

Feature	Command Examples	Supported Languages
Ask about the temperature	"what is the current temperature of the glass panel heater"	Japanese, Thai, German, Norwegian, Hindi, Dutch, Danish, Chinese, Indonesian, English, Korean, Swedish, Portuguese(BR), Spanish, French, Italian
Set the Mode	"Turn off auto mode." "change to eco mode" "is the heating on?" "what mode is the glass panel heater on"	Japanese, Thai, German, Norwegian, Hindi, Dutch, Danish, Chinese, Indonesian, English, Korean, Swedish, Portuguese(BR), Spanish, French, Italian
Set the temperature	"set the glass panel heater to twenty five degrees"	Japanese, Thai, German, Norwegian, Hindi, Dutch, Danish, Chinese, Indonesian, English, Korean, Swedish, Portuguese(BR), Spanish, French, Italian
	"Google, what is the target temperature of the glass panel heater?"	
Set the temperature	"cool down in the living room" "cool down the house a little" "increase the temperature of the glass panel heater" "make it 2 degrees warmer" "make it cooler by 2 degrees" "make the temperature warmer a little bit" "raise the temperature downstairs by 2 degrees" "raise the temperature by 5 degrees" "set 35 degrees on the temperature" "set my temperature to 40 degrees" "set the heat to 28" "warm up the living room" "warm up the living room a little"	Japanese, Thai, German, Norwegian, Hindi, Dutch, Danish, Chinese, Indonesian, English, Korean, Swedish, Portuguese(BR), Spanish, French, Italian
Power switch	"turn on the glass panel heater"	Japanese, Thai, German, Norwegian, Hindi, Dutch, Danish, Chinese, Indonesian, English, Korean, Swedish, Portuguese(BR), Spanish, French, Italian
	"turn off the glass panel heater"	

It may be possible to set the mode using voice commands, however the titles of the modes vary between the device and Google Assistant. Please see below:

Device Mode Title	Google Assistant Mode Title
Comfort Mode	Hot Mode
Eco Mode	ECO Mode
Anti-Frost Mode	Auto Mode

CLEANING AND CARE

WARNING: Electrical Shock Hazard.

Before you clean the appliance, disconnect the mains plug from the wall socket.

- Allow the appliance to cool down completely before cleaning.
- Do not immerse cord, plug or appliance in any liquid or allow moisture to come into contact with electrical parts.
- Clean the outer surface using a moist cloth and wipe over with a dry, soft cloth.
- Do not use harsh detergents, abrasives or spray on cleaners.
- Don't allow water to seep into the openings or come into contact with electrical connections.
- Allow sufficient drying time before operating again.
- Clean the air inlets and outlets regularly with a vacuum cleaner using the brush attachment (with regular use, at least twice a year).
- When the appliance is not in use. We recommend that the heater is re-packed in its original packaging and stored in a cool, dry place.

PROBLEM SOLVING

My appliance does not work when I turn it on:

1. Check that your appliance is plugged in and the power is turned on at the mains socket.
2. Try another mains socket.
3. Check the appliance is in an upright position.
4. Check that the heat and temperature setting has not been set too low.
5. If the appliance still doesn't work, do not try to repair it yourself.
6. Check the timer setting (if your model has a timer).

If your appliance power is automatically cut off, follow the step below:

1. Unplug your appliance from the mains socket and allow it to completely cool down.
2. Inspect your appliance. Clean the air inlet and air outlet with a vacuum cleaner if necessary. If there are any signs of physical damage (e.g. melting, or burning of the case), do not attempt to use the appliance. Please leave all maintenance work to qualified personnel.
3. Plug in the appliance and switch it on again. If it cuts off again, move the appliance to a better ventilated location.

If your appliance shows the error code “EH” or “EL”, follow the steps below:

1. Turn the appliance off at the mains.
2. Turn the power back on. If the fault persists contact customer services.

GUARANTEE AND CUSTOMER SERVICES

This product is guaranteed for **12 months** from the date of the original purchase. If any defect arises due to faulty materials or workmanship, the faulty product must be returned to the place of purchase. Refund or replacement is at the discretion of the retailer.

The following conditions apply:

- The product must be returned to the retailer with the original proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide and any other instructions for use which are supplied.
- It must be used for domestic purposes only and for its intended use.
- This warranty does not cover wear and tear, damage, misuse or consumable parts.

This does not affect your statutory rights.

Customer Services & Spare Parts:

Region	Contact	Website
UK & Northern Ireland	0345 209 7461	mda.russellhobbs.com
Ireland	1 800 938982	ie.mda.russellhobbs.com
Rest of Europe	europe@productcaregroup.com	de.mda.russellhobbs.com fr.mda.russellhobbs.com es.mda.russellhobbs.com it.mda.russellhobbs.com nl.mda.russellhobbs.com

SPARE PARTS

To check the availability of the following spare parts, simply contact our friendly Customer Services team using the details provided on the previous page.

Feet and screws
Remote control
Wall mounting kit

CONNECTION TO THE MAINS SUPPLY

 
This appliance is designed to operate from a mains supply of 230V~50Hz/60Hz.

Check that the voltage marked on the product corresponds with your supply voltage.

How to change the fuse

1. Slot the end of a screwdriver into the recess in the fuse holder of the plug.
2. Pull the fuse holder upwards until free of the plug and slide the fuse out.
3. Replace the fuse and replace fuse holder, pushing down until locked into place.

Important: Only ever use a 13 amp fuse.

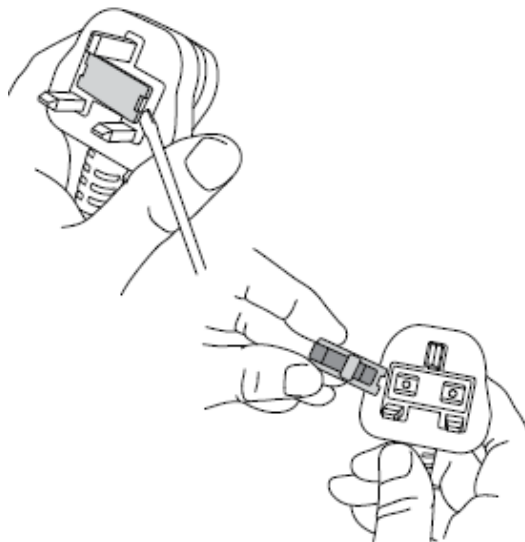

SPECIFICATION

Model number	RHPANH2006 (W) (B)
Rated voltage	230V ~ 50Hz/60Hz
Power consumption	2000W
Product dimensions (cm)	(H)51 x (W)77 x (D)23.7

For Portable (Freestanding):

Information requirements for electric local space heaters					
Model number	RHPANH2006 (W) (B)				
Item	Symbol	Value	Unit	Item	Unit
Heat output			Type of heat output/room temperature control		
Nominal heat output	Pnom	2.000	kW	Single stage heat output and no room temperature control	No
Minimum heat output (indicative)	Pmin	1.000	kW	Two or more manual stages, no room temperature control	No
Maximum continuous heat output	Pmax,c	2.000	kW	With mechanic thermostat room temperature control	No
				With electronic room temperature control	No
Power consumption			Electronic room temperature control plus week timer		
In off mode	Po	0.00	W	Electronic room temperature control plus day timer	Yes
In standby mode	Psm	0.29	W	Other control options (multiple selections possible)	
In idle mode	Pidle	0.78	W	Room temperature control, with presence detection	No
In network standby	Pnsm	0.78	W	Room temperature control, with open window detection	Yes
Standby mode with display information or status			No	Distance control option	Yes
Seasonal space heater energy efficiency in active mode	ηs,on	95.0	%	Adaptive start control	No
				Working time limitation	Yes
				Black bulb sensor	No
				Self learning functionality	No
				Control accuracy	No
Contact details	Product Care Trading Ltd, Unit 1 Green Bank Business Park, Swan Lane, Hindley Green, Wigan, WN2 4AY, United Kingdom				
	Product Care (Ireland) Ltd, Unit 3D North Point House, North Point Business Park, New Mallow Road, Cork, T23 AT2P, Ireland				

SPECIFICATION

For Fixed (Wall-Mounted):

Information requirements for electric local space heaters					
Model number	RHPANH2006 (W) (B)				
Item	Symbol	Value	Unit	Item	Unit
Heat output			Type of heat output/room temperature control		
Nominal heat output	Pnom	2.000	kW	Single stage heat output and no room temperature control	No
Minimum heat output (indicative)	Pmin	1.000	kW	Two or more manual stages, no room temperature control	No
Maximum continuous heat output	Pmax,c	2.000	kW	With mechanic thermostat room temperature control	No
				With electronic room temperature control	No
Power consumption				Electronic room temperature control plus week timer	No
In off mode	Po	0.00	W	Electronic room temperature control plus day timer	Yes
In standby mode	Psm	0.29	W	Other control options (multiple selections possible)	
In idle mode	Pidle	0.78	W	Room temperature control, with presence detection	No
In network standby	Pnsm	0.78	W	Room temperature control, with open window detection	Yes
Standby mode with display information or status			No	Distance control option	Yes
Seasonal space heater energy efficiency in active mode	$\eta_{s,on}$	94.0	%	Adaptive start control	No
				Working time limitation	Yes
				Black bulb sensor	No
				Self learning functionality	No
				Control accuracy	No
Contact details	Product Care Trading Ltd, Unit 1 Green Bank Business Park, Swan Lane, Hindley Green, Wigan, WN2 4AY, United Kingdom				
	Product Care (Ireland) Ltd, Unit 3D North Point House, North Point Business Park, New Mallow Road, Cork, T23 AT2P, Ireland				

NOTES

NOTES



 
Russell Hobbs

Made by Product Care Trading Limited under license from Spectrum Brands (UK) Limited. Product Care Trading Ltd, Unit 1 Green Bank Business Park, Swan Lane, Hindley Green, Wigan, WN2 4AY, United Kingdom / Product Care (Ireland) Ltd, Unit 3D North Point House, North Point Business Park, New Mallow Road, Cork, T23 AT2P, Ireland. Russell Hobbs is the registered trademark of Spectrum Brands (UK) Ltd.

Apple, Apple logo, and App Store are trademarks of Apple Inc, registered in the U.S. and other countries.

Google, Google Play and Google Home are trademarks of Google LLC.

Amazon, Alexa and all related logos are trademarks of Amazon.com, Inc. or its affiliates.

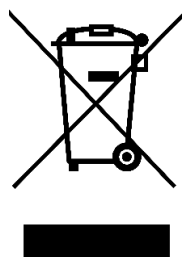

The 'wheellie bin' symbol is known as the 'Crossed-out wheellie bin Symbol'.

When this symbol is marked on a product/batteries, it means that the product/batteries should not be disposed of with your general household waste. Only discard electrical/electronic/battery items in separate collection schemes, which cater for the recovery and recycling of materials contained within. Your co-operation is vital to ensure the success of these schemes and for the protection of the environment. For your nearest disposal facility, visit www.recycle-more.co.uk or ask in store for details.

SEDEX – Connecting businesses and their global suppliers to share ethical data and enabling improvement in ethical performance. Visit www.sedex.org.uk for further information.

We reserve the right, due to possible changes to design, to alter the instruction manual without prior notice.

Revision 1.9