 


ZANUSSI

11 Fin Oil Filled Radiator with Touch Control

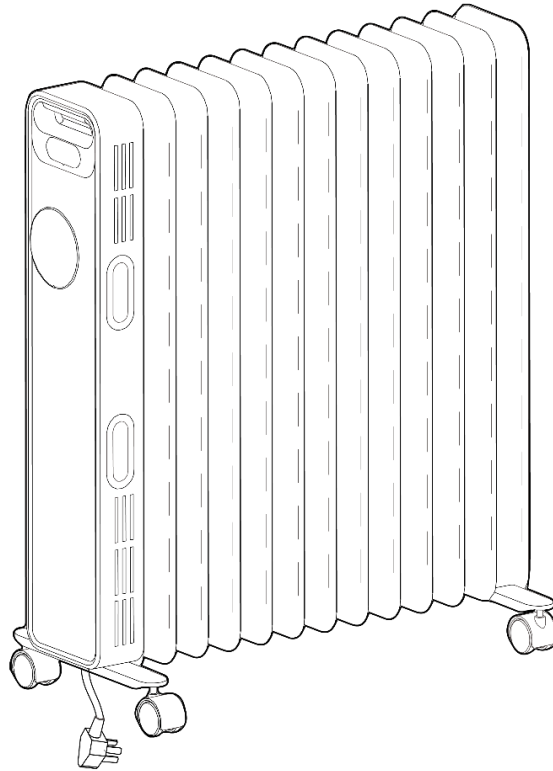

Model Number:
ZOFR5005 (B) 2300W

Product only suitable for well insulated spaces or occasional use

For Customer Services & Spare Parts please call **0330 1230 597**
Or visit us at **zanussicomfortandoutdoors.com**

PLEASE RETAIN
FOR FUTURE REFERENCE

CONTENTS

	Page(s)
Safety Instructions	3 - 6
Battery Warnings	7 - 8
Replacing the Battery	9
Product Overview	10
Base Assembly	11
Using your Heater	12 - 15
Safety Features	16
Cleaning and Care	17
Problem Solving	18
Guarantee and Customer Services	19
Connection to the Mains Supply	20
Specification	21
Notes	22 - 23
Disposal Information	24

SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be observed, including the following:

- Read all instructions.
- Check that the your mains voltage corresponds with the rating on the appliance.
- The appliance must not be left unattended while it is connected to the mains supply.
- This appliance must be positioned upright on the floor away from curtains, furniture or wall coverings and other flammable items.
- Do not touch hot surfaces. Use the handle or the controls.
- To protect against electrical shock do not immerse cord, plug, or appliance in water or other liquid. Do not operate with wet hands.
- Do not let the cord hangover the edge of a worktop, table etc. or touch hot surfaces.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.
- The use of accessory attachments not recommended by the appliance manufacturer may cause fire, electric shock or injury.
- This appliance must not be immersed
- To disconnect remove the plug from the mains outlet. Do not pull the plug out by the cord.
- Never remove parts from the appliance, such as the feet, screws and so on.
- Never use the appliance near a bath, shower or a swimming pool.
- Never use the appliance on or near hot surface.
- Never move the appliance by pulling the cord.
- Never place flammable objects or clothing on top of the appliance.
- Never move the heater when it is operating. Turn the heater off before move it.
- Allow at least 15cm safe area around the appliance on the top, at the front and sides to provide good air circulation.
- Prevent overheating of the appliance by keeping the fins clean and free of anything that may cause blockage. Check all fins from time to time for accumulated dust. DO NOT COVER.
- **Warning:** Do not lean, sit or stand on the unit.
- **Note:** There is a protective film of grease/oil on the appliance; this should be wiped away with a damp cloth before use and after initial usage (Ensure you dry the product with a soft cloth or paper towel after it has been wiped).



WARNING: In order to avoid overheating, do not cover the heater.

SAFETY INSTRUCTIONS

- Never use the appliance in a room with explosive gas such as petrol, or while using any kinds of flammable glues, sprays or solvents.
- The appliance must not be used with an extension lead.
- Do not place any part of your body near the air inlet, outlet or on the fins ,to avoid personal injury, electric shock or fire.
- If overheating should occur, the built-in overheating safety device will shut the appliance off.
- Caution: Some parts of this product can become very hot and cause burns. Particular attention must be given when children vulnerable people are present.
- Do not insert any foreign objects into the grill.
- Keep all grills clear of any draped fabric or curtains.
- The appliance must not be located immediately below a mains socket. Do not use the appliance with a programmer, timer or any other device that switches the appliance on automatically. A fire risk exists if the appliance is covered or positioned incorrectly.
- Do not operate this appliance for any thing other than its intended use.
- This appliance is not intended for commercial use
- **This product is intended for household use only.** Do not use outdoors.
- This product is only intended for heating.
- **Warning:** It is hazardous for anyone other than a competent person to carry out any service or repair operation which involves the removal of a cover which gives protection against exposure to electrical parts.
- **Warning:** Children should not use this appliance. Close supervision is necessary when any appliances are used near children.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

SAFETY INSTRUCTIONS

- **Warning:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to make sure that they do not play with the appliance.
- This heater is filled with a precise quantity of special oil. Repairs requiring opening of oil-container are only to be made by the manufacturer or his service agent who should be contacted if there is an oil leak. When scrapping the heater, follow the regulations concerning the disposal of oil.
- Use this heater on a horizontal and stable surface, or fix it to the wall, as applicable.
- **Warning:** Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is present.
- **Warning:** To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1 metre from the air outlet.

Electrical Safety

THIS APPLIANCE MUST BE PLUGGED INTO AN EARTHED SOCKET

- Before switching on, make sure that the voltage of your electricity supply is the same as that indicated on the rating plate. This product is designed to operate on 220 – 240V AC; 50Hz. Connection to any other power source may damage the unit.
- This product may be fitted with a non re-wireable plug. If it is necessary to change the fuse in the plug, the fuse cover must be refitted. If the fuse cover becomes lost or damaged, the plug must not be used until a suitable replacement is obtained.

SAFETY INSTRUCTIONS

- If the plug has to be changed because it is not suitable for your socket, or becomes damaged in any way, it should be cut off and an appropriate plug fitted. This should be carried out by a qualified electrician. The plug removed must be disposed of safely, as insertion into a 13 Amp socket is likely to cause an electrical hazard.

Oil Safety

- This heater is filled with a precise quantity of special oil. Repairs requiring opening of oil-container are only to be made by the manufacturer or his service agent who should be contacted in the unlikely event of an oil leak.
- When disposing of the heater, follow the regulations concerning the disposal of oil.

BATTERY WARNINGS

This appliance comes with two alkaline batteries fitted into the remote.

- Incorrect use of batteries may result in fire, explosion, leakage of dangerous substances, or other hazards.
- Do not throw batteries into the fire and do not expose them to high temperatures.
- Do not open, deform or short-circuit the batteries, or the contained chemicals can leak out of them.
- Do not try to recharge batteries. Recharging is only allowed for batteries which are marked as “rechargeable”. There is a danger of explosion!
- Regularly check the batteries as leaking chemicals can cause heavy damage to the device. When dealing with damaged or leaking batteries, exercise a particular caution.
- Risk of chemical burns! Wear protective gloves.
- Chemicals escaping from a battery can cause skin irritation.
- In case of contact with skin, rinse with plenty of water.
- In case of contact with eyes, do not rub your eyes, but rinse with water and immediately visit a doctor.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- Different types of batteries or accumulators as well as new and old batteries must not be used together.

BATTERY WARNINGS

- When inserting the battery, pay special attention to the correct polarity. Wrong polarity can cause risk of bursting.
- Remove the batteries from the unit if you are not going to use it for a long time or if you want to store it.
- Insert the batteries according to the polarity.
- Do not allow children to replace batteries without supervision by an adult.
- Always choose the right size and the right battery type for the intended use.
- Clean the battery contacts and the contacts of the equipment before installing the batteries.
- Remove used up batteries immediately.
- Do not dismantle the batteries.
- If the battery compartment does not close securely, do not use the remote control anymore and keep it away from children.
- Please avoid extreme conditions and temperatures which can adversely affect the batteries, e.g. placing them on radiators/direct solar.
- The connection terminals must not be short-circuited.
- Please dispose of or recycle the remote-control batteries according to local government guidelines.



CAUTION: Batteries are a chemical burn and choking hazard. Keep batteries away from children.

REPLACING THE BATTERY

 
This appliance comes with 2 AAA (1.5V) batteries which are to be fitted into the remote control.



CAUTION: Batteries are a chemical burn and choking hazard. Keep batteries away from children.


- Ensure that the battery compartment is always completely secure. If the battery compartment does not close securely, stop using the remote, remove the batteries, and keep it away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention. Dispose of cells properly and keep away from children. Even used cells may cause injury.
- Please dispose of or recycle the remote control batteries according to municipal or provincial laws.
- Do not throw batteries into the fire and do not expose them to high temperatures.
- Do not try to recharge the batteries.
- When inserting the battery, pay special attention to the correct polarity.
- Remove the batteries from the unit if you are not going to use it for a long time or if you want to store it.

To insert the batteries into the remote control or replace the batteries, follow the instructions below:

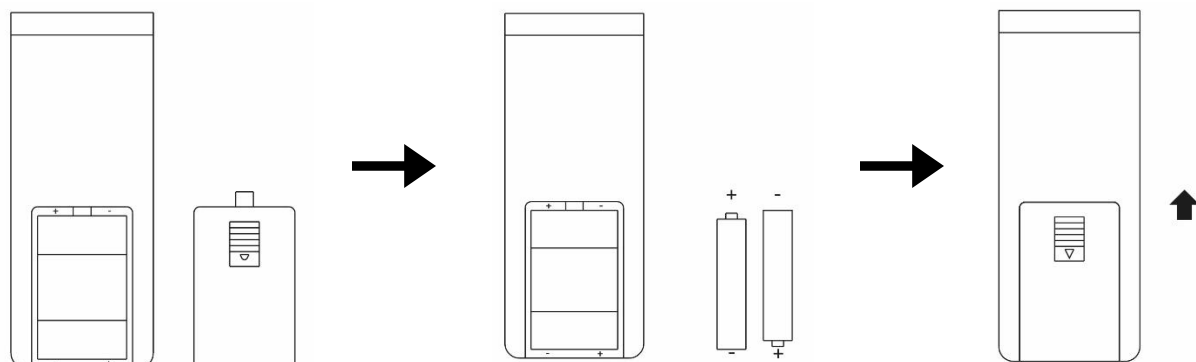

1. Remove the cover from the back of the remote.
2. Insert 2 AAA (1.5V) batteries as shown above.
3. Replace the cover onto the back of the remote.

 PRODUCT OVERVIEW

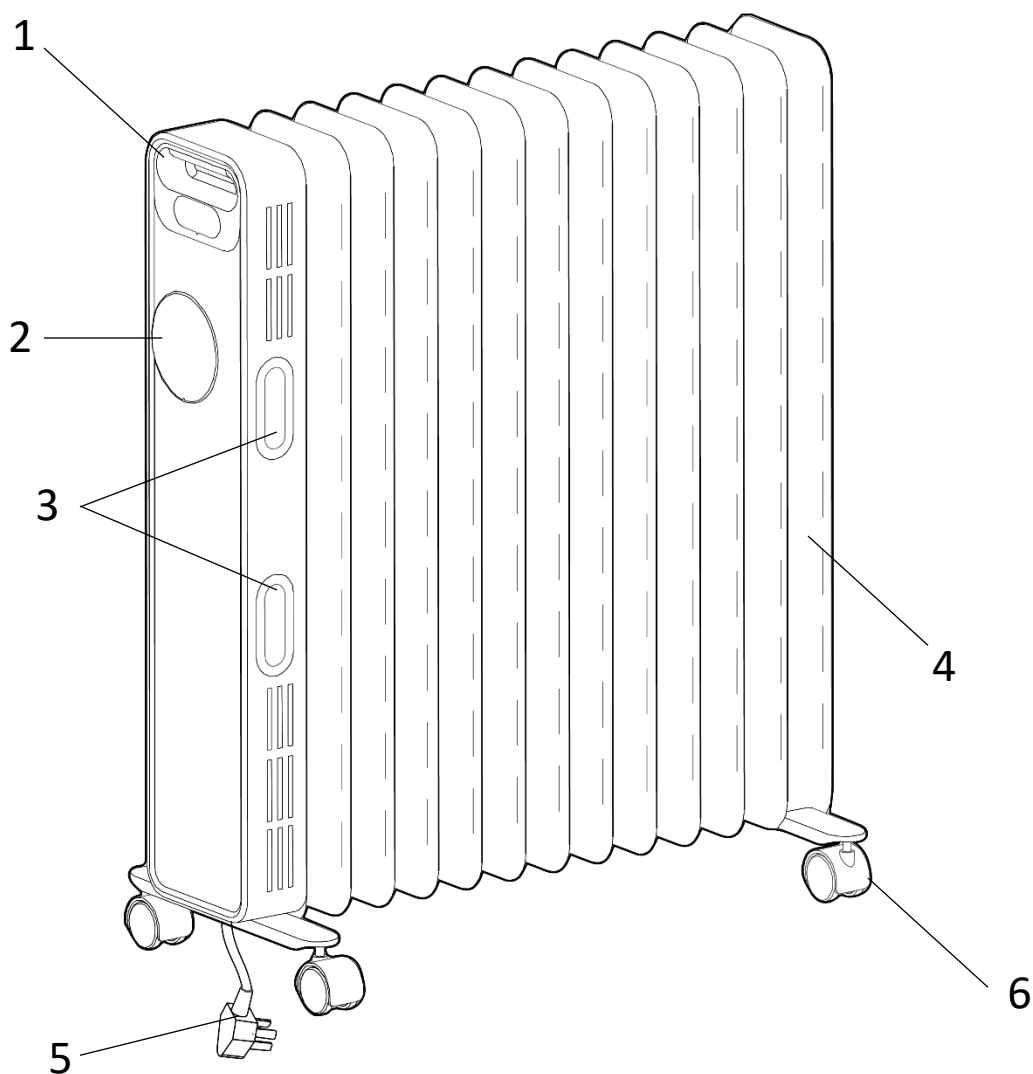

- 1. Carry handle
- 2. Control panel
- 3. Cord wrap
- 4. Fins
- 5. Power cord
- 6. Castors

BASE ASSEMBLY

1. Turn the heater upside down.
2. As shown in Fig. 1, align the mounting holes on the caster assembly units with the screws on the caster pad plates, one at the bottom of the control panel and one at the bottom of the end radiator fin.
3. As shown in Fig. 2, proceed to place the 4 butterfly nuts onto the each of the 4 screws and tighten as much as possible.
4. Turn the heater around and check that it is stable on the ground, if not repeat the above process again.

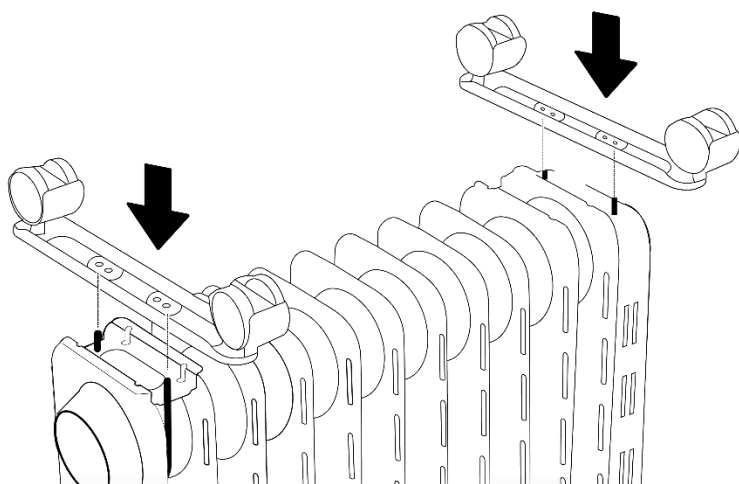 


Fig. 1


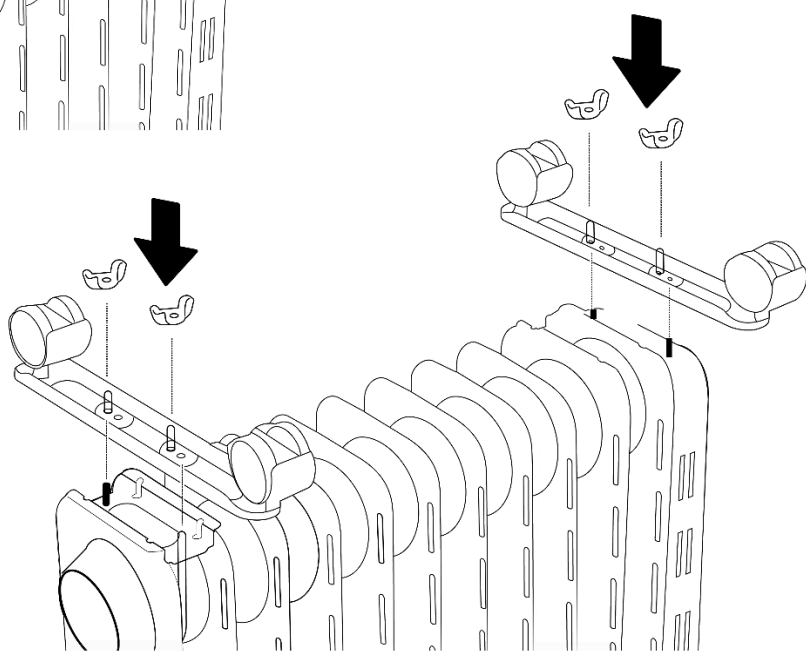 


Fig. 2

 USING YOUR HEATER

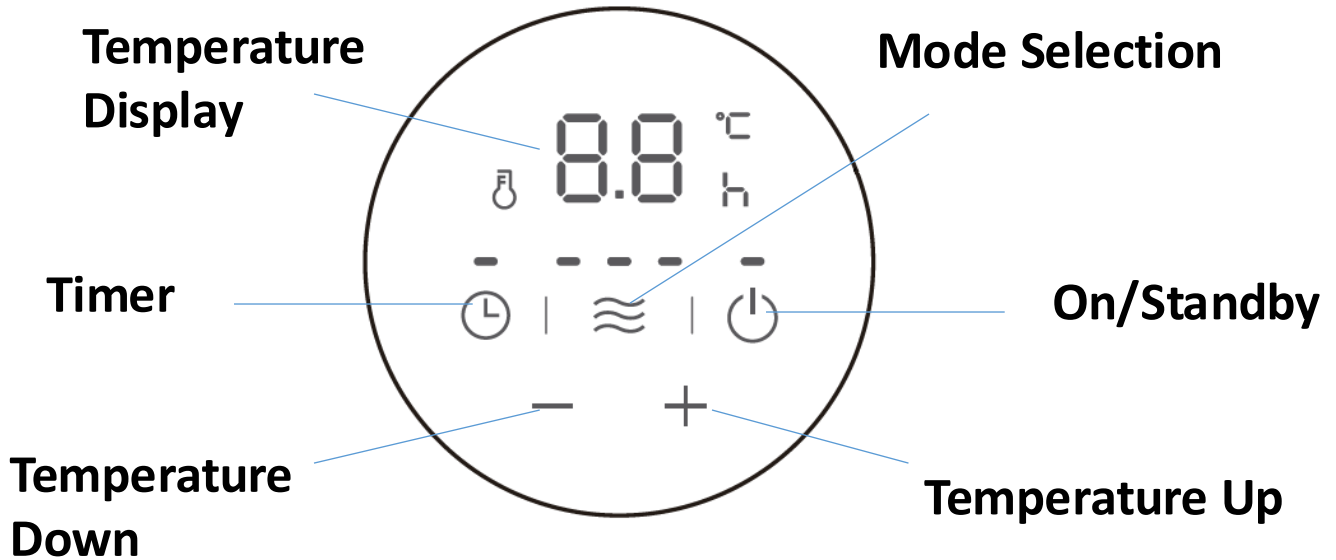

First Time Setup

1. Plug in the appliance, you will hear an audible 'beep' for around 2 seconds.
2. Press the On/Standby [] button to power the appliance on.
3. Press the 'Mode' [] button to select a setting – Low/Medium/High Power.
4. Press the On/Standby [] button again to engage Standby mode.

USING YOUR HEATER

Operating Instructions

Quick Use

Press the On/Standby Button to turn on the heater. The default setting is high power at 35°C.

Press and hold the Temperature Up [+] or the Temperature Down [-] to quickly set the heater to a desired temperature. After 1 minute, the temperature setting screen will exit.

Setting a Timer

Your heater can be scheduled to switch on at a certain amount of time.

When the Heater is in Standby Mode, press the Timer button [⌚] and then set the time by pressing the '+' or '-' buttons.

The heater can be set in hour increments up to a maximum of 24 hours. When the timer is at 0, press the '-' key to set for 24 hours. When the timer is at 24, press the '+' key to set it to 0. When the desired time is displayed, press the Timer button or the Mode button to set/confirm the time.

When the heater reaches the time, it will emit an audible beep and the heater will switch on

USING YOUR HEATER

Operating Instructions

Your heater can also be scheduled to switch off after a certain amount of time.

When the Heater is in operation, press the Timer button [⌚] and then set the time by pressing the '+' or '-' buttons.

The heater can be set in hour increments up to a maximum of 24 hours. When the timer is at 0, press the '-' key to set for 24 hours. When the timer is at 24, press the '+' key to set it to 0. When the desired time is displayed, press the Timer button or the Mode button to set the time.

When the heater reaches the time, it will emit an audible beep and the heater will switch off.

- To cancel the timer at any point, press the On/Standby button.
- To check remaining time left on the timer, press the Timer button.
- Whilst scheduling a timer, the heater may switch on/off. This is normal and will not affect the timer operation.
- If the heater is unplugged, the timer will reset to 'off'.

USING YOUR HEATER

Operating Instructions

Remote Control

The settings of the remote control are the same as on the Control Panel.



	On/Standby
	Function key
+	“+” key
–	“–” key
	Timer key

**Please be aware the button in the top left circled red is non-operational.*

SAFETY FEATURES

Safety Protection Devices – This appliance is fitted with an overheat and tip over protection system.

1. Overheat Protection – the power to the heating elements will automatically cut off if the temperature of the heating element exceeds a certain limit. In the event of overheating, the heater will stop operating. Once the appliance has completely cooled, the appliance will then resume operating as normal.
2. If the ambient temperature of the room exceeds 50C, the heater will emit 10 long beeps, the display will flash 'FF'. The heater can only be restarted by turning it off and unplugging the heater, allowing the heater to cool, and then placing the heater back in standby mode.
3. Tip Over Switch – the appliance needs to be placed on a flat, firm and stable surface to ensure that the unit contacts the floor firmly and the internal tip over switch is level. In the event that the unit tips over or is placed on an uneven or very soft surface the appliance will not operate.

CLEANING AND CARE

WARNING: Electrical Shock Hazard.

Before you clean the appliance, disconnect the mains plug from the wall socket.

- Allow the appliance to cool down completely before cleaning.
- Do not immerse cord, plug or appliance in any liquid or allow moisture to come into contact with electrical parts.
- Clean the outer surface using a moist cloth and wipe over with a dry, soft cloth.
- Do not use harsh detergents, abrasives or spray on cleaners.
- Don't allow water to seep into the openings or come into contact with electrical connections.
- Allow sufficient drying time before operating again.
- Clean the air inlets and outlets regularly with a vacuum cleaner using the brush attachment (with a regular use, at least twice a year).
- When the appliance is not in use. We recommend that, the heater is re-packed in its original packaging and stored in a cool, dry place.

PROBLEM SOLVING

My appliance does not work when I turn it on:

1. Check that your appliance is plugged in and the power is turned on at the mains socket.
2. Try another mains socket.
3. Check the appliance is in an upright position.
4. Check that the thermostat setting has not been set too low.
5. If the appliance still doesn't work, do not try to repair it yourself.

If your appliance power is automatically cut off, follow the step below:

1. Unplug your appliance from the mains socket and allow it to completely cool down.
2. Inspect your appliance. Clean the air inlet and air outlet with a vacuum cleaner if necessary. If there are any signs of physical damage (e.g. melting, or burning of the case), do not attempt to use the appliance. Please leave all maintenance work to qualified personnel.
3. Plug in the appliance and switch it on again. If it cuts off again, move the appliance to a better ventilated location.

GUARANTEE AND CUSTOMER SERVICES

At Zanussi, we take all our customer feedback seriously.

**Feel free to contact our Customer Service Team on
0330 1230 597
who will be more than happy to assist you.**

This product is guaranteed for **12 months** from the date of the original purchase. If any defect arises due to faulty materials or workmanship, the faulty product must be returned to the place of purchase. Refund or replacement is at the discretion of the retailer.

The following conditions apply:

- The product must be returned to the retailer with the original proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide and any other instructions for use which are supplied.
- It must be used for domestic purposes only and for its intended use.
- This warranty does not cover wear and tear, damage, misuse or consumable parts.

This does not affect your statutory rights.

CONNECTION TO THE MAINS **SUPPLY**

 
This appliance is designed to operate from a mains supply of 220-240V~50Hz.

Check that the voltage marked on the product corresponds with your supply voltage.

How to change the fuse

1. Slot the end of a screwdriver into the recess in the fuse holder of the plug.
2. Pull the fuse holder upwards until free of the plug and slide the fuse out.
3. Replace the fuse and replace fuse holder, pushing down until locked into place.

Important: Only ever use a 13 amp fuse.

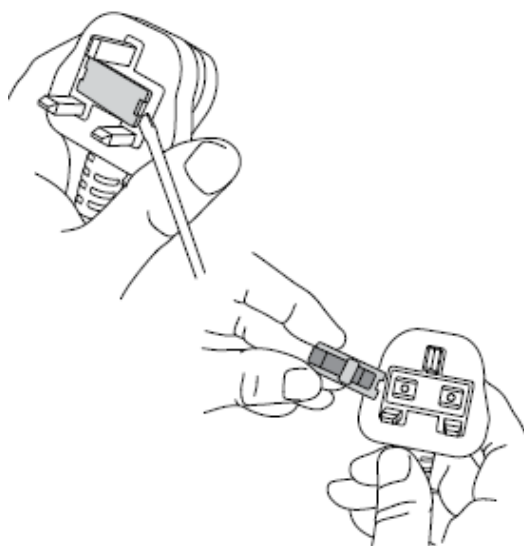

SPECIFICATION

Model number	ZOFR5005 (B)
Rated voltage	220V - 240V ~ 50Hz
Power consumption	2300W
Product dimensions (CMS)	(H)65 x (W)28 x (D)50.5

Information requirements for electric local space heaters					
Model number	ZOFR5005 (B)				
Item	Symbol	Value	Unit	Item	Unit
Heat output				Type of heat output/room temperature control	
Nominal heat output	P _{nom}	0.992	kW	Single stage heat output and no room temperature control	No
Minimum heat output (indicative)	P _{min}	0.946	kW	Two or more manual stages, no room temperature control	No
Maximum continuous heat output	P _{max,c}	0.992	kW	With mechanic thermostat room temperature control	No
				With electronic room temperature control	Yes
Power consumption				Electronic room temperature control plus week timer	No
In off mode	P _o	N/A	W	Electronic room temperature control plus day timer	No
In standby mode	P _{sm}	0.22	W	Other control options (multiple selections possible)	
In idle mode	P _{idle}	0.26	W	Room temperature control, with presence detection	No
In network standby	P _{ns}	N/A	W	Room temperature control, with open window detection	No
Standby mode with display information or status			No	Distance control option	No
Seasonal space heater energy efficiency in active mode	η _{s,on}	91.5	%	Adaptive start control	No
				Working time limitation	Yes
				Black bulb sensor	No
				Self learning functionality	No
				Control accuracy	No
Contact details	ZANUSSI is a registered trademark used under license from AB Electrolux(publ). Made by Product Care Trading Ltd, Unit 1 Green Bank Business Park, Swan Lane, Hindley Green, Wigan, WN2 4AY, United Kingdom / Product Care (Ireland) Ltd, Unit 3D North Point House, North Point Business Park, New Mallow Road, Cork, T23 AT2P, Ireland.				

NOTES

 
NOTES

ZANUSSI

ZANUSSI is a registered trademark used under license from AB Electrolux (publ). Made by Product Care Trading Ltd, Unit 1 Green Bank Business Park, Swan Lane, Hindley Green, Wigan, WN2 4AY, United Kingdom / Product Care (Ireland) Ltd, Unit 3D North Point House, North Point Business Park, New Mallow Road, Cork, T23 AT2P, Ireland.

For Customer Services & Spare Parts please call: **0330 1230 597**

Or visit us at **zanussicomfortandoutdoors.com**

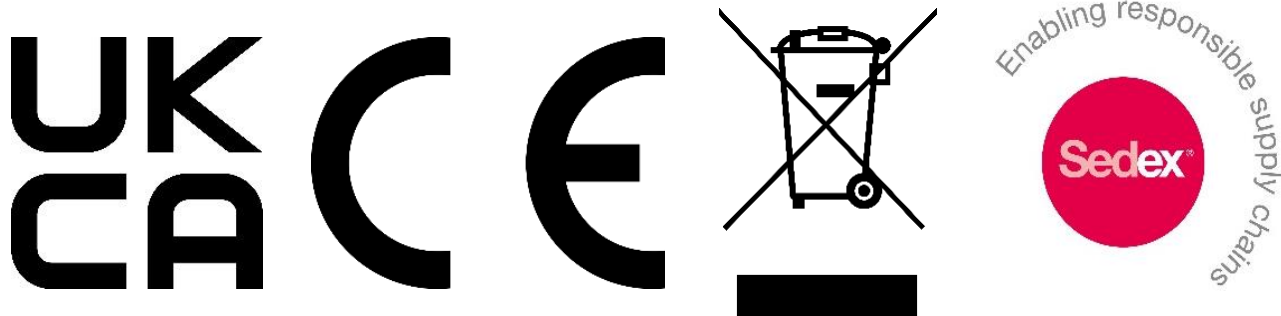

The 'whee bin' symbol is known as the 'Crossed-out whee bin Symbol'.

When this symbol is marked on a product/batteries, it means that the product/batteries should not be disposed of with your general household waste. Only discard electrical/electronic/battery items in separate collection schemes, which cater for the recovery and recycling of materials contained within. Your co-operation is vital to ensure the success of these schemes and for the protection of the environment. For your nearest disposal facility, visit www.recycle-more.co.uk or ask in store for details.

SEDEX – Connecting businesses and their global suppliers to share ethical data and enabling improvement in ethical performance. Visit www.sedex.org.uk for further information.

We reserve the right, due to possible changes to design, to alter the instruction manual without prior notice.

Revision 3.1