 


ZANUSSI

Portable 3in1 Air Conditioner (local air conditioners), Dehumidifier & Air Cooler

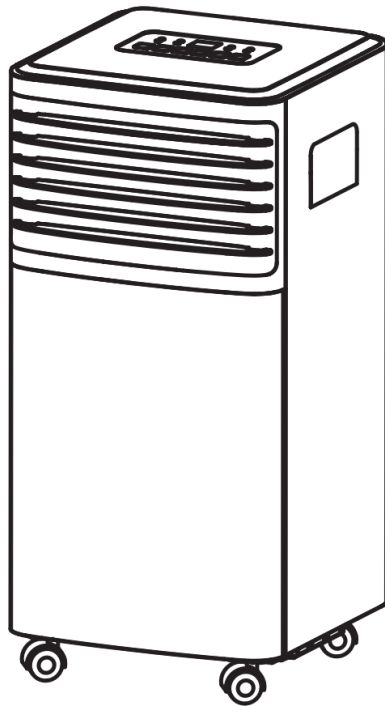

**Model Number:
ZPAC7001 / ZPAC7001B**

Product only suitable for well insulated spaces or occasional use

**PLEASE RETAIN
FOR FUTURE REFERENCE**

CONTENTS

	Page(s)
Safety Instructions	3 - 6
Electrical Safety	7
Battery Warnings	8 - 9
Replacing the Battery	10
Feature Diagram	11
Control Panel Diagram	12
Installing your Air Conditioner	13 - 15
Using your Air Conditioner	16 - 24
Draining your Air Conditioner	25 - 27
Cleaning your Air Conditioner	28
Start/End of Season Operations	29
Troubleshooting	30
Guarantee and Customer Services	31
Spare Parts	32
Specification	33
Notes	34 - 35

Safety Instructions

Important note: Please read this booklet before installing and switching on this appliance. The manufacturer assumes no responsibility for incorrect installation and usage as described in this booklet.

- This model uses natural refrigerant gas as part of its cooling system. This gas is known as R290 (Propane) and is environmentally friendly but can be combustible. Care should therefore be taken when handling or transporting the product to ensure that none of the refrigeration circuit components are damaged.
- Do not obstruct ventilation openings on the appliance and never insert your finger or any other object into the air outlet.
- Do not cover the appliance or place any object on the control panel.
- The appliance must not be placed or rested on its power cord.
- Do not use adaptors or extension leads when connecting the appliance to the electrical power supply.
- Do not use the appliance if the plug is damaged.
- Do not pull, twist or damage the power cable.
- Do not plug-in or un-plug the appliance with wet hands to prevent electrical shock.
- Always store the unit in an upright position in order to maintain the compressor working in a proper condition.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.

Safety Instructions

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This appliance is designed to be used by adults, do not allow children to play with the appliance.
- The appliance is intended for residential use only.
- When defrosting and cleaning the appliance, do not use any tools other than those recommended by the manufacturing company.
- The appliance must be installed, used and stored in an area that is greater than 8 m².
- The appliance must be placed in an area without any continuous sources of ignition (for example: open flames, gas or electrical appliances in operation).
- R290/R32 is a refrigerant gas that complies with the European directives on the environment. Do not puncture or damage any part of the refrigerant circuit.
- If the appliance is installed, operated or stored in a non-ventilated area, the room must be designed to prevent the accumulation of refrigerant leaks.
- Individuals who operate or work on the refrigerant circuit must have the appropriate certification issued by an accredited organisation that ensures competence in handling refrigerants according to a specific evaluation recognized by associations in the industry.
- Maintenance and repairs that require the assistance of other qualified personnel must be performed under the supervision of an individual specified in the use of flammable refrigerants.
- Be aware that the refrigerants may not contain an odour.
- Compliance with national gas regulations shall be observed.
- The appliance shall be stored so as to prevent mechanical damage from occurring.

 
Safety Instructions

- **WARNING:** System contains refrigerant under very high pressure. The system must be serviced and repaired as recommended by the equipment manufacturer and by qualified persons only.
- Do not use in the following locations: -
 - Next to a source of fire.
 - An area where oil is likely to splash.
 - An area exposed to direct sunlight.
 - An area where water is likely to splash.
 - Near a bath, shower or a swimming pool.
 - In a greenhouse.
 - An area where flammable gasses or liquids are present.
- Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer
- The appliance shall be stored in a room without continuously operating ignition sources (for example: open flames, an operating gas appliance or an operating electric heater.)
- Do not pierce or burn.
- Be aware that refrigerants may not contain an odour
- Servicing shall be performed only as recommended by the manufacturer.
- The appliance shall be stored in a well-ventilated area where the room size corresponds to the room area as specified for operation.
- All working procedure that affects safety means shall only be carried by competent persons.
- Transport of equipment containing flammable refrigerants
 - Compliance with the transport regulations
- Marking of equipment using signs
 - Compliance with local regulations
- Disposal of equipment using flammable refrigerants
 - Compliance with local regulations

Safety Instructions

- Storage of equipment/appliances
Equipment should be stored in accordance with the manufacturer's instructions.
- Storage of packed (unsold) equipment
Storage package protection should be designed so that mechanical damage to the equipment inside the package will not cause a leak of the refrigerant charge. The maximum number of units that can be stored together depends on local regulations.


Electrical Safety

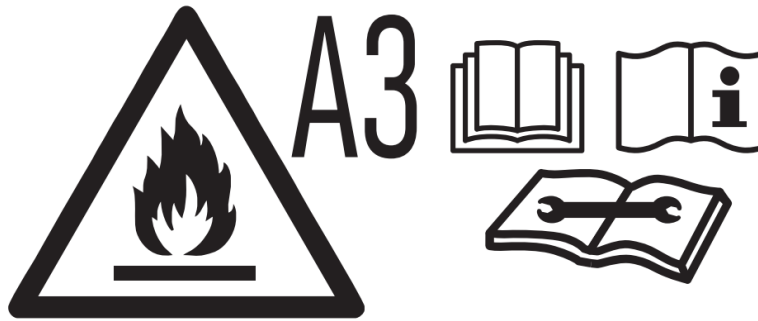

Caution, risk of fire

THIS APPLIANCE MUST BE PLUGGED INTO AN EARTHED SOCKET

 - The appliance shall be installed in accordance with national wiring regulations (fuse type T3.15A 250VAC)
- Before switching on, make sure that the voltage of your electricity supply is the same as that indicated on the rating plate. This product is designed to operate on 220 – 240V AC; 50Hz. Connection to any other power source may damage the unit.
- This product may be fitted with a non rewireable plug. If it is necessary to change the fuse in the plug, the fuse cover must be refitted. If the fuse cover becomes lost or damaged, the plug must not be used until a suitable replacement is obtained.
- If the plug has to be changed because it is not suitable for your socket, or becomes damaged in any way, it should be cut off and an appropriate plug fitted. This should be carried out by a qualified electrician. The plug removed must be disposed of safely, as insertion into a 13 Amp socket is likely to cause an electrical hazard.

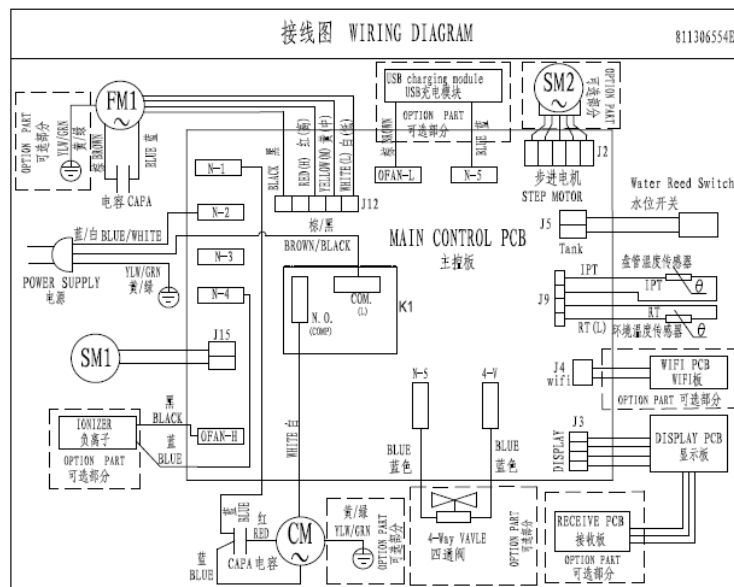

Battery Warnings

This appliance comes with two alkaline battery fitted into the remote.

- Incorrect use of batteries may result in fire, explosion, leakage of dangerous substances, or other hazards.
- Do not throw batteries into the fire and do not expose them to high temperatures.
- Do not open, deform or short-circuit the batteries, or the contained chemicals can leak out of them.
- Do not try to recharge batteries. Recharging is only allowed for batteries which are marked as “rechargeable”. There is a danger of explosion!
- Regularly check the batteries as leaking chemicals can cause heavy damage to the device. When dealing with damaged or leaking batteries, exercise a particular caution.
- Risk of chemical burns! Wear protective gloves.
- Chemicals escaping from a battery can cause skin irritation.
- In case of contact with skin, rinse with plenty of water.
- In case of contact with eyes, do not rub your eyes, but rinse with water and immediately visit a doctor.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- Different types of batteries or accumulators as well as new and old batteries must not be used together.

Battery Warnings

- When inserting the battery, pay special attention to the correct polarity. Wrong polarity can cause risk of bursting.
- Remove the batteries from the unit if you are not going to use it for a long time or if you want to store it.
- Insert the batteries according to the polarity.
- Do not allow children to replace batteries without supervision by an adult.
- Always choose the right size and the right battery type for the intended use.
- Clean the battery contacts and the contacts of the equipment before installing the batteries.
- Remove used up batteries immediately.
- Do not dismantle the batteries.
- If the battery compartment does not close securely, do not use the remote control anymore and keep it away from children.
- Please avoid extreme conditions and temperatures which can adversely affect the batteries, e.g. placing them on radiators/direct solar.
- The connection terminals must not be short-circuited.
- Please dispose of or recycle the remote-control batteries according to local government guidelines



CAUTION: Batteries are a chemical burn and choking hazard.
Keep batteries away from children.

Replacing the Battery

 
This appliance comes with 2 AAA (1.5V) batteries which are to be fitted into the remote control.



CAUTION: Batteries are a chemical burn and choking hazard. Keep batteries away from children.


- Ensure that the battery compartment is always completely secure. If the battery compartment does not close securely, stop using the remote, remove the batteries, and keep it away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention. Dispose of cells properly and keep away from children. Even used cells may cause injury.
- Please dispose of or recycle the remote control batteries according to municipal or provincial laws.
- Do not throw batteries into the fire and do not expose them to high temperatures.
- Do not try to recharge the batteries.
- When inserting the battery, pay special attention to the correct polarity.
- Remove the batteries from the unit if you are not going to use it for a long time or if you want to store it.

To insert the batteries into the remote control or replace the batteries, follow the instructions below:

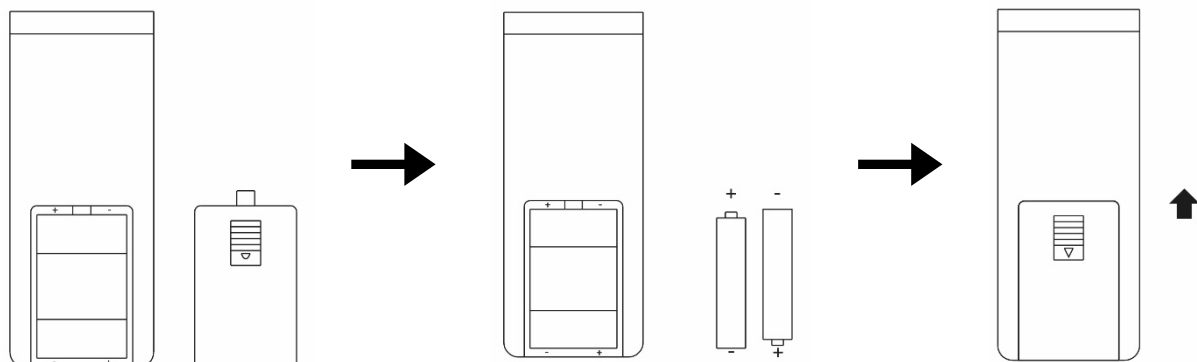

1. Remove the cover from the back of the remote.
2. Insert 2 AAA (1.5V) batteries as shown above.
3. Replace the cover onto the back of the remote.

 FEATURE DIAGRAM

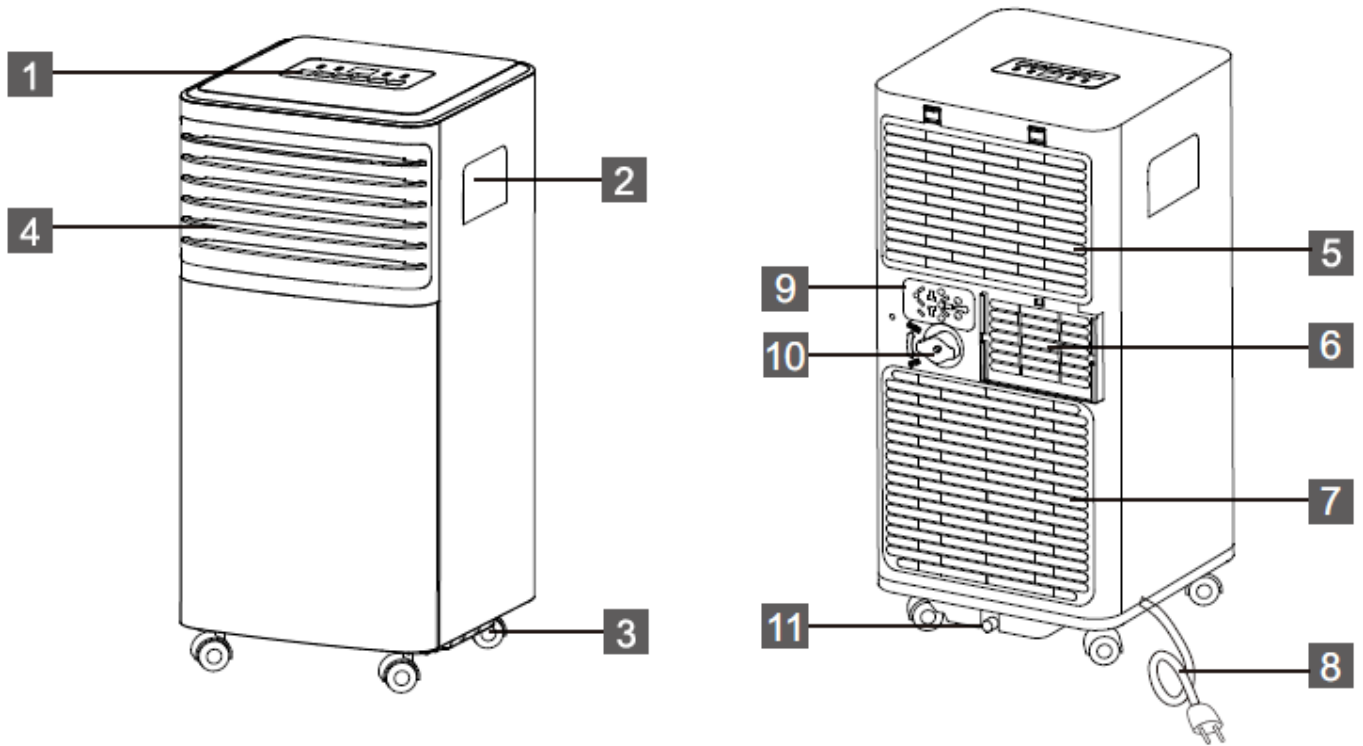


Front

1. Control panel
2. Handle (both sides)
3. Castors
4. Deflector

Rear

5. Intake grill
6. Air outlet grill
7. Intake grill
8. Power cable
9. Plug fixer
10. Condensation drain
(Dehumidification)
11. Condensation drain

 CONTROL PANEL DIAGRAM

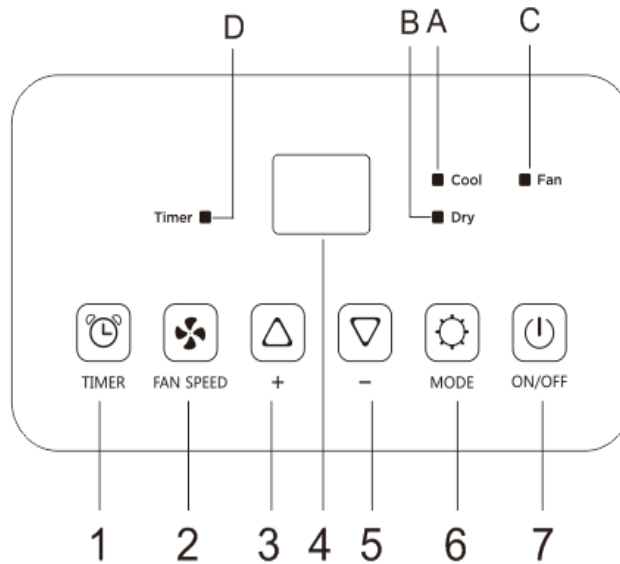

Front

1. Timer button
2. Fan button
3. Increase button
4. Display screen
5. Decrease button
6. Mode button
7. ON/OFF button

Rear

- A. Cool mode
- B. Dehumidify mode
- C. Fan mode
- D. Timer mode

 
 
 
 
INSTALLING YOUR AIR CONDITIONER

Exhausting Hot Air

In the COOL mode the appliance must be placed close to a window or opening so that the warm exhaust air can be ducted from outside.

First position the unit on a flat floor and make sure there is a minimum of a 45cm (18inch) clearance around the unit and ensure this is within the vicinity of a plug socket.

1. Extend either side of the hose (Fig. 1) and screw on the hose inlet (Fig. 2).
2. Extend the other side of the hose and screw it into the hose outlet (Fig. 3)
3. Install the hose inlet into the unit (Fig. 4)
4. Affix the hose outlet into the window seal kit

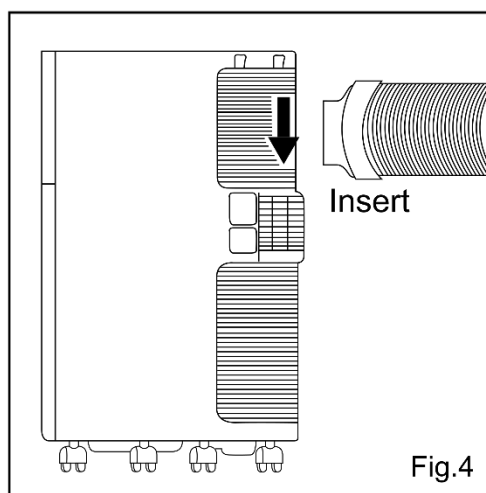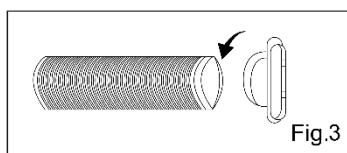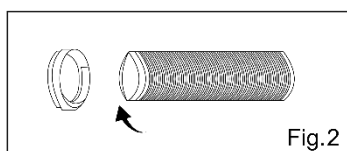
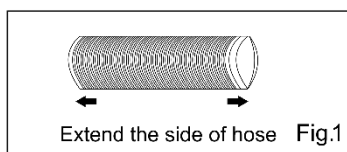


Your window seal kit has been designed to fit most standard vertical and horizontal windows; however, it may be necessary for you to modify some aspects of the installation procedures for certain types of windows.

INSTALLING YOUR AIR CONDITIONER

Location

  - The unit should be placed on firm ground to help minimise noise and vibration. For safe and secure positioning, place the unit on a smooth, level floor which is strong enough to support the unit.
- This unit has castors to aid placement but it should only be rolled on smooth, flat surfaces. Use caution when rolling on carpeted and wooden surfaces. Do not attempt to roll the unit over other objects.
- The unit must be placed within reach of a properly rated grounded socket.
- Never place any obstacles around the air inlet or outlet of the unit.
- Allow at least 45cm of space around, above and away from the wall to ensure the appliance works efficiently.
- The hose can be extended but it is best to keep it to the minimum length required. Also ensure that the hose does not have any sharp bends or sags.

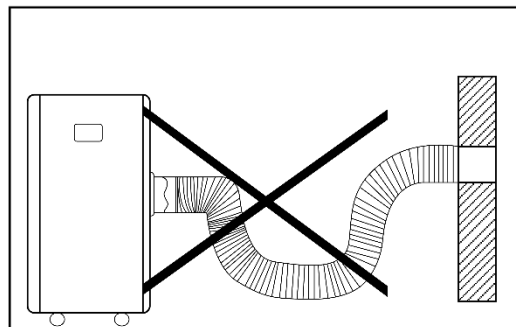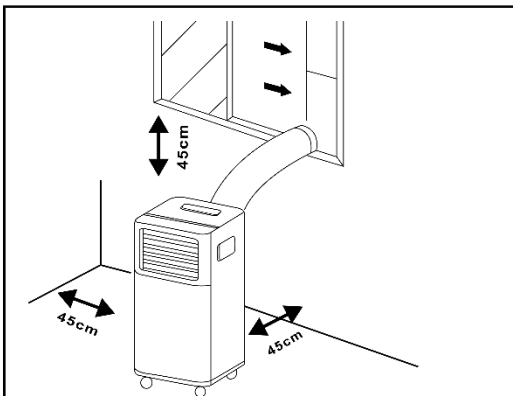

INSTALLING YOUR WINDOW KIT

Your Zanussi Air Conditioner has been supplied with a Window Sealing Kit. The kit is suitable for use on UPVC windows that open internally or externally with 3 sides. It is not suitable for middle opening windows such as skylights, or wooden frames.

 
The maximum aperture dimensions of the kit is 400cm. To measure the frame on the open sides only.

To install this window seal, whilst the window is closed, apply the Velcro tape on both the inside frame of the window, and the frame of the window as shown by the dotted lines. Ensure that the tape is not clamped or in a position it will become clamped.

Apply the long side of the seal kit to the outside frame, and the short side to the inside window.

Open the window, and ensure there is a sufficient seal.

Open the zip, and thread your air conditioner hose through the opening, then tighten the zip.

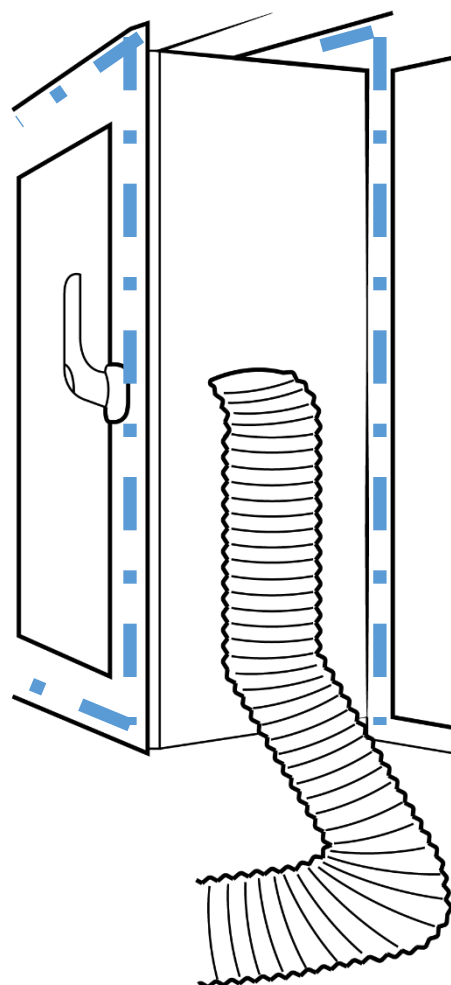

USING YOUR AIR CONDITIONER

Operating from the control panel

The control panel is on top of the appliance and it enables you to manage functions without using the remote control. However, to use the appliance to its full potential you are advised to use the remote control.

To turn the appliance on plug it into a mains socket and the appliance will enter standby mode.

Press the ON/OFF button to turn the appliance on, the last function that was active when the appliance was turned off will appear.

“Never turn the appliance off by unplugging it from the mains. Always press the ON/OFF button, then wait for a few minutes before unplugging. This allows the appliance to perform a cycle of checks to verify the operation”

COOL Mode

Ideal for hot humid weather when you need to cool and dehumidify the room.

To set this mode correctly:

- Press the MODE button several times until the COOL mode indicator light appears.
- Select the desired temperature by pressing the INCREASE and DECREASE buttons until the value you want is displayed. The temperature ranges from 18-32°C (64-90°F) in this mode.
- Select the required fan speed by pressing the FAN button.
- There are 2 fan speeds to choose from: “F2” (High) & “F1” (Low)

F2 HIGH: To achieve the desired temperature as fast as possible.

F1 LOW: Lowers the noise of the appliance.

The most suitable temperature for a room during the summer varies from 24-27°C. You are recommended not to set a temperature much lower than the outdoor temperature, this will cause unnecessary power consumption.

USING YOUR AIR CONDITIONER

FAN Mode

When using the appliance in this mode, the air hose does not need to be attached.

To set this mode correctly:

- Press the MODE button several times until the FAN mode indicator light appears.
- Select the required fan speed by pressing the FAN button.
- There are 2 fan speeds to choose from: High & Low

 = HIGH SPEED  = LOW SPEED

As figured here:



 
DRY Mode

Ideal to reduce room humidity (good for use in spring, autumn, damp rooms and rainy periods)

When in DRY mode the appliance should be prepared in the same way as for COOL mode, with the air exhaust hose attached to enable the moisture to be discharged outside.

To set this mode correctly:

- Press the MODE button several times until the DRY mode indicator light appears,  will also appear on the display screen. (as seen below)
- In this mode, the fan speed is automatically selected by the appliance and can not be set manually.

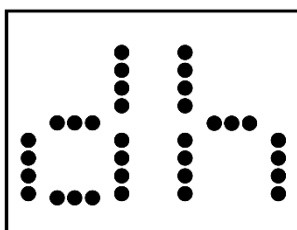


USING YOUR AIR CONDITIONER

Switching the unit of temperature


Hold both the INCREASE and DECREASE buttons at the same time until the appliance beeps (approx. 5 seconds). Once the appliance has beeped you will be able to change the unit of temperature.

For example:

 Before change and when in cool mode the screen will display like this.

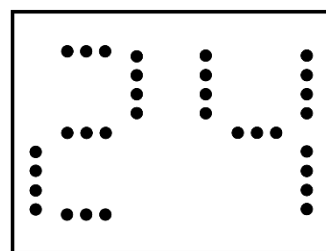

 After the change the screen will then display like this.

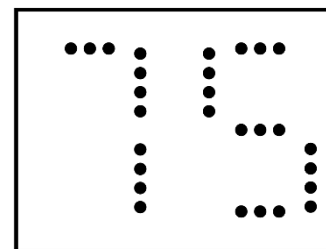

Setting the timer

The timer can be used to schedule the start up or shutting down of the appliance.

Programming start up:

- Turn on the appliance and select the mode, temperature and fan speed you desire, then turn off the appliance.
- Press the TIMER button and the screen will display 1-24 hours.

USING YOUR AIR CONDITIONER

 
- Continue to press the TIMER button until the desired time is displayed. Wait for approximately 5 seconds and then the timer will then be active. Only the TIMER mode indicator light should be on.
- Press either the TIMER or the ON/OFF button and the timer will be cancelled. The TIMER mode indicator light will then go off.

Programming shut down:

- When the appliance is running press the TIMER button, the screen will display 1-24 hours.
- Continue to press the TIMER button until the desired time is displayed. Wait for approximately 5 seconds and then the timer will be active. The TIMER mode indicator light should appear.
- Press either the TIMER button and the timer will be cancelled. The TIMER mode indicator light should then go off.


USING YOUR AIR CONDITIONER

Operating from the remote control

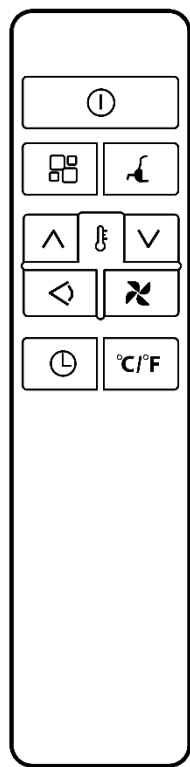

	On/Off button
	Mode button
	Night Mode button
	Increase button
	Decrease button
	Oscillating button
	Fan button
	Timer button
	Unit Switch button

 - Point the remote control at the receiver on the appliance.
- The remote control must be no more that 7 meters away from the appliance (without obstacles between the remote control and the receiver).
- The remote control must be handled with extreme care to ensure continuous usage. Do not drop or expose the remote to direct sunlight or sources of heat. If the remote stops working, please remove and replace the batteries.

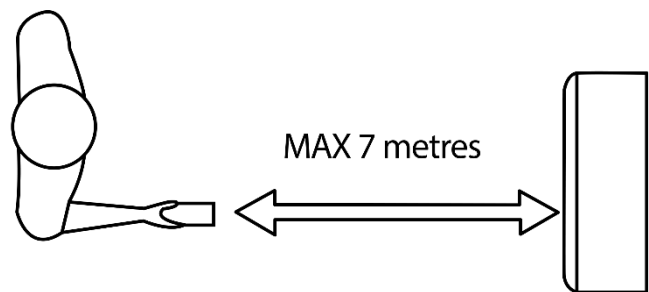

USING YOUR AIR CONDITIONER

 
COOL Mode, FAN Mode, DRY Mode, Setting the Timer

To correctly set these four modes/functions using the remote control, follow the same steps that are stated in the ***'Operating from the control panel'*** section of this manual but instead of pressing the buttons mentioned on the control panel press the corresponding buttons on the remote control.

Air Flow Direction

This appliance does not have an oscillation function, but air flow can be manually adjusted to the required direction.

-Select the desired direction of air flow by firstly manually setting the 4 front slats 'A' to the desired position, followed by the internal slat 'B' using the small lever on the right on the right .

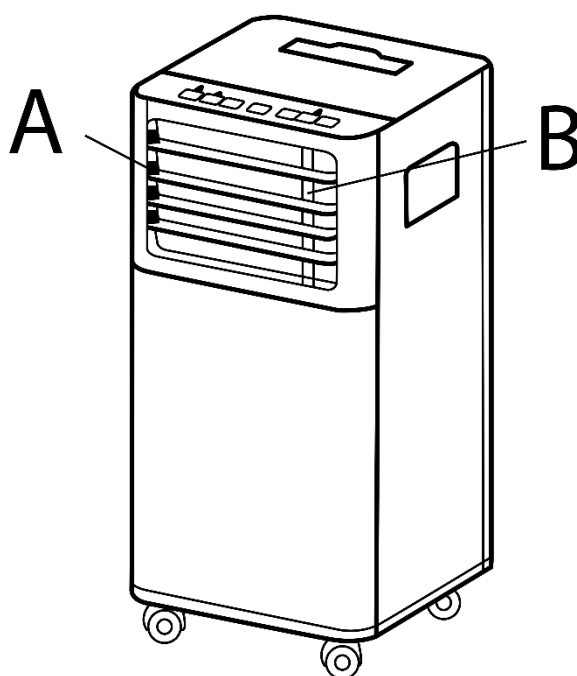

USING YOUR AIR CONDITIONER

Night Mode function

This function is useful for the night as it gradually reduces the operation of the appliance.

To set this function correctly:

- Select the COOL or HEAT mode.
- Press the NIGHT MODE button.

The appliance will then operate in the previously selected mode.

When in this function the display screen will reduce in brightness and the room will be maintained at the optimum temperature without excessive fluctuations in temperature or humidity with silent operation. The fan speed will always be low so you are not disturbed by excessive noise while you sleep.

 
When in COOL mode, the selected temperature will increase by 1°C (1°F) per hour over a 2-hour period. This new temperature will then be maintained for the next 6 hours. After 6 hours the appliance will turn itself off.

When the appliance is in the FAN mode, the NIGHT MODE function cannot be set.

This function can be cancelled at any time during operation by pressing either the NIGHT MODE, MODE or FAN SPEED button.

Switching the unit of temperature

When the appliance is in COOL mode, press the UNIT SWITCH button and this will allow you to change the unit of temperature from °C to °F and vice versa, as seen below.



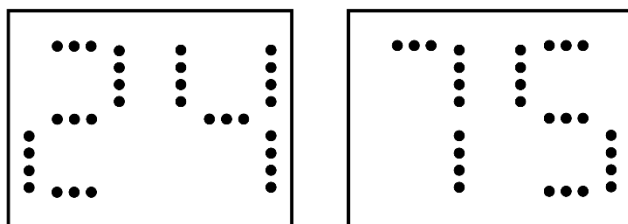


USING YOUR AIR CONDITIONER

Tips for correct use

To get the best out of your appliance, follow these recommendations:

   - If possible, close the windows and doors in the room you want to be air conditioned (Fig 21). When installing the appliance semi-permanently you should leave a door slightly open (as little as 1cm) to guarantee correct ventilation.
- Protect the room from direct exposure to the sun by partially closing curtains and/or blinds to make the appliance much more economical to run (Fig 22).
- Never rest objects of any kind on the appliance.
- Do not obstruct the air intake and outlet (Fig 23). Ensure the grills are left free.
- Make sure there are no heat sources within the room.
- Never use the appliance in very damp rooms (e.g. Laundry Rooms).
- Never use the appliance outdoors.
- Make sure the appliance is standing on a level surface. If necessary, place the castor locks under the front wheels.

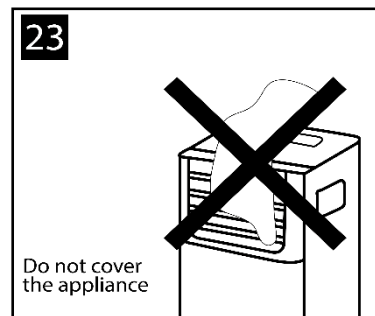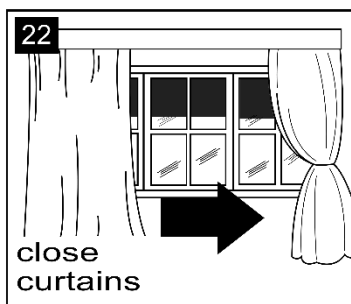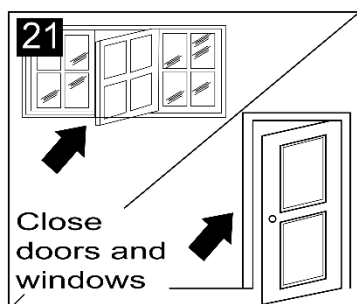

USING YOUR AIR CONDITIONER

Self-Diagnosis

This appliance has a self-diagnosis system to help identify a number of malfunctions.

The following error messages will be displayed if the appliance has identified a malfunction.

DISPLAY	WHAT SHOULD YOU DO?
PROBE FAILURE 	If this is displayed please contact our Customer Service team
FULL TRAY 	Empty the internal safety tray, following the instructions in the “End of Season Operations” section of this Instruction Manual

DRAINING YOUR AIR CONDITIONER

 
Water drainage method

When there is excess water condensation inside the unit, the appliance will stop running and 'Ft' will display (FULL TRAY as mentioned in the self diagnosis). This indicates that water needs to be drained out using one of the following procedures.

Manual Draining (Fig. 24)

Water may need to be drained in high humidity areas.

1. Unplug the unit from the power source.
2. Place a drain pan under the lower drain plug (see Fig. 24).
3. Remove the lower drain plug
4. Water will drain out and collect in the drain pan (drain pans not supplied).
5. After all the water has been drained out, replace the lower drain plug firmly.
6. Plug the unit back into the power source and turn it back on.

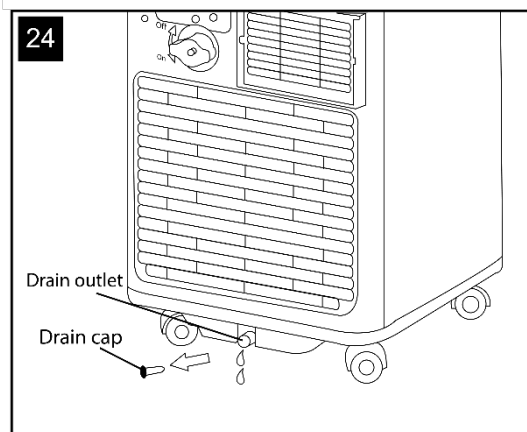


Continuous Draining (Fig. 25)

While using the unit in the dehumidifier mode, it is recommended to use this method of draining.



1. Unplug the unit from the power source.

DRAINING YOUR AIR CONDITIONER

 2. Remove the drain plug. When removing the plug some residual water may spill out, so ensure you have a pan to collect the water.
3. Connect the supplied drain hose to the drain outlet.
4. The water can be continuously drained through the hose into a floor drain or bucket.
5. Plug the unit back into the power source and turn it back on.

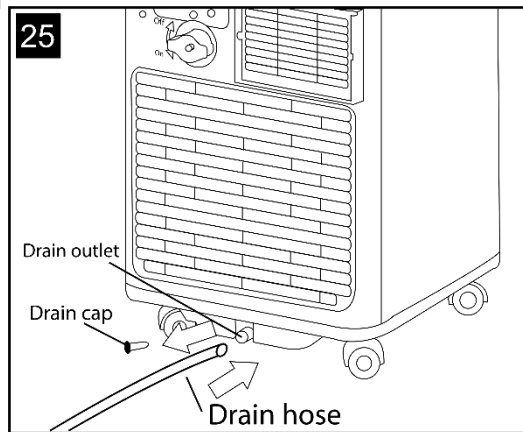

  NOTE – Please ensure that the height of and the section of the drain hose should not be higher than the drain outlet , or the water tray may not be drained (Fig. 26 and 27).

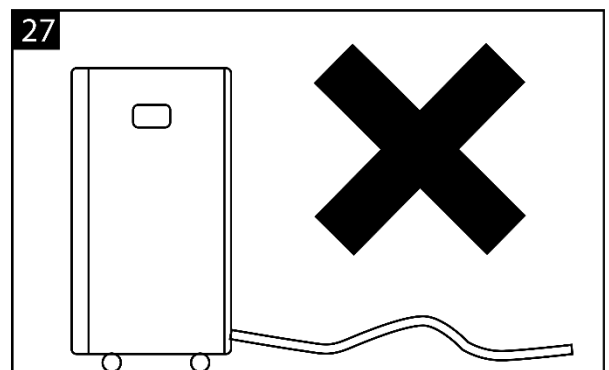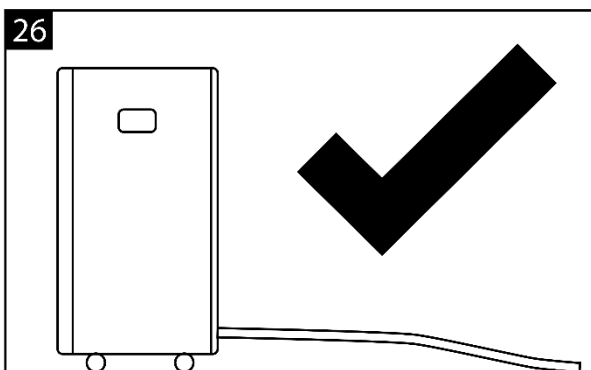


DRAINING YOUR AIR CONDITIONER


Middle drainage

When the unit is running in DEHUMIDIFY mode, you can chose to drain the appliance through the middle drainage hole. This is done as follows:

 1. Unplug the unit from the power source
2. Remove the drain plug (Fig A). While doing this some residual water may spill out, so ensure you have a pan to collect the water.
3. Connect the supplied drain hose to the middle drainage outlet. (Fig B)
4. The water can be continuously drained through the hose into a floor drain or bucket.
5. Plug the unit back into the power source and turn it back on.

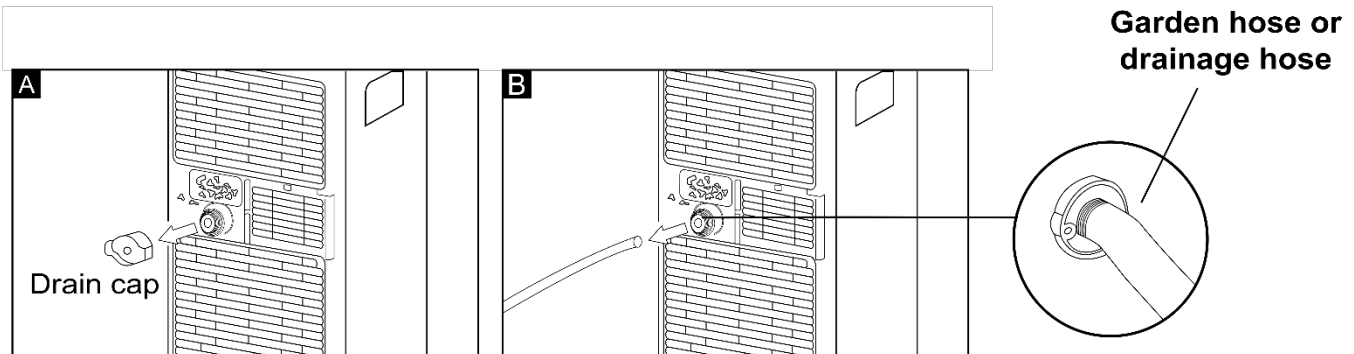

 NOTE – Please ensure that the height of and the section of the drain hose should not be higher than the drain outlet , or the water tray may not be drained.

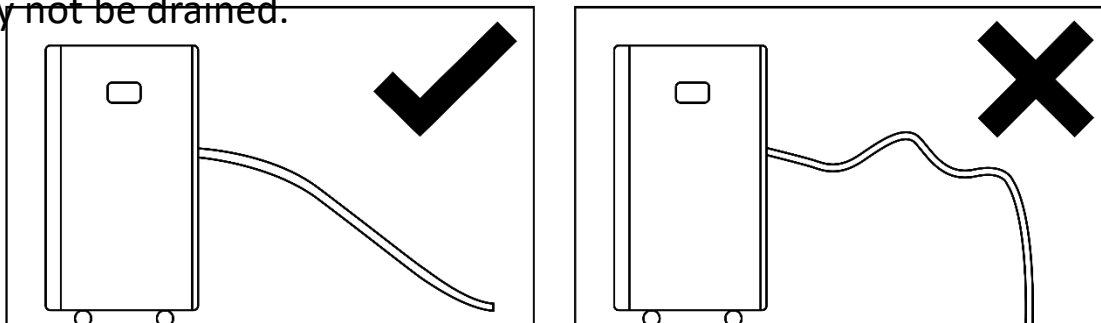

CLEANING YOUR AIR CONDITIONER

Before any cleaning or maintenance, turn the appliance off by pressing the ON/OFF button on either the control panel or remote control, wait for a few minutes and then unplug the appliance from the mains socket.

Cleaning the cabinet

 
You should clean the appliance with a slightly damp cloth and then pat dry with a dry cloth.

- Never wash the appliance with water it could be dangerous.
- Never use petrol, alcohol or solvents to clean the appliance.
- Never spray with insecticide or similar liquids.

Cleaning the air filters

To keep your appliance working efficiently, you should clean the filter every week of operation.

You can remove the evaporator filter as seen below.

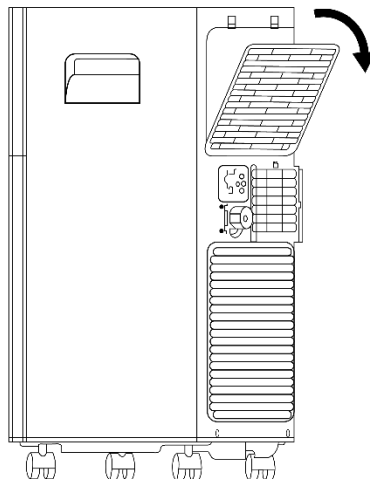

Use a vacuum cleaner to remove dust accumulation from the filter. If it is very dirty, immerse the filter in warm water and rinse it several times, the water should never be hotter than 40°C (104°F). After washing, leave the filter out to dry and then re-attach the intake grill to the appliance.

START/END OF SEASON OPERATIONS

Start of season checks

Make sure the power cable and plug are undamaged and the earth system is efficient.

Follow the installation instructions within this manual precisely.

End of season operations

To empty the internal circuit completely of water, remove the cap and run all the water off into a pan.

When all the water has been drained, firmly put the cap back in place. Clean the filter and dry thoroughly before putting it back into the appliance.

Limit conditions

Temperature of room: 18-35°C (64-95°F) (Cooling)

Humidity of room: 30%RH ~ 80%RH

TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
The appliance does not come on	-There is no current -It is not plugged into the mains -The internal safety device has tripped	-Wait -Plug it into the mains -Wait 30 minutes and if the problem persists please contact our Customer Service
The appliance works for a short time only	-There are bends in the air exhaust hose -Something is preventing the air from being discharged	-Position the air exhaust correctly, keeping it as short and free of curves as possible. -Check and remove and obstacles obstructing the air discharge.
The appliance works but does not cool the room	-Windows, doors and/or curtains are open -There are heat sources in the room (oven, hairdryer etc.) -The air exhaust hose is detached from the appliance -The technical specification of the appliance is not adequate for the room in which it is located	-Close doors, windows and curtains, bearing in mind the "tips for correct use" given above -Remove the heat sources -Fit the air exhaust in the housing at the back of the appliance
During operation, there is an unpleasant smell in the room	-The air filter is clogged	-Clean the filter as described earlier within this instruction booklet
The appliance does not operate for about three minutes after restarting it	-The internal compressor safety device prevents the appliance from being restarted until three minutes have elapsed since it was last turned off	-Wait, this delay is part of the normal operation of the appliance
The following message appears on the display: PF/FT	-The appliance has a self-diagnosis system to identify a number of malfunctions	-See the SELF-DIAGNOSIS section of this booklet

GUARANTEE AND CUSTOMER SERVICES

This product is guaranteed for **12 months** from the date of the original purchase. If any defect arises due to faulty materials or workmanship, the faulty product must be returned to the place of purchase.

Refund or replacement is at the discretion of the retailer.

Refund or replacement is at the discretion of the retailer.

The following conditions apply:

- The product must be returned to the retailer with the original proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide and any other instructions for use which are supplied.
- It must be used for domestic purposes only and for its intended use.
- This warranty does not cover wear and tear, damage, misuse or consumable parts.

This does not affect your statutory rights.

Customer Services & Spare Parts:

Region	Contact	Website
UK & Northern Ireland	0330 1230 597	www.zanussicomfortandoutdoors.com
Ireland	1 800 938982	www.zanussicomfortandoutdoors.com

SPARE PARTS

To check the availability of the following spare parts, simply contact our friendly Customer Services team using the details provided at the bottom of this page.

Remote Control

Exhaust Hose

For Customer Services & Spare Parts please call **0330 1203 597**
Or visit us at www.zanussicomfortandoutdoors.com

SPECIFICATION

Model	ZPAC7001 / ZPAC7001B
Voltage	220 – 240V 50Hz
Rated Power Input	950W
Maximum Cooling Capacity	7000 BTU
Suitable Room Size	8-14 (m2)
Refrigerant	R290/0.16kg
Overall Size (W x H x D)	32 x 67 x 32 (cm)
Weight	22kg
Moisture Removal	0.8 L/hr
Operating Temperature	18°C - 35°C
Operating Humidity	30%RH ~ 80%RH

 
NOTES

NOTES

ZANUSSI

ZANUSSI is a registered trademark used under license from AB Electrolux (publ). Made under license by Product Care Trading Ltd, Unit 1, Green Bank Business Park, Swan Lane, Hindley Green, Wigan, WN2 4AY, United Kingdom / Product Care (Ireland) Ltd, Unit 3D North Point House, North Point Business Park, New Mallow Road, Cork, T23 AT2P, Ireland.

UK
CA

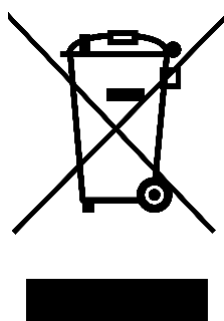

The 'wheellie bin' symbol is known as the 'Crossed-out wheellie bin Symbol'.

When this symbol is marked on a product/batteries, it means that the product/batteries should not be disposed of with your general household waste. Only discard electrical/electronic/battery items in separate collection schemes, which cater for the recovery and recycling of materials contained within. Your co-operation is vital to ensure the success of these schemes and for the protection of the environment. For your nearest disposal facility, visit www.recycle-more.co.uk or ask in store for details.

SEDEX – Connecting businesses and their global suppliers to share ethical data and enabling improvement in ethical performance. Visit www.sedex.org.uk for further information.

We reserve the right, due to possible changes to design, to alter the instruction manual without prior notice.

Revision 3.6